KS600 introduction



Adjust button
Turn to select , Press to check



Support 1920*1080 or 1920*1200

Quick setting button

ADJUST

Inputting signals









Sending card is optional

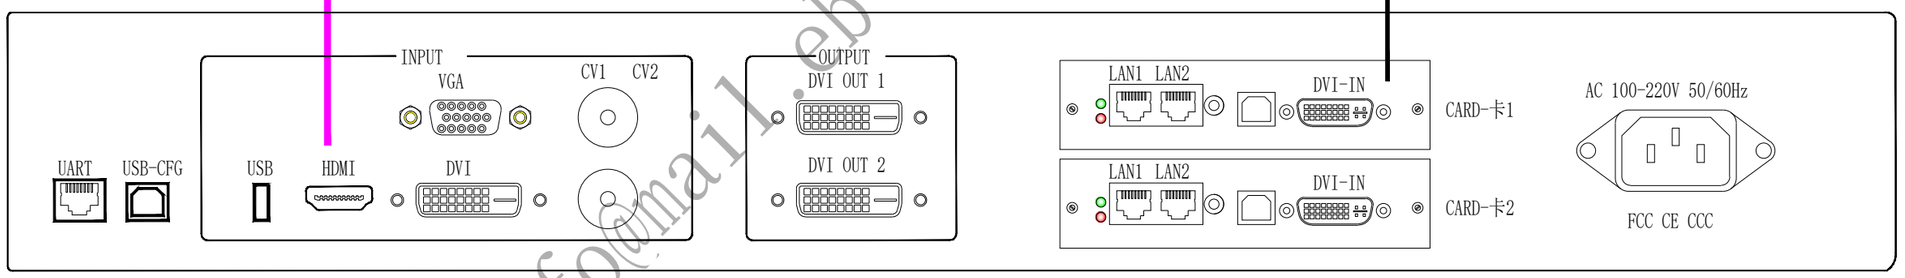

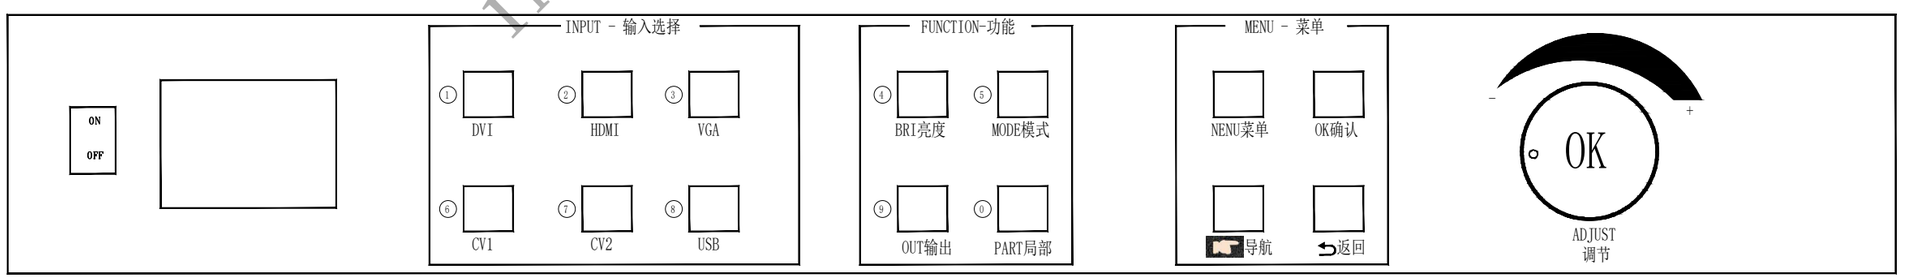

info@mail.eb-leddisplay.com

KS600 introduction
Change Chinese to English



△Chinese MENU button



Rotate ADJUST to choose
and press ADJUST to check.

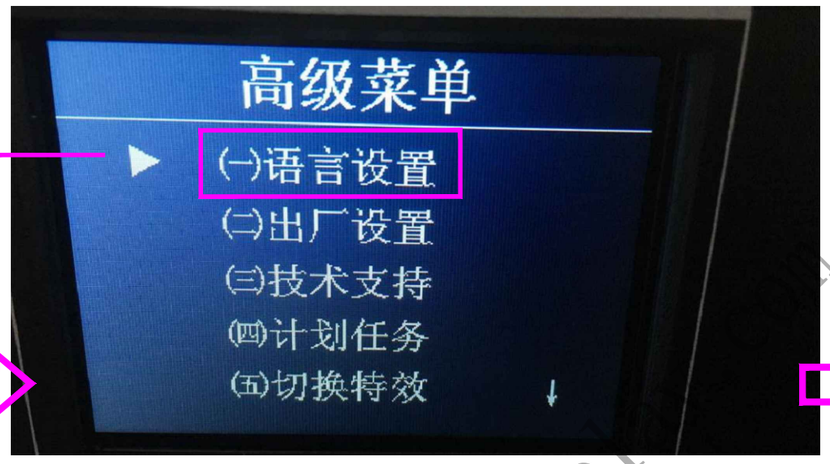

△Rotate ADJUST to choose
and press ADJUST to check.

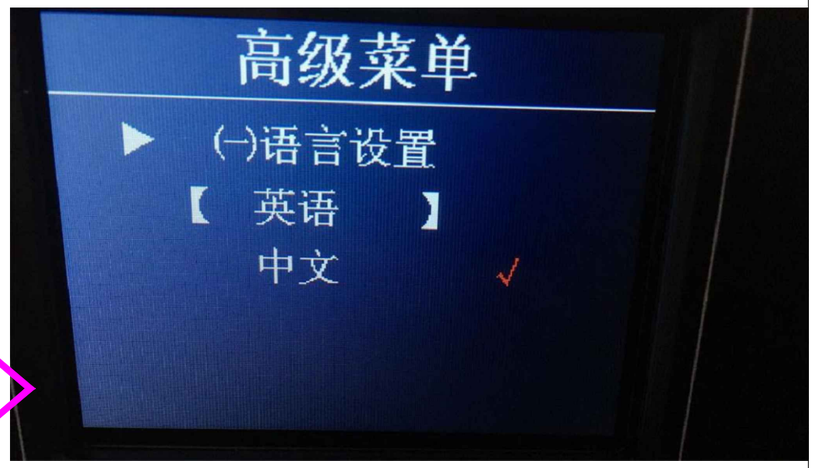

△Rotate ADJUST to choose
and press ADJUST to check.



English

△Rotate ADJUST to choose
and press ADJUST to check.



△Press 

to return Main Menu.

Main Menu		
Scaler	Zoom	Save
Load	Format	More

info@mail.eb-leddisplay.com

KS600 introduction

Scaler

Image Para	
H Pos	0
V Pos	0
H Size	1920
V Size	1080

Step
x8
Finger change

△ Set LED display size



change step x1, x8 ,x20

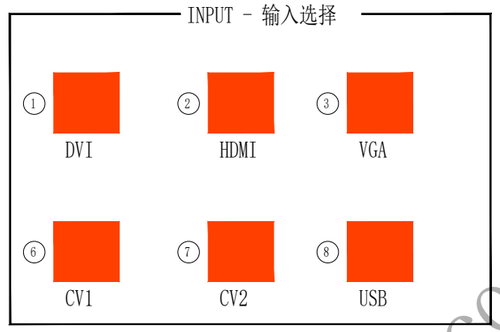

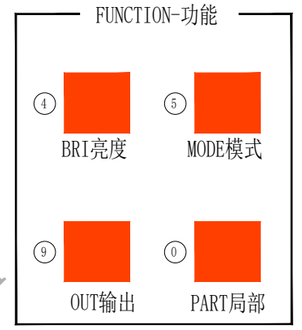

Finger change

Fill the right number
(1,2,3,4,5,6,7,8,9,0)

Zoom

Zoom Para	
H Pos	0
V Pos	0
H Size	1920
V Size	1080

Step
x8
Finger change

△ Part display area

info@mail.eb-leddisplay.com

Save

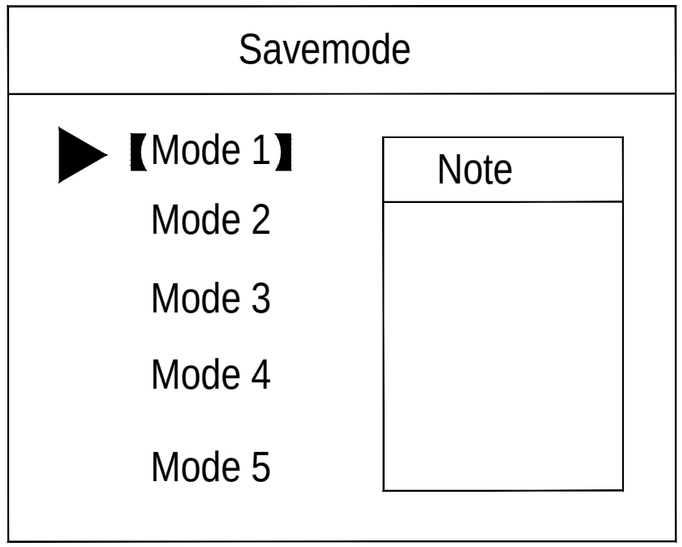

Red means has mode saved

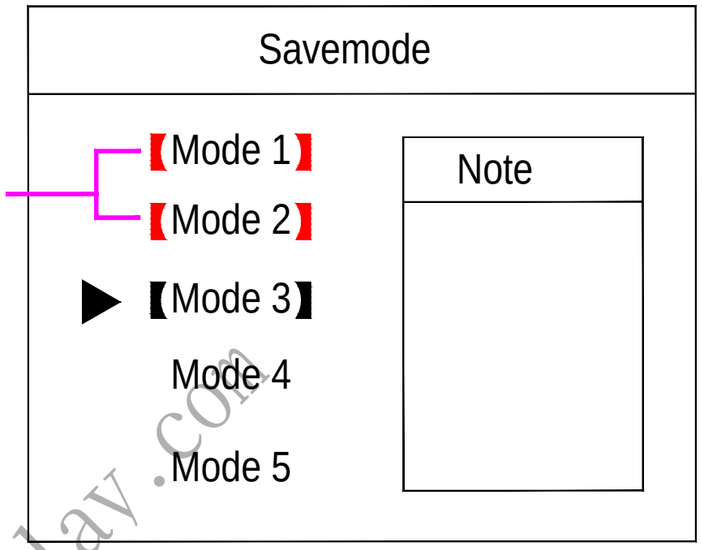

△ Save your settings as Mode
The KS600 has 5 Modes for
your choice.

Load

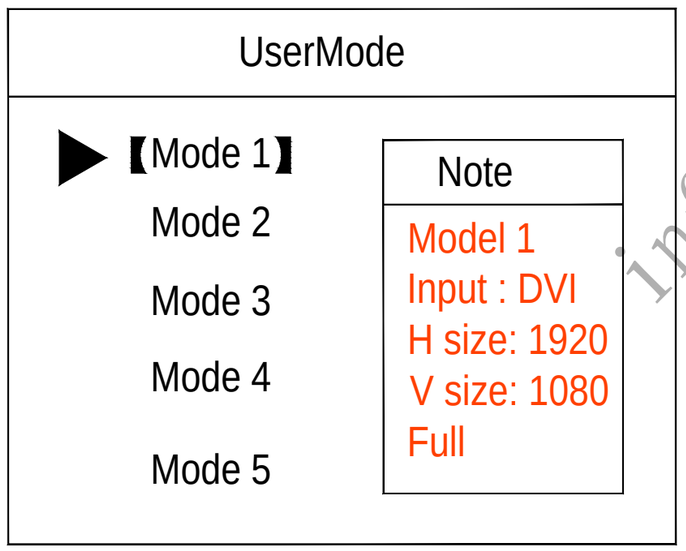

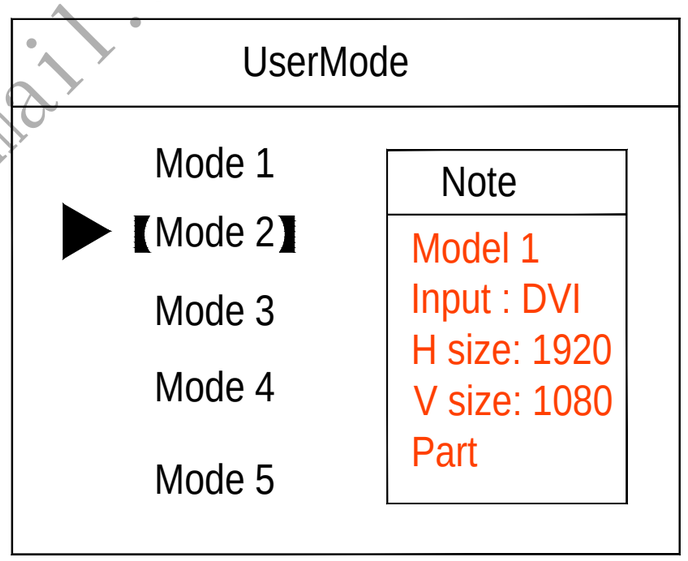

△ Use your saved Model

info@mail.eb-leddisplay.com

Format

Out format

▶【1920*1080 】

1920*1200

Defined

△ Select DVI-OUT 1 and DVI OUT 2 output resolution



More

Advance

▶ 1. Language 语言设置

2. Factory 出厂设置

3. Support 技术支持

4. Schedule 计划任务

5. Effect 切换特效

△ Page 1 / 2

Advance

▶ 6. VGA Adjust VGA设置

7. Contract 对比度设置

8. Freeze 图像静止

9. Volume 声音设置

10. Master 专家设置

△ Page 1 / 2

info@mail.eb-leddisplay.com

More

Advance
1. Language
▶【English】 √
Chinese

▲ Language setting

Advance
2. Factory
▶【OK 】 √
ESC

▲ factory setting, no changed

Advance
▶ 3. Support
Contact the sales
Device info

▲ Support ,no changed

More

Advance
▶ 4. Schedule
Enable
【Disable】 √

▲ No changed, Disable is OK.

Advance
▶ 5. Effect
【Direct 】 √
Effect

▲ factory setting, no changed

info@mail.eb-leddisplay.com

More

Advance
▶ 10. Master
【Load Hotkey】 模式快捷键
Key Locked 键盘锁定
Play Type 播放类型
Resume 播放记忆
↓

▲ Load Hotkey

Advance
▶ 10. Master
Load Hotkey
Enable
【Disable 】 √

▲ Disable Load Hotkey
No changed

Advance
▶ 10. Master
Key Locked
Enable
【Disable 】 √

▲ Disable default Key Locked
No changed

More ------10. Master

Info Warning
Key Locked, Press MENU 6 times, Unlock

▲ Key Locked, if choose Enable

Advance
▶ 10. Master
Play Type
【Video 】 √
Picture

▲ Vide default
No changed

Advance
▶ 10. Master
Resume
Enable
【Disable 】 √

▲ Disable default
No changed

info@mail.eb-leddisplay.com

More

Advance
▶ 10. Master ↑
【Online load 】 在线升级
EDID EDID设置
Sharpness 锐化设置

▲ Master

Advance
▶ 10. Master
Online load
OK
【ESC 】

▲ Disable default
No changed

Advance
▶ 10. Master
EDID
OK
【ESC 】

▲ Disable default
No changed

More ------10. Master

Advance
▶ 10. Master
Sharpness
Sharpness 0

▲ 0 default

info@mail.eb-leddisplay.com

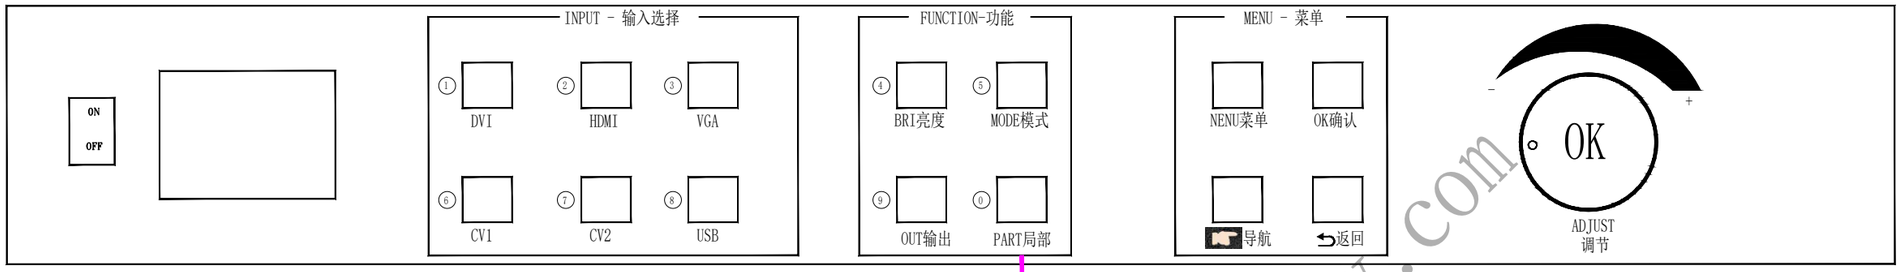

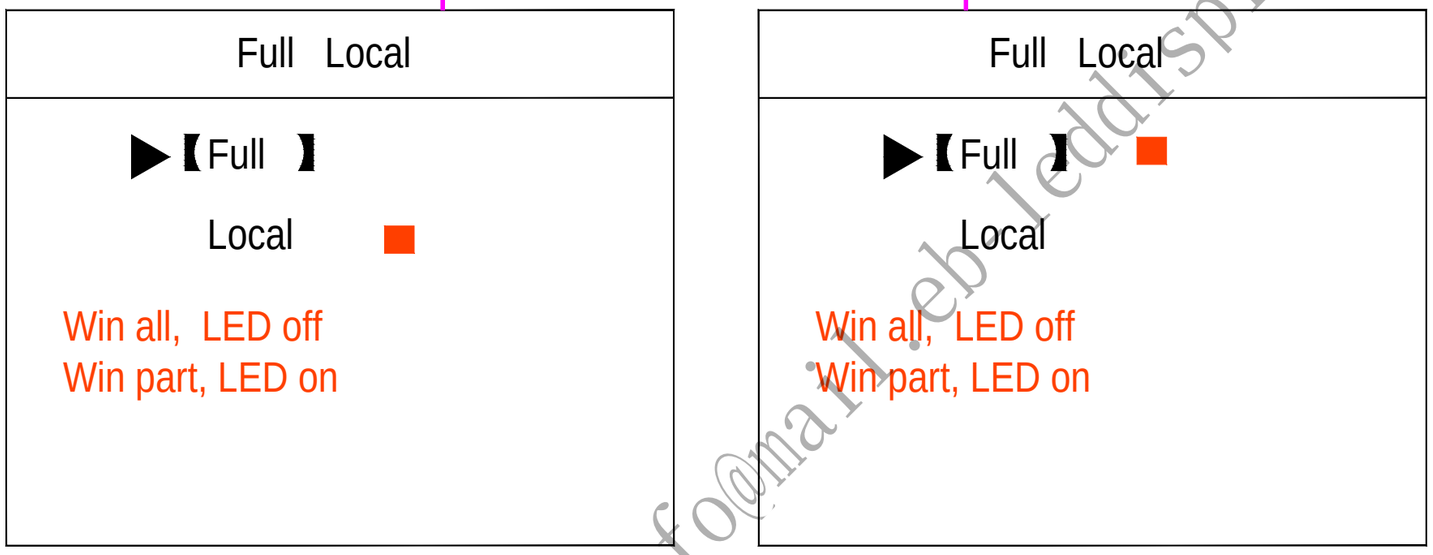

▲ Full showing

▲ Parting showing

Part windows size showing is setted in ZOOM

info@mail.eb-leddisplay.com

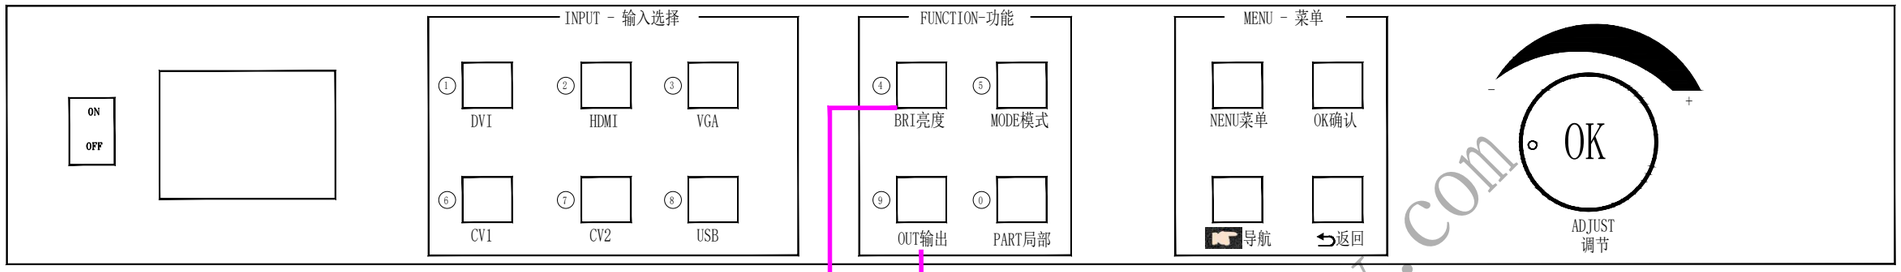

Brightness	
Brightness	128
Red	128
Green	128
Blue	128

▲ 128 default
No changed

Output	
▶【Black 】	√
Blue	
Normal	

Win all, LED off
Win part, LED on

▲ Press to black, Press Out again to Normal
按一下黑屏, 再按一下就是正常显示

一键黑屏 Hot key to set LED display black

info@mail.eb-leddisplay.com

KS600 introduction

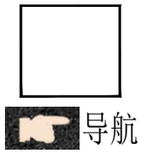

quick setting LED display



Two sending card mode

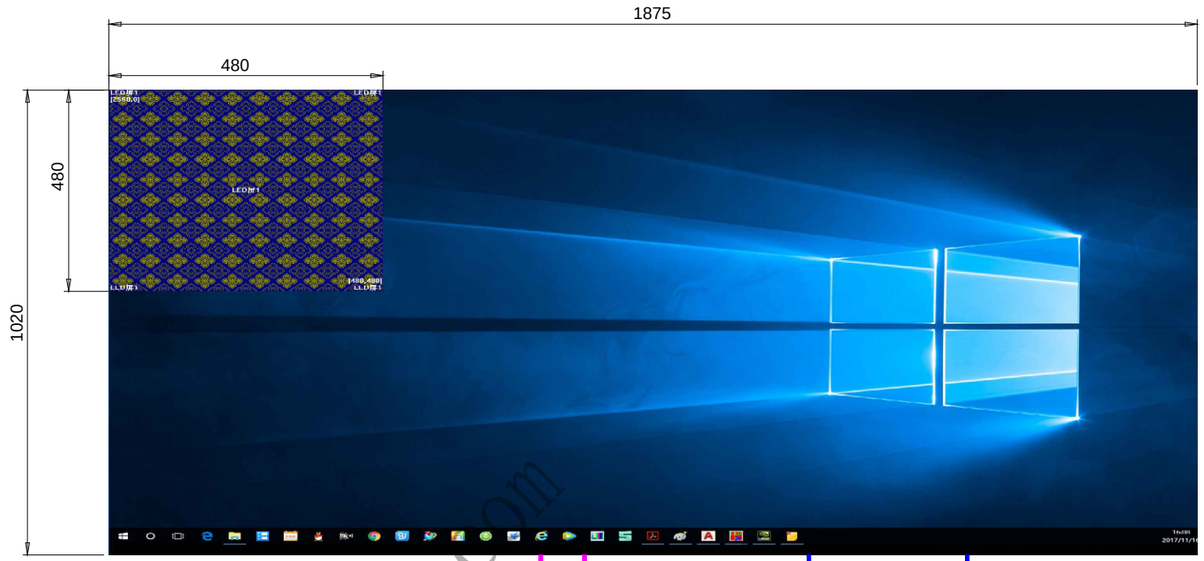

Inputting signals

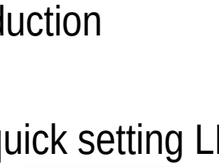





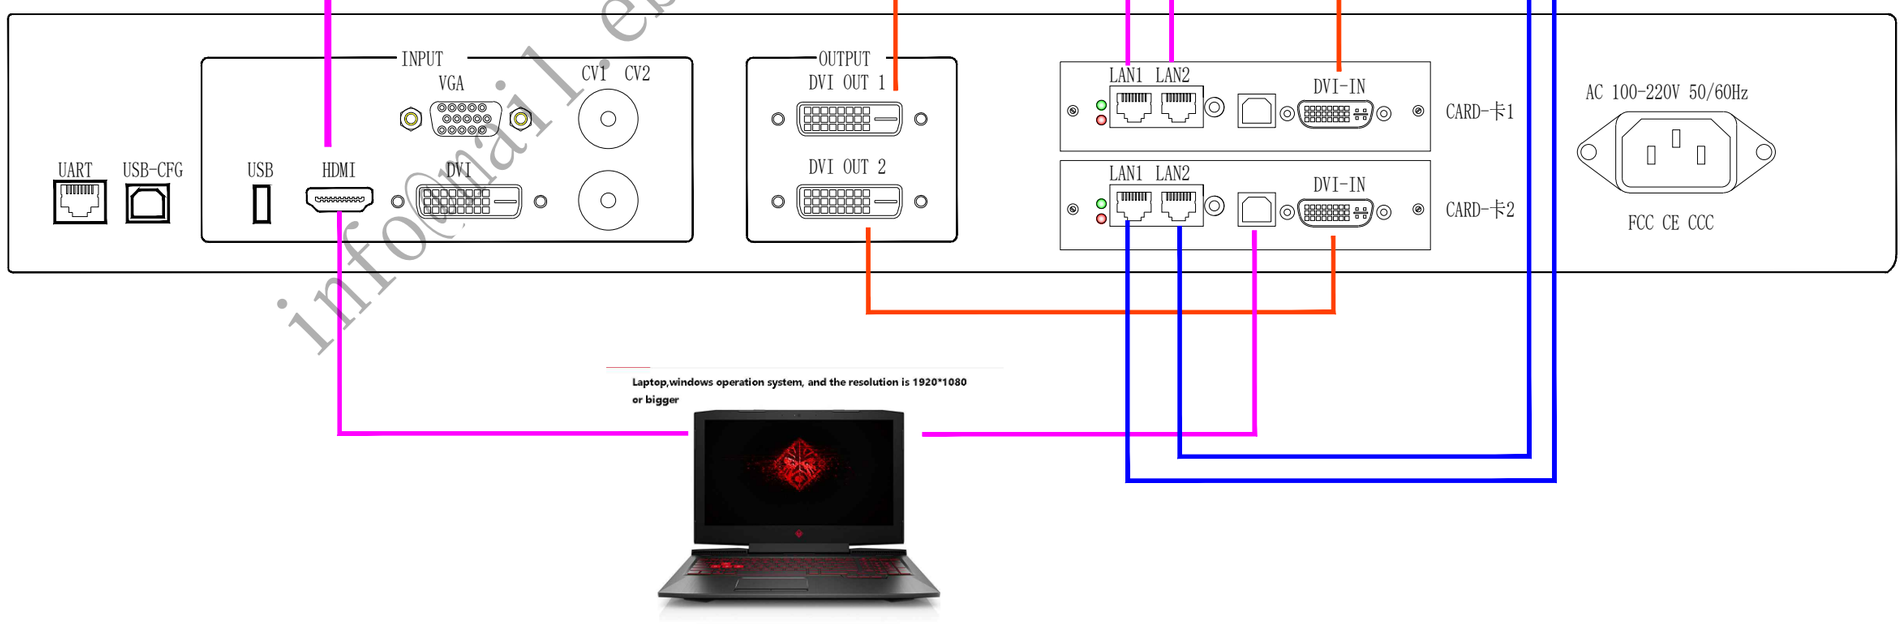

info@mail.eb-leddisplay.com

KS600 introduction

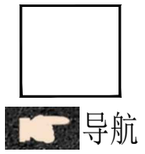

quick setting LED display



One Mctrl 600 Model

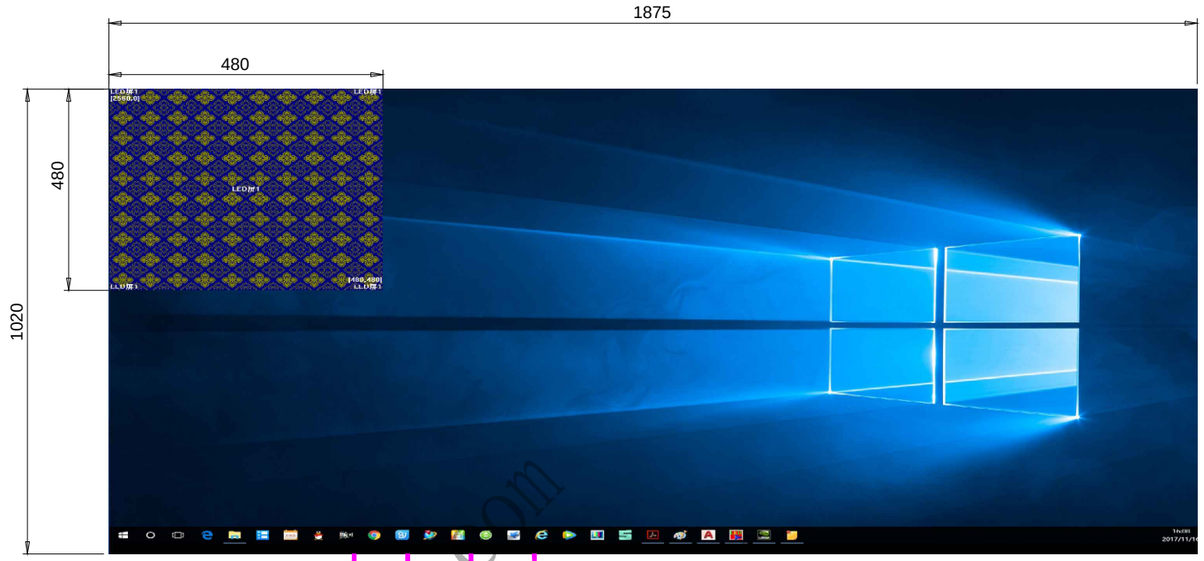

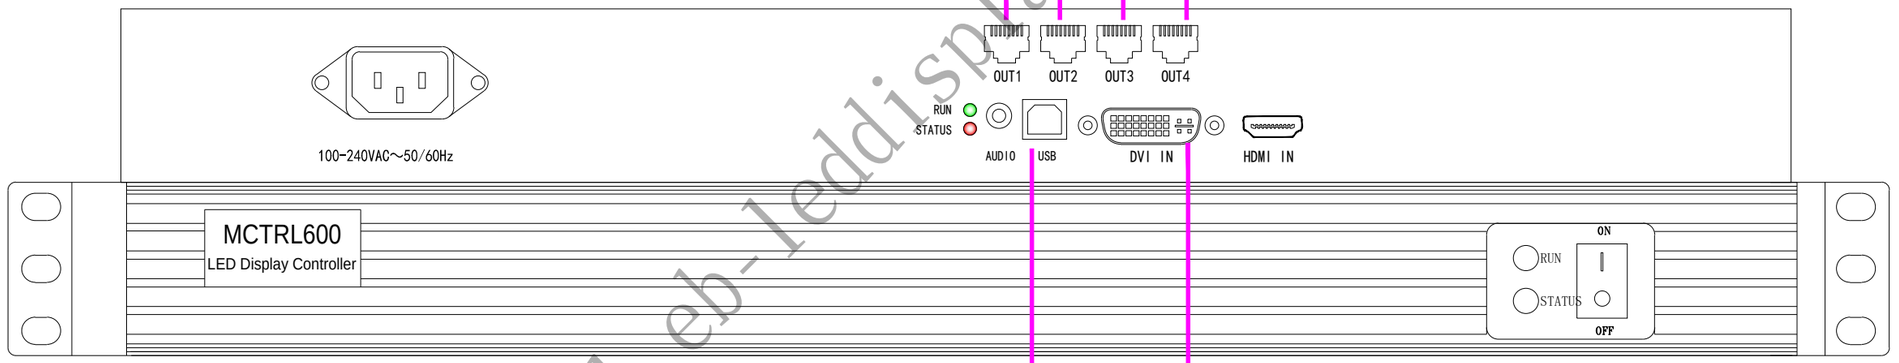

Inputting signals









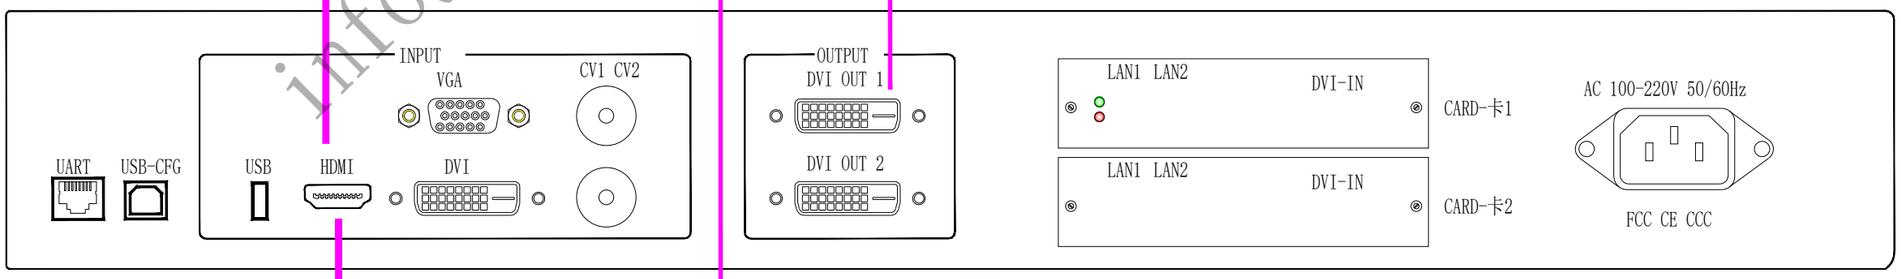







info@mail.eb-leddisplay.com

KS600 introduction

quick setting LED display

导航

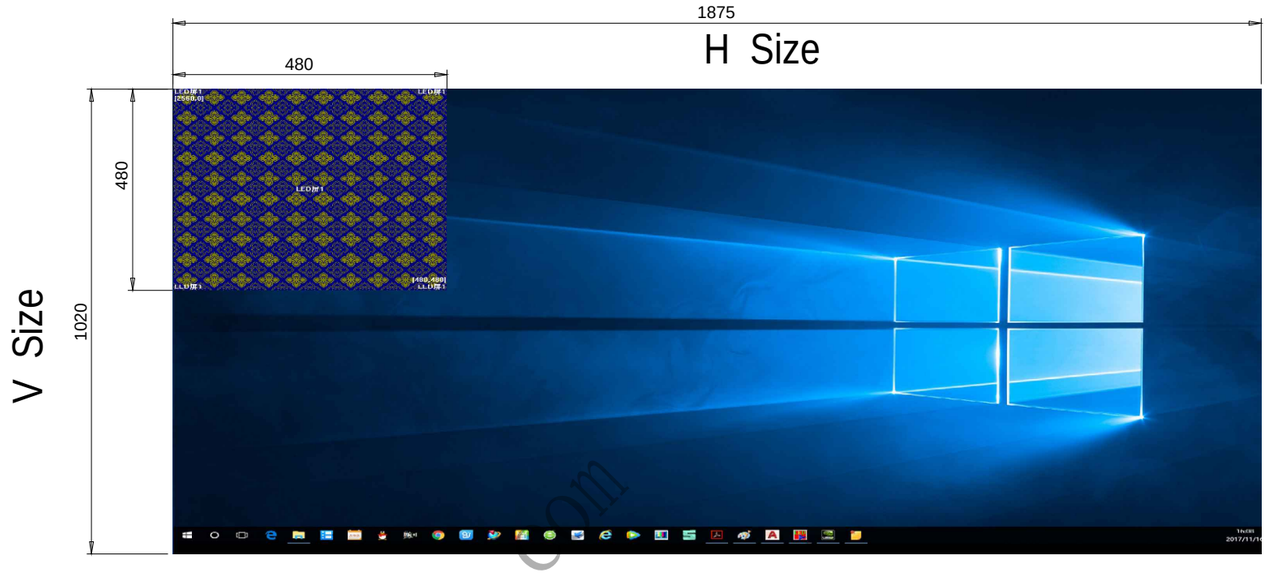



Press this button

H Size = width = Horizontal

V Size = height = Vertical

Wizard
Welcome to wizard ▶【OK 】 ESC Note: Knob to change, press Ok to Next

▲Rotate ADJUST and choose OK
Press ADJUST to next

Wizard
Pannel Para H Size 128 Step x8 Finger changer V Size 128 Note: Knob to change, press Ok to Next

▲LED screen resolution
Rotate ADJUST and
fill the right number
then press ok to next step.

Wizard
Pannel Para H Size 1875 Step x8 Finger changer V Size 1020 Note: Knob to change, press Ok to Next

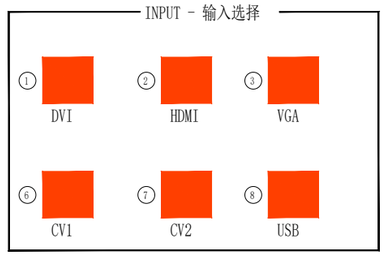

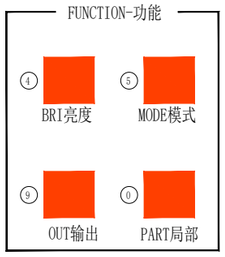

Fill the right number
(1,2,3,4,5,6,7,8,9,0)

Finger change

info@mail.eb-leddisplay.com

KS600 introduction

quick setting LED display

导航

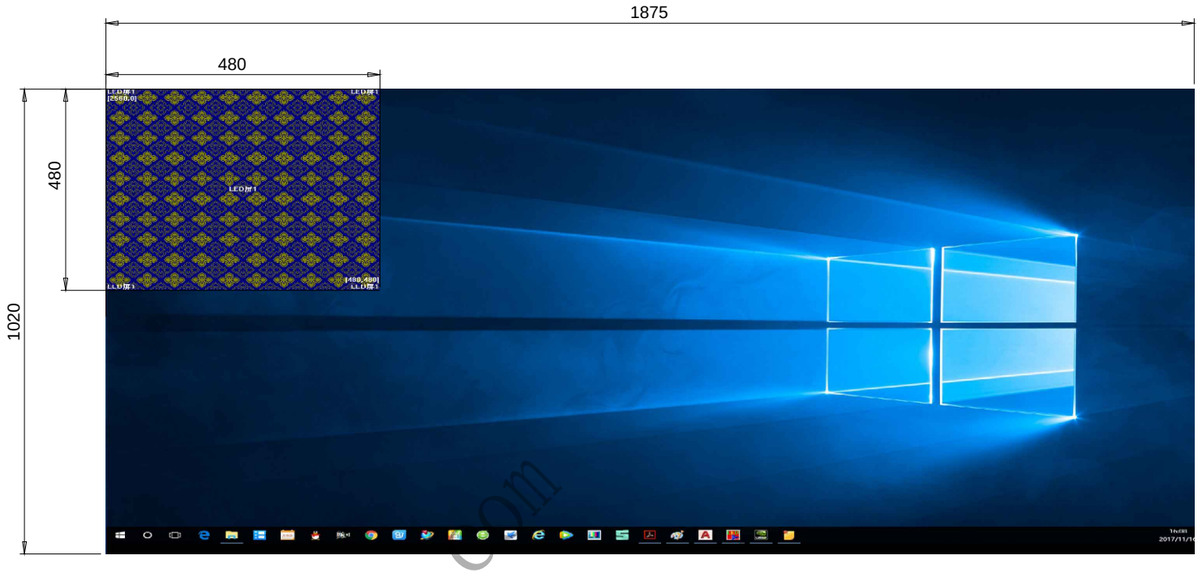

▲LED DISPLAY

Wizard
Select input Input : DVI Note: Knob to change, press Ok to Next

▲Rotate ADJUST and choose OK
Press ADJUST to next

Wizard
Local Display ▶【ESC 】 ESC Note: Knob to change, press Ok to Next

▲Rotate ADJUST and choose ESC

Savemode	
▶【Mode 1】 Mode 2 Mode 3 Mode 4 Mode 5	Note

▲Save your configuration as model 1

info@mail.eb-leddisplay.com

quick setting LED display

导航

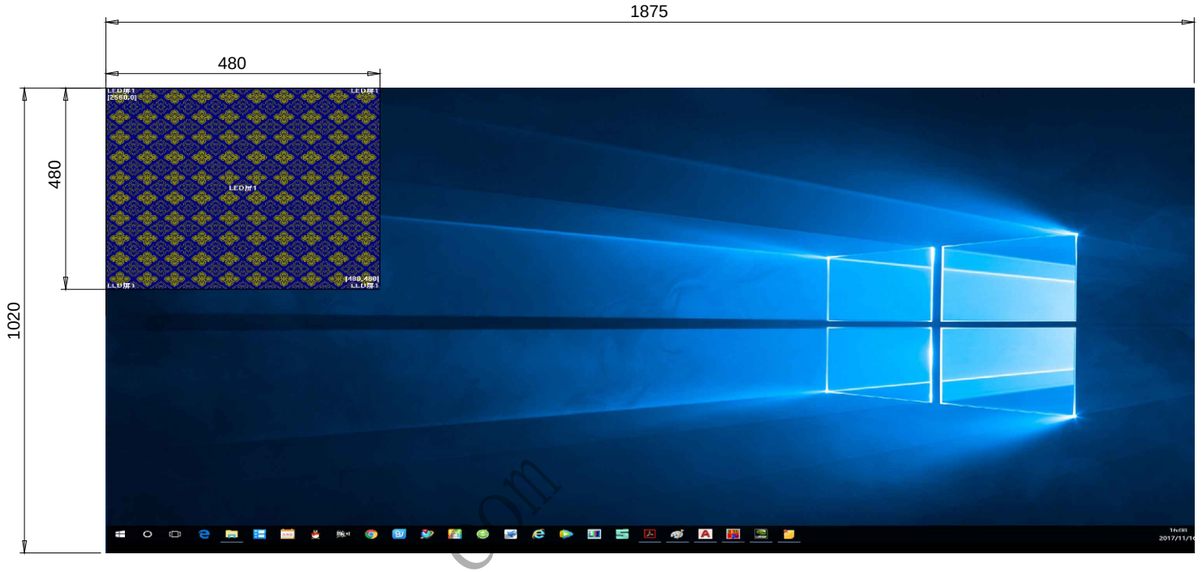

▲LED DISPLAY

Wizard Success
Welcome to Wizard
Wizard END

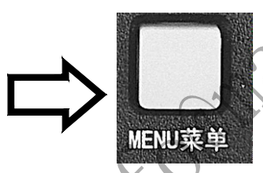

▲Wizard success and Press Menu

info@mail.eb-leddisplay.com

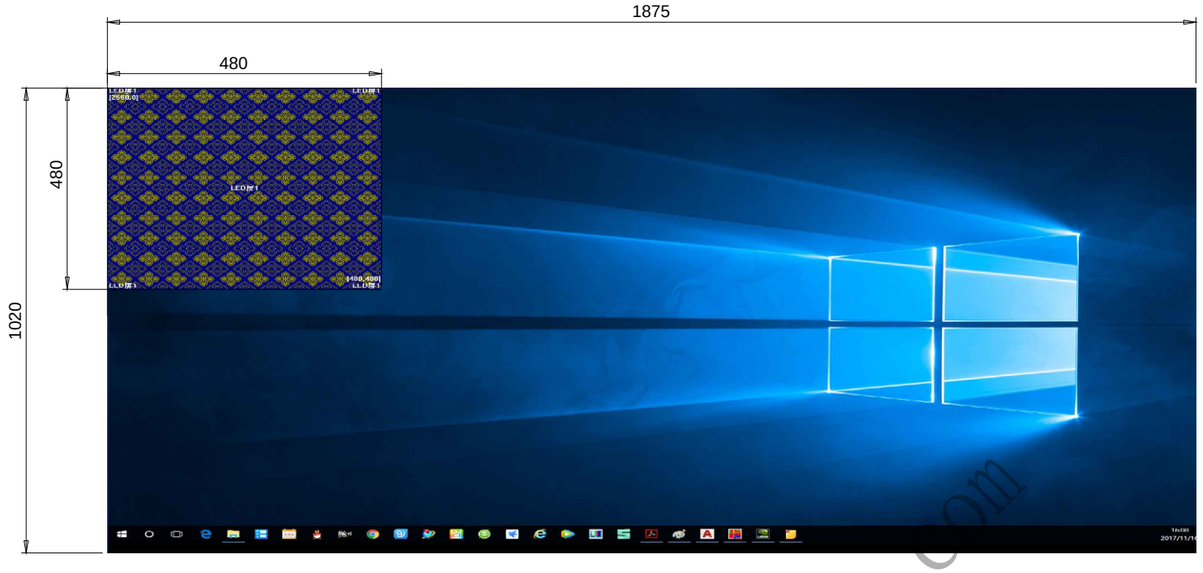

▲LED DISPLAY full to part

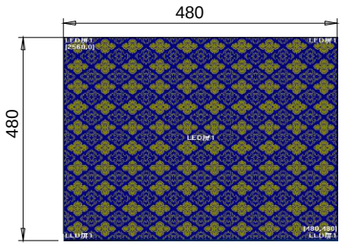

Part display shows

Part display



MENU

Zoom

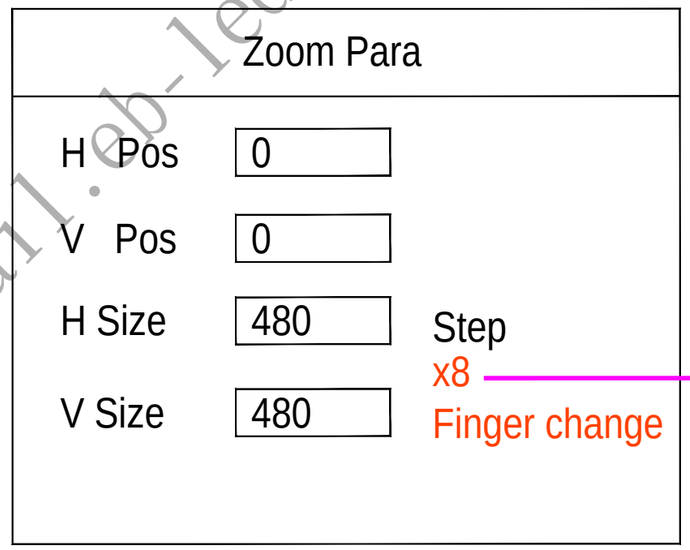

Step
x8
Finger change



change step x1, x8 ,x20



Switch full window or part

△ Part display area

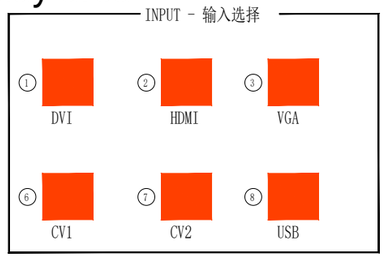

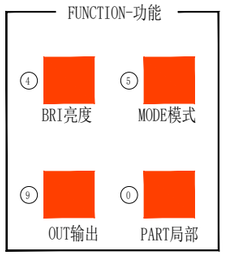

Fill the right number
(1,2,3,4,5,6,7,8,9,0)

Finger change

info@mail.eb-leddisplay.com

ENBON OPTOELECTRONICS LIMITED

Thanks for choosing ENBON Product

Our web site : www. eb-leddisplay.com

Contact Person: Nancy chen

Smart phone: +0086-135 4410 5247

Email address: info@mail.eb-leddisplay.com

info@mail.eb-leddisplay.com