KS910P introduction

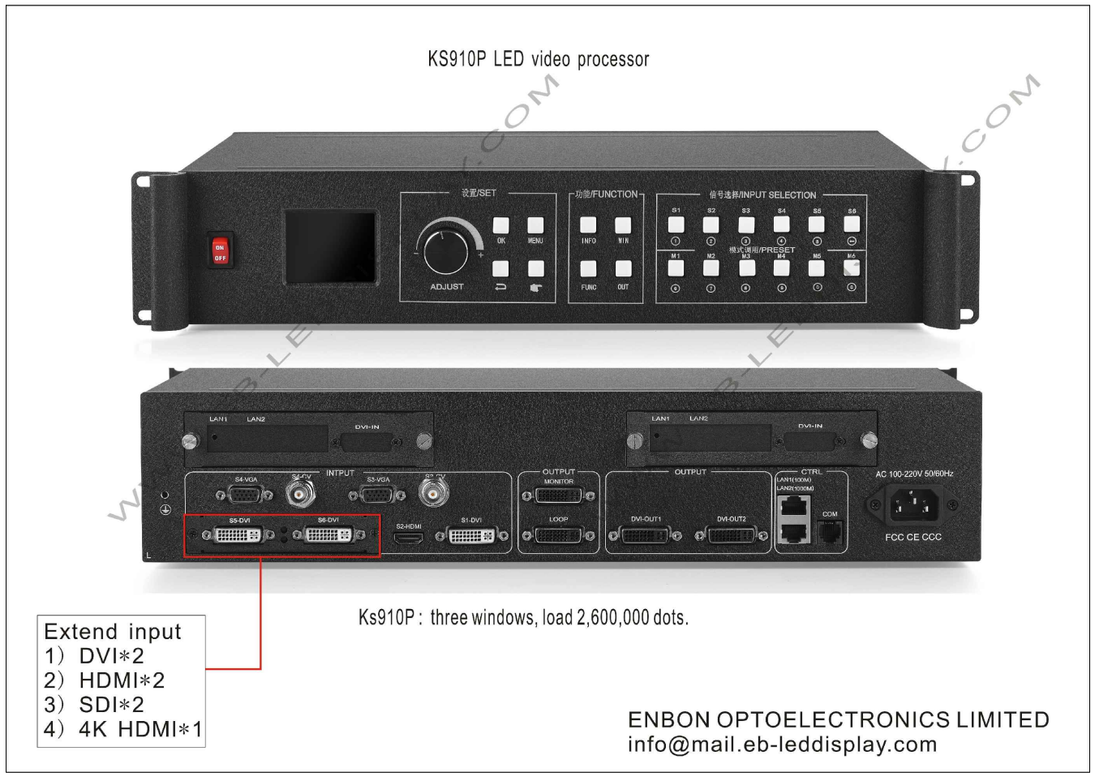



Laptop,windows operation system, and the resolution is 1920*1080 or bigger



Projector



Bule Ray DVD



Inputting signals

You need to buy this sending card separately.

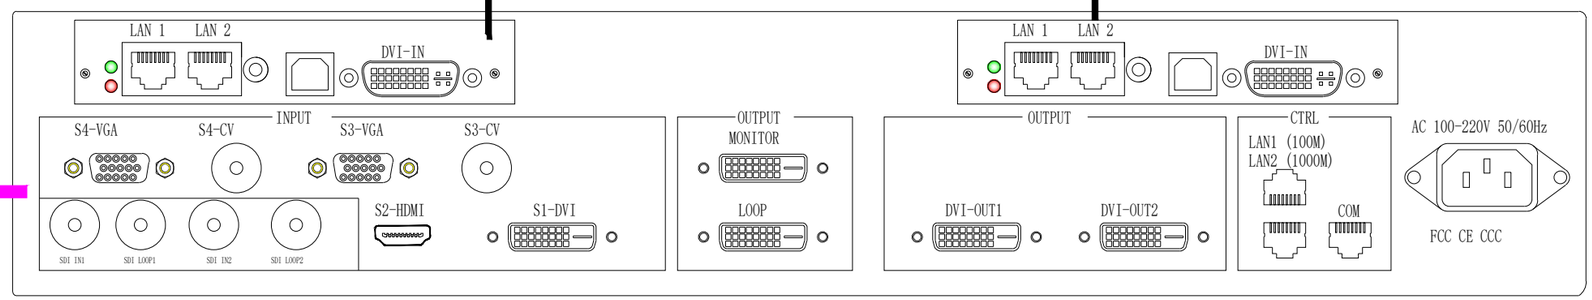

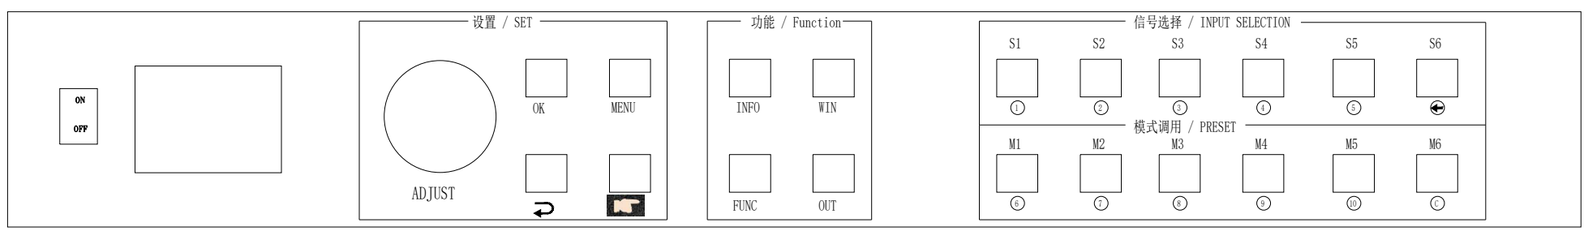



Adjust button
Turn to select , Press to check

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

Change Chinese interface to English







Turn the ADJUST till check MORE 高级设置and press ADJUST

MORE
高级菜单

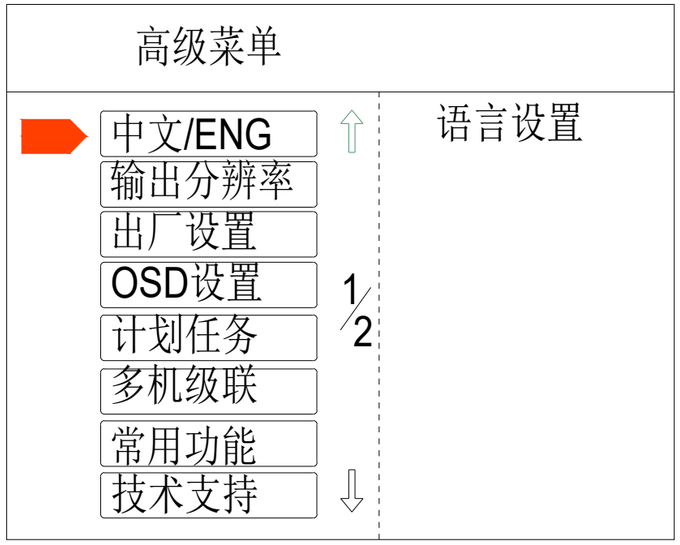

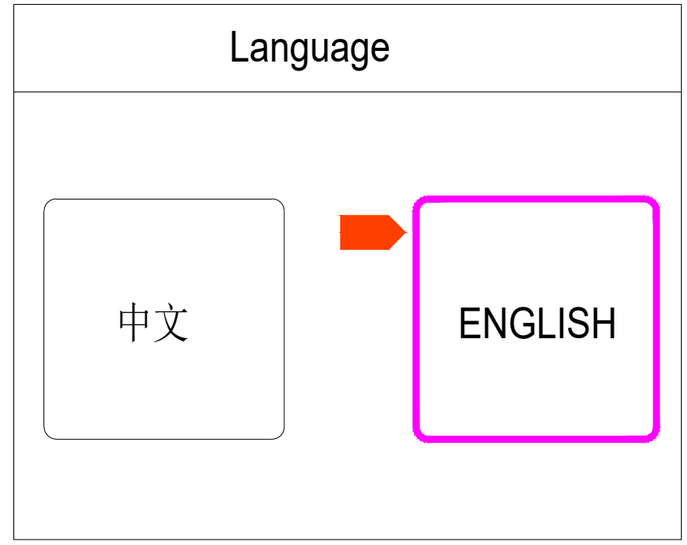

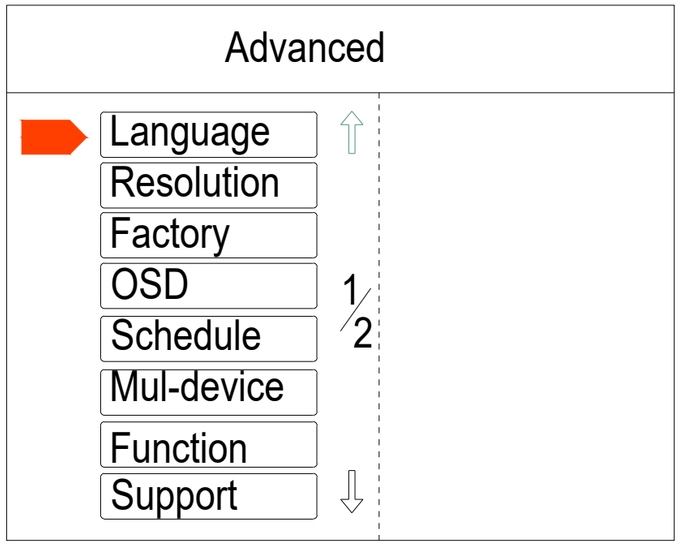

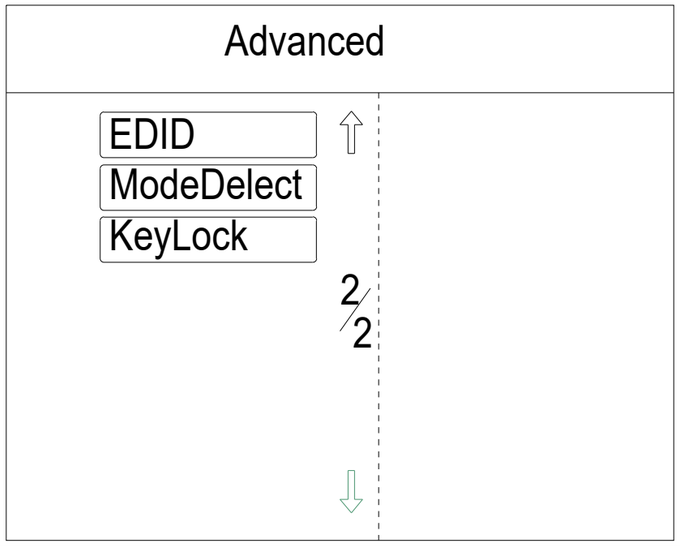



Adjust button
Turn to select , Press to check

Press ADJUST to check and Press ↩ to return

MAIN MENU------DEVICE

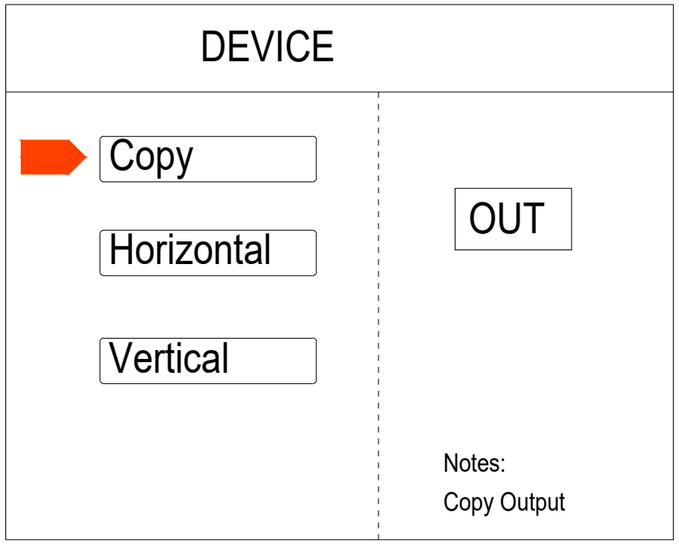

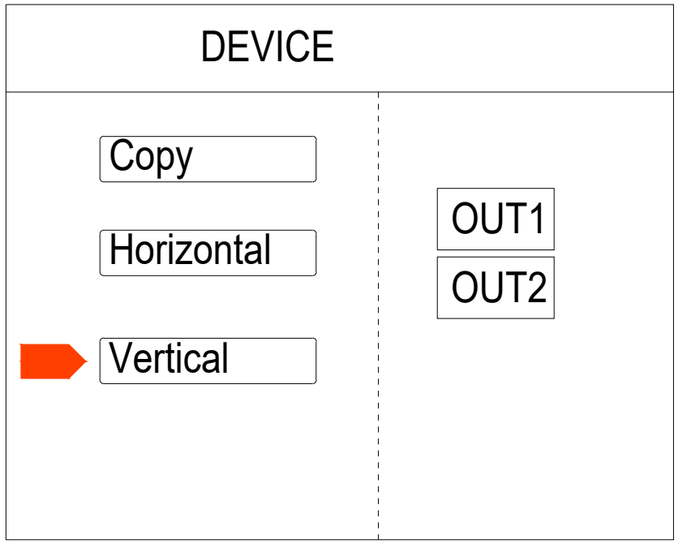

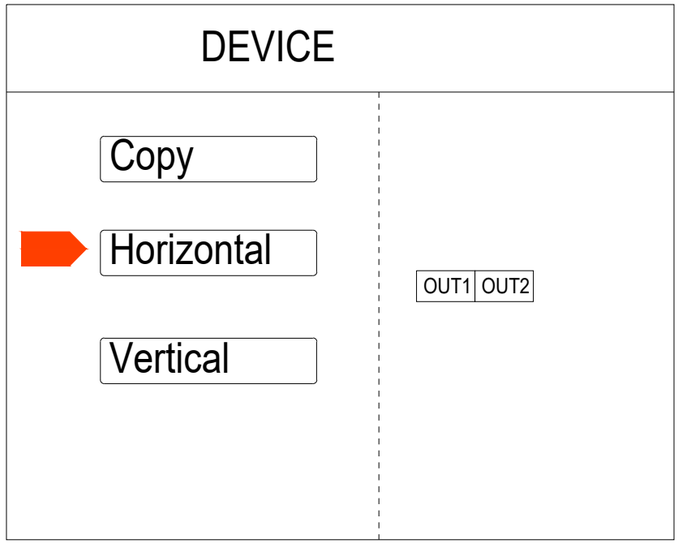

MAIN MENU------SCREEN

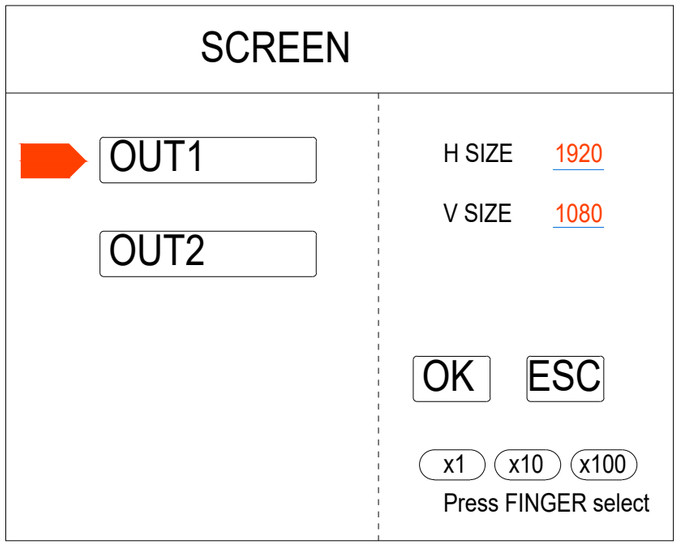

The screen decide the every DVI out H (Horizontal=width), and V size (Vertical =Height) .

MAIN MENU------LAYOUT

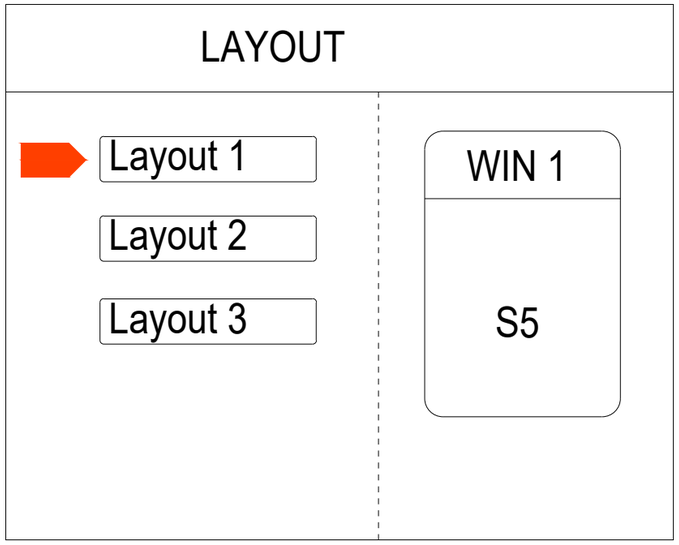

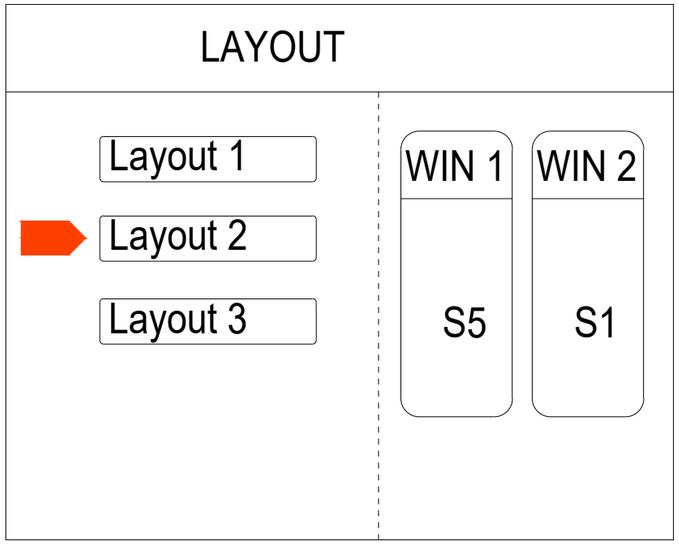

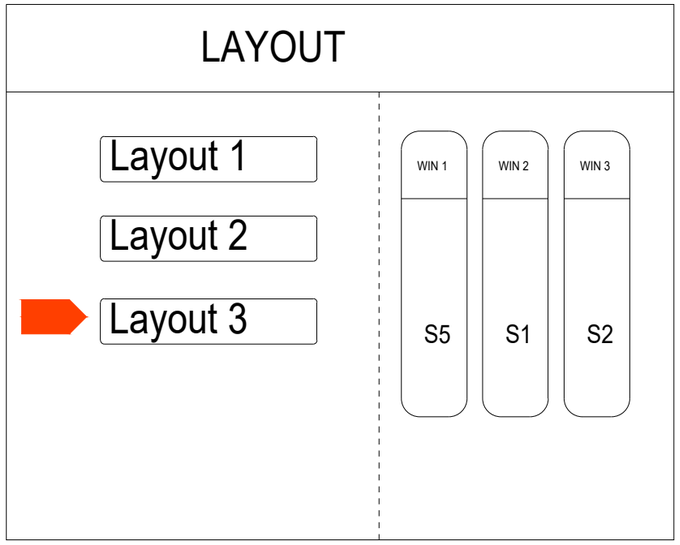

There are three windows for KS910P, KS920P .

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

MAIN MENU------LAYOUT

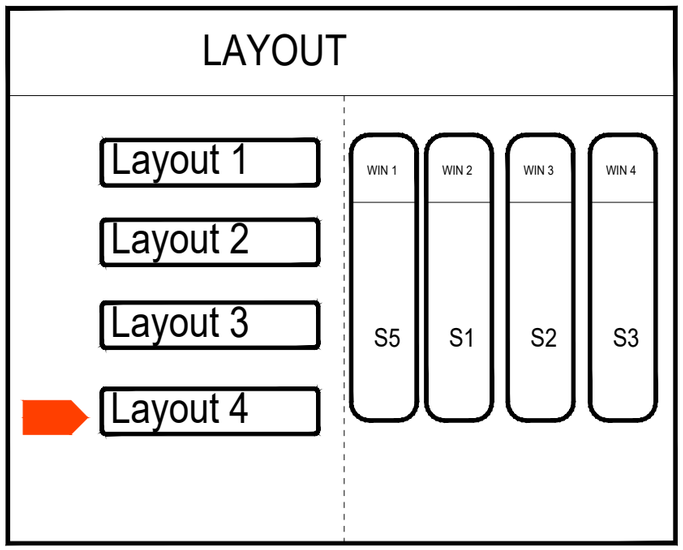

There are four windows for KS928 , KS938

MAIN MENU------LAYOUT

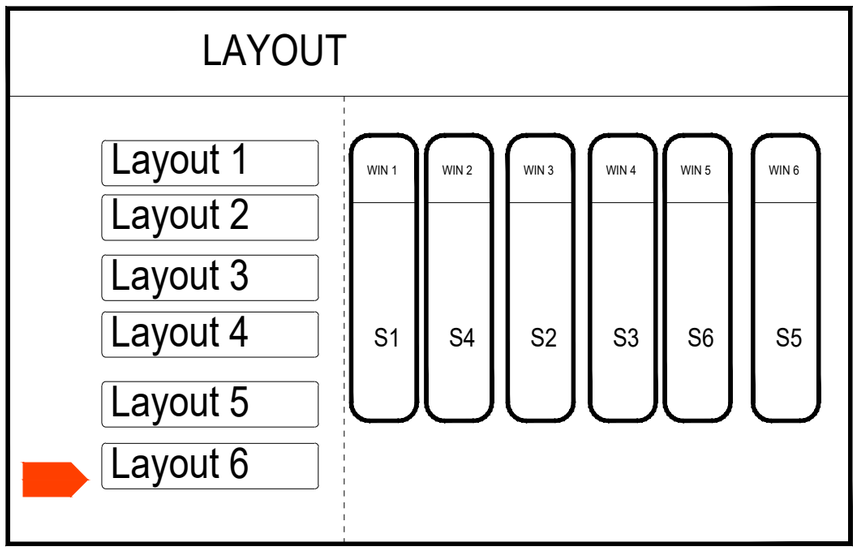

There are six windows for KS948

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

MAIN MENU-----SCALER

This function decide the window size and position

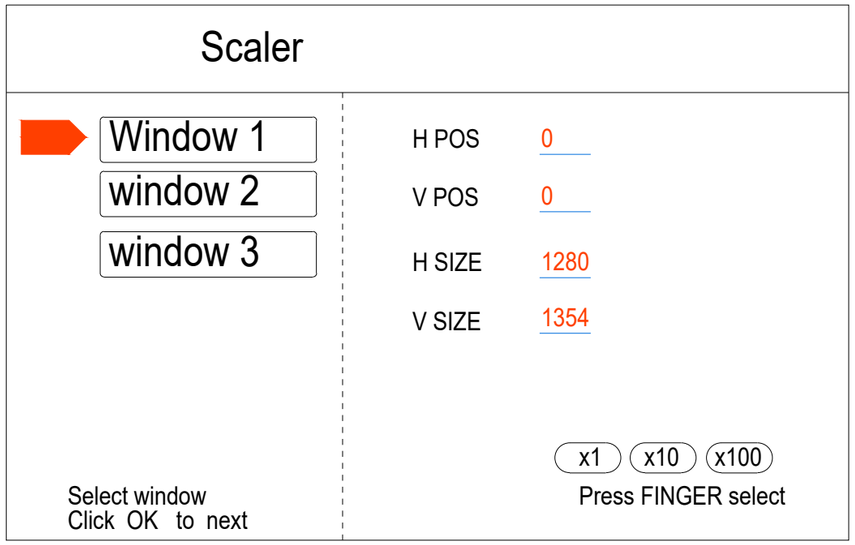

MAIN MENU-----ZOOM

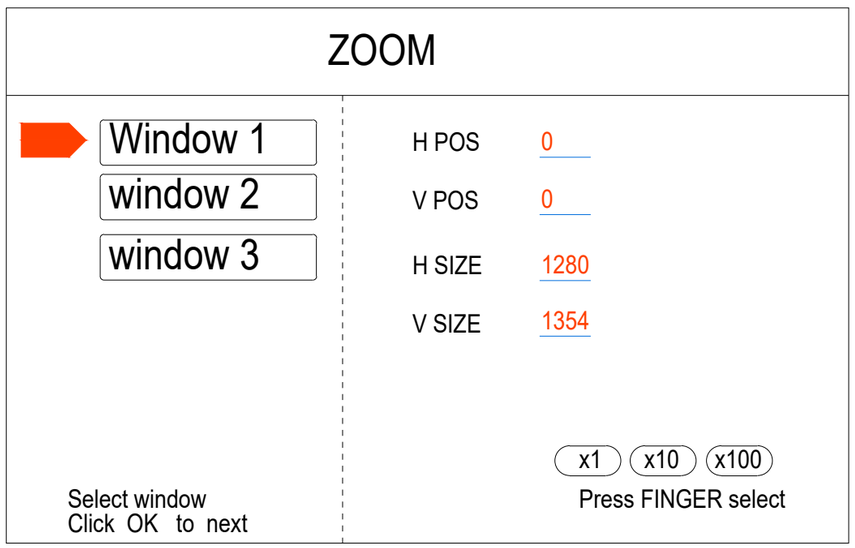

Part display for every window, copy a part of real resolution from source.

MAIN MENU-----SAVE

Save your configuration as modes, for Mode1 .
There are 32 Modes for your usage.

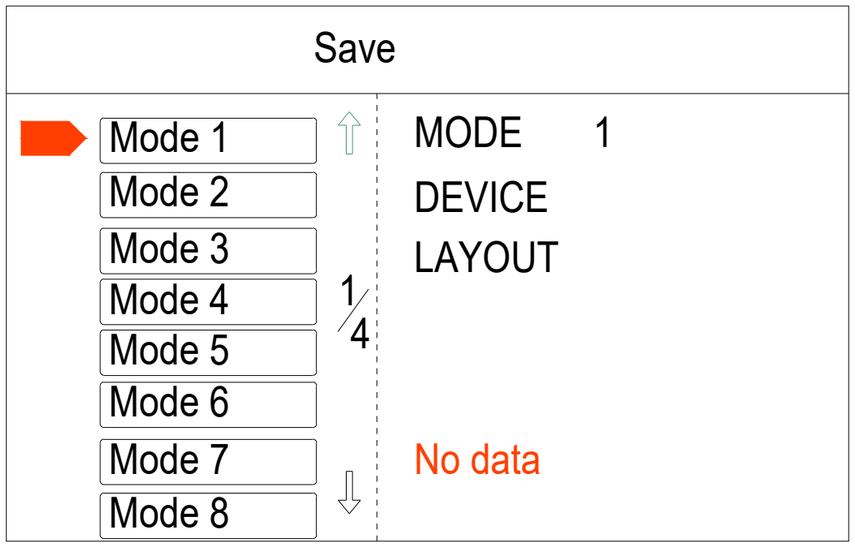

Mode 1 does not have saved data

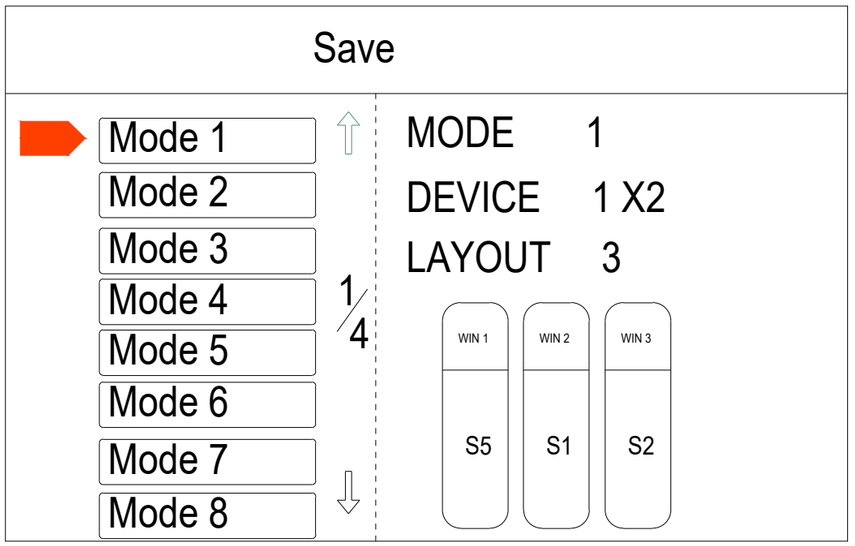

Mode 1 has saved data

MAIN MENU-----LOAD

Use the saved mode

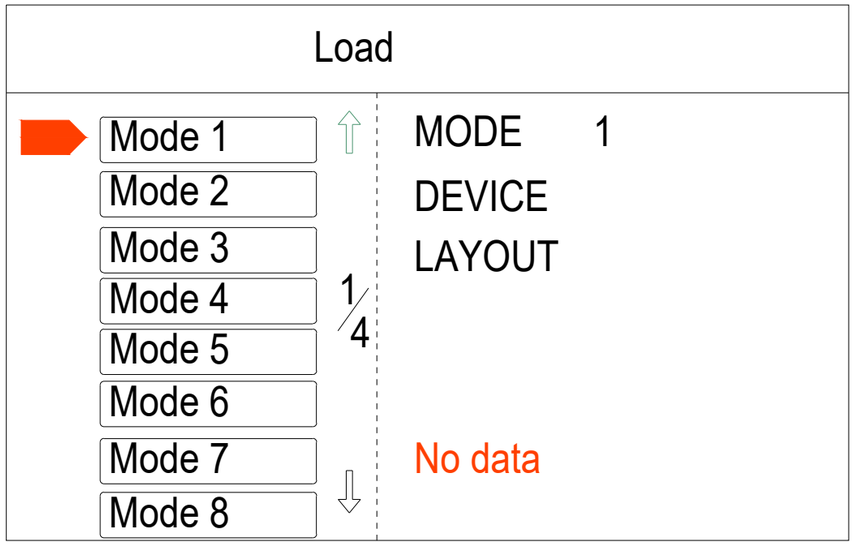

Mode 1 does not have saved data

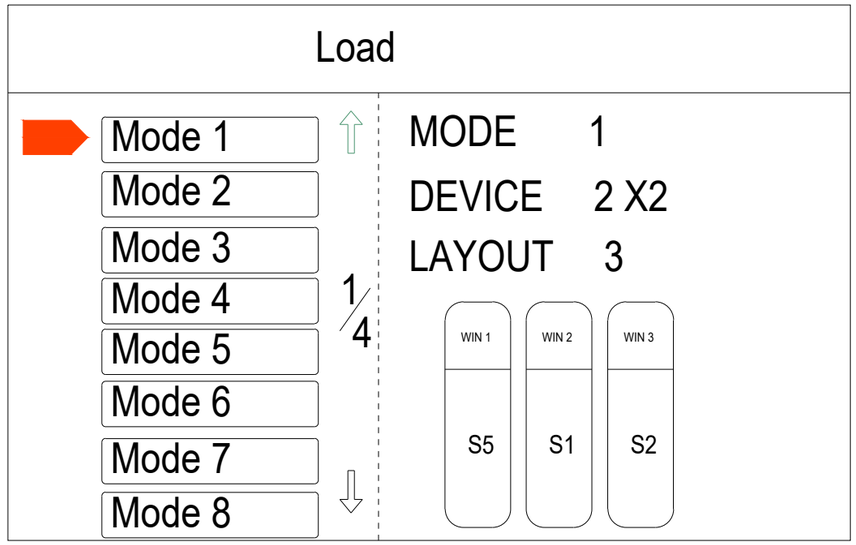

Mode 1 has saved data

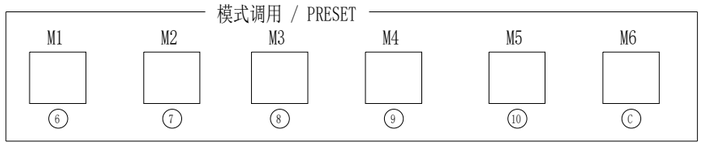

The shortcut key for using mode

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

MAIN MENU-----MORE----Resolution Set single DVI output resolution

MORE

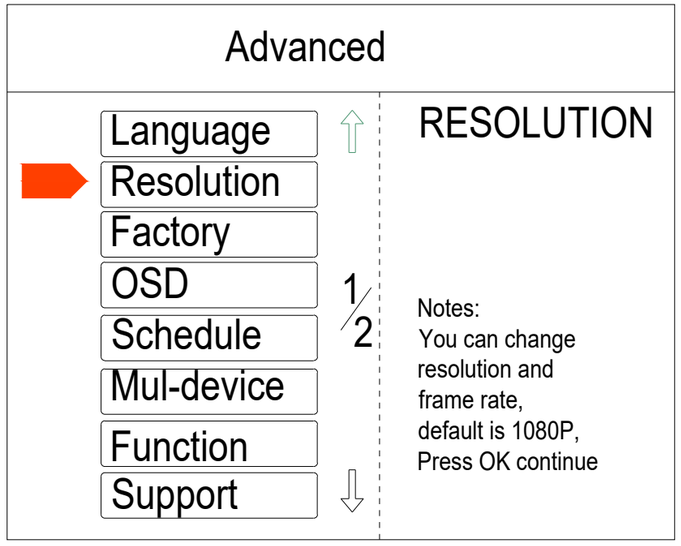

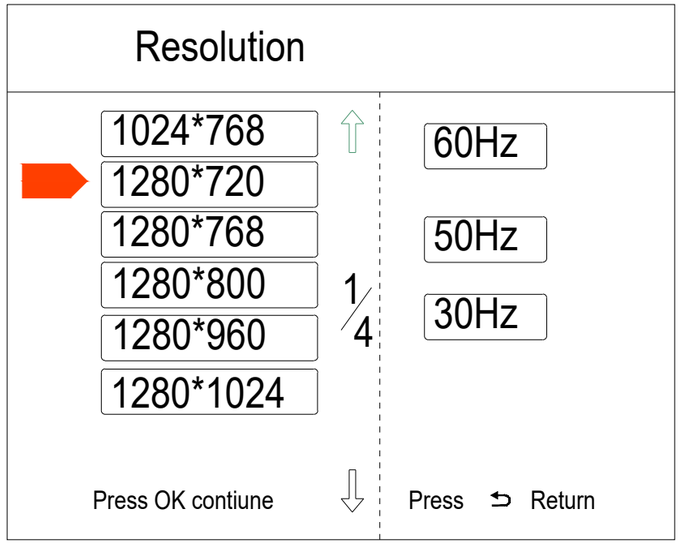

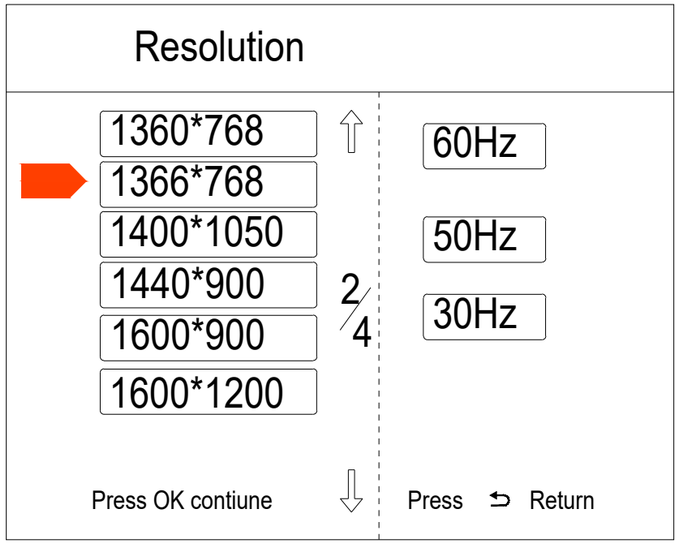

There are 4 pages

Every DVI load max 2,6000,000 pixels.
Max Length is 3840
Max Height is 1920

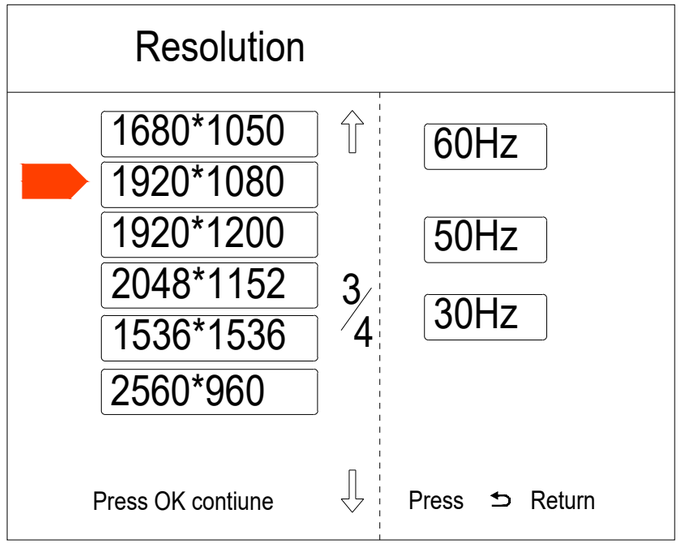

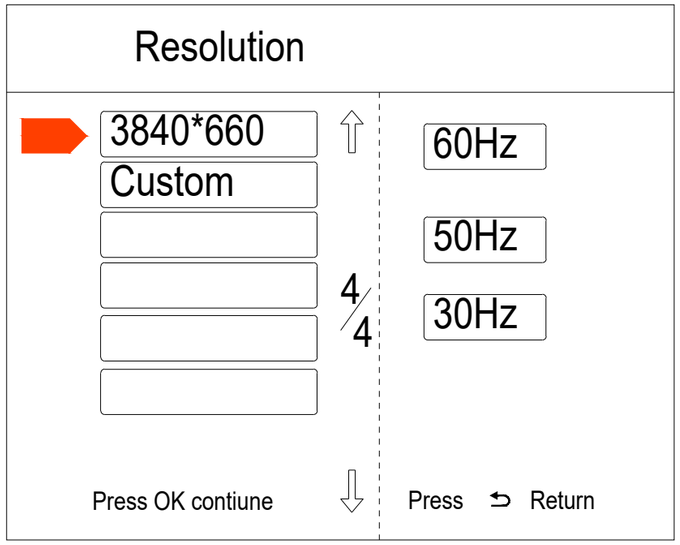

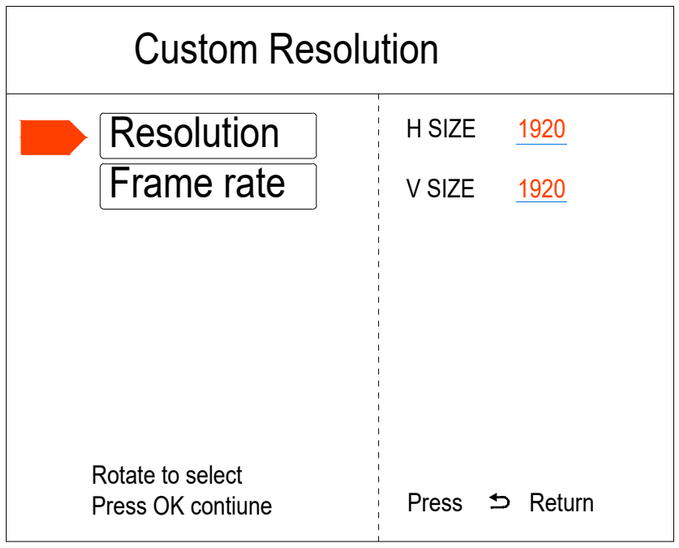

MAIN MENU-----MORE----Resolution Customize DVI output resolution

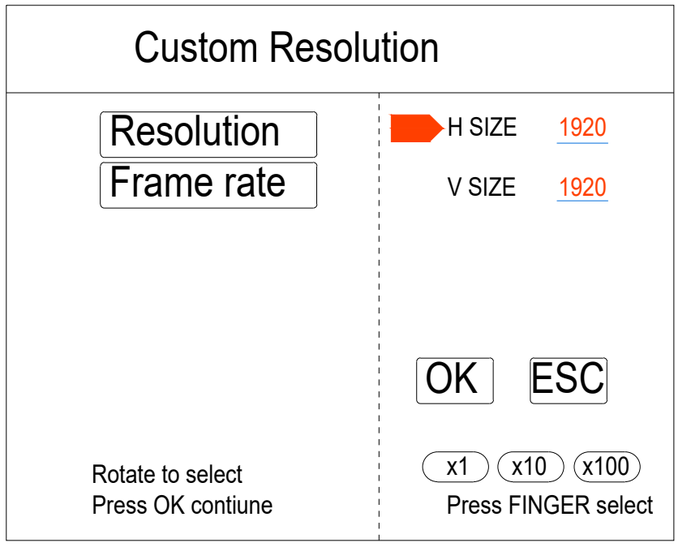

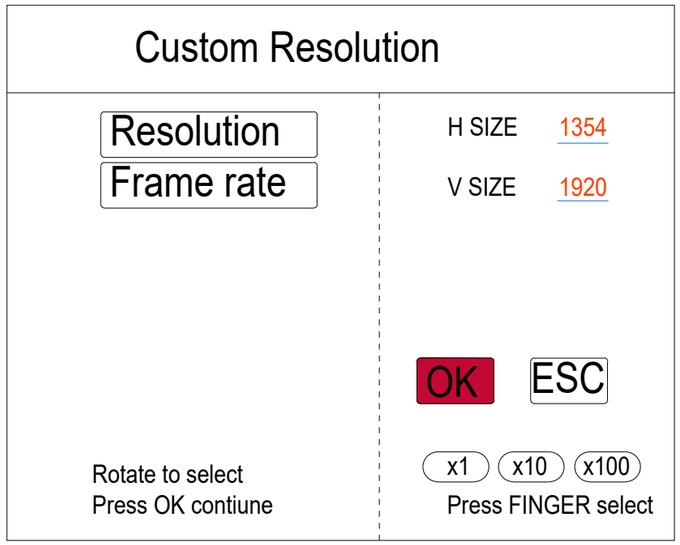

Press OK to check

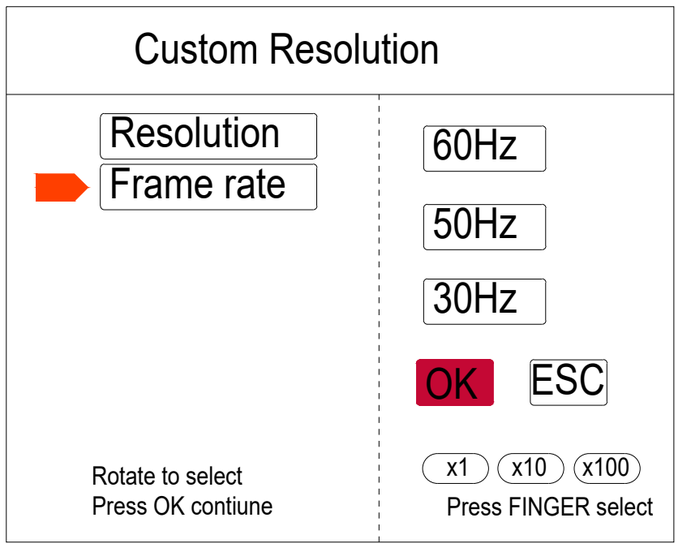

Press OK to check

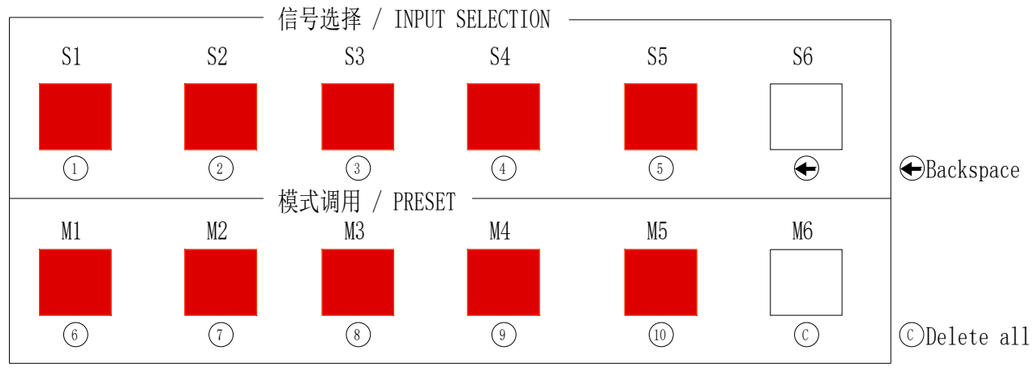

If there are not available resolution, please Customize DVI output resolution

MAIN MENU-----MORE------Factory / OSD / Schedule/ Mul-Device

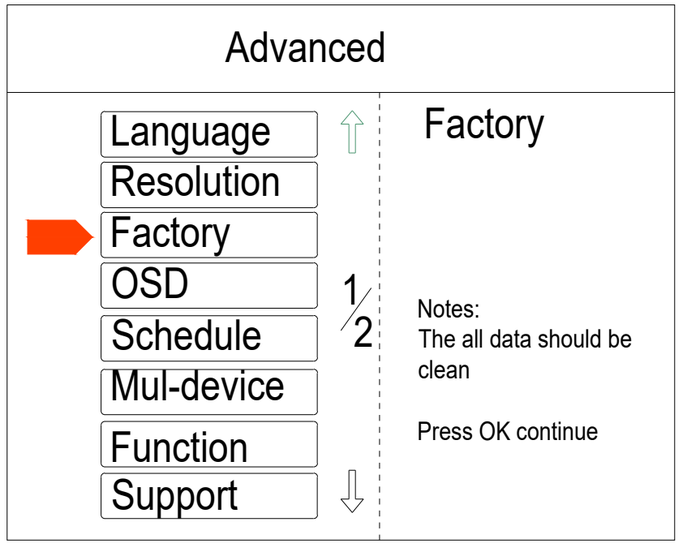

Don't change anything in factory

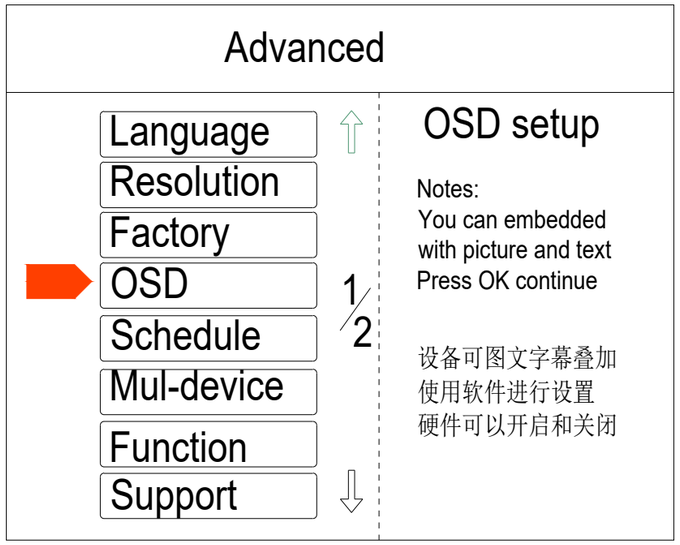

Don't change anything in OSD

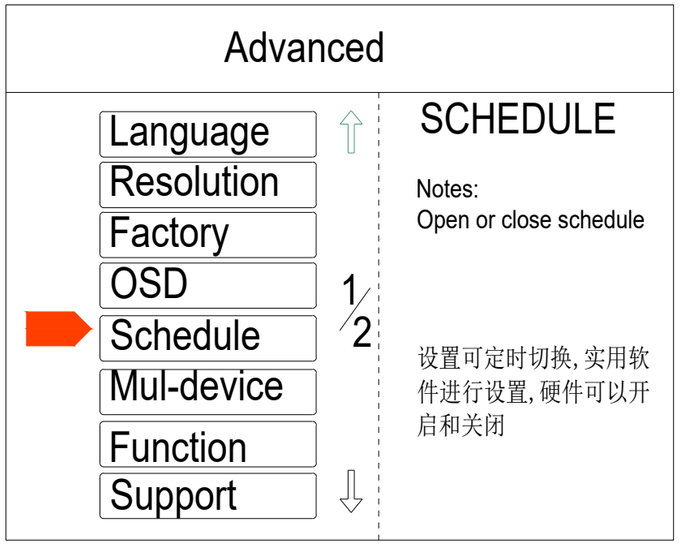

Don't change anything in Schedule

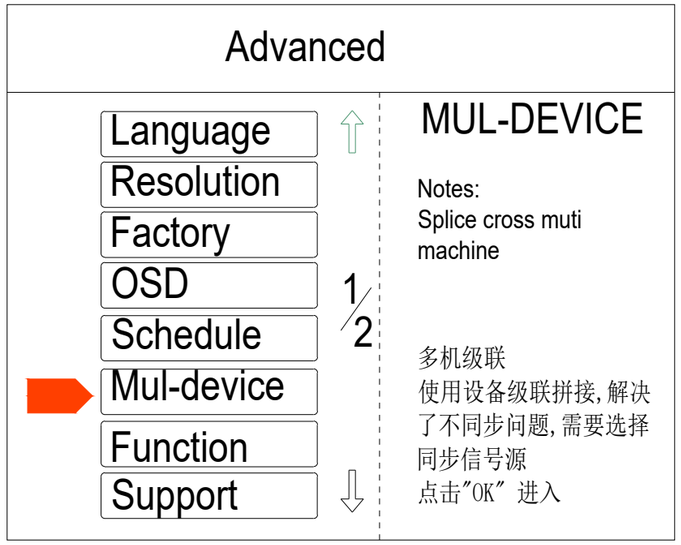

Don't change anything in MUL-DEVICE

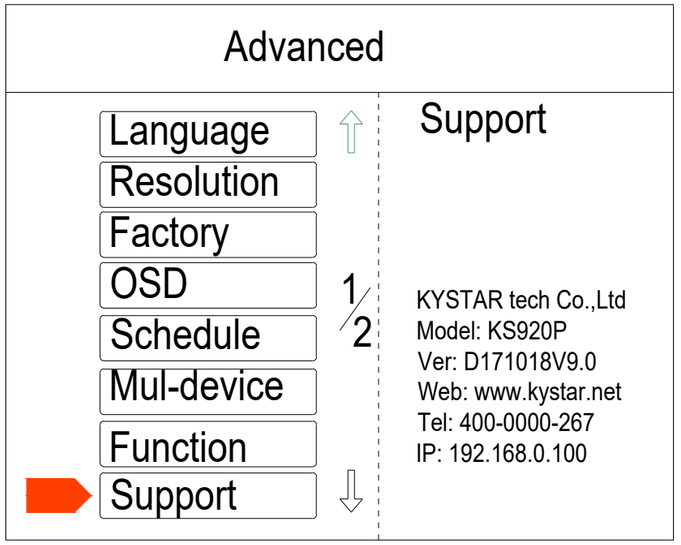

Don't change anything in MUL-DEVICE

MAIN MENU-----MORE------EDID / ModeDel

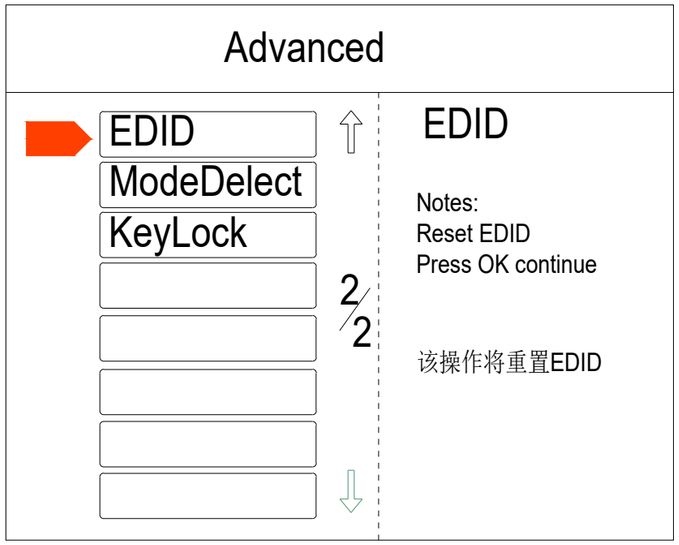

Don't change anything in EDID

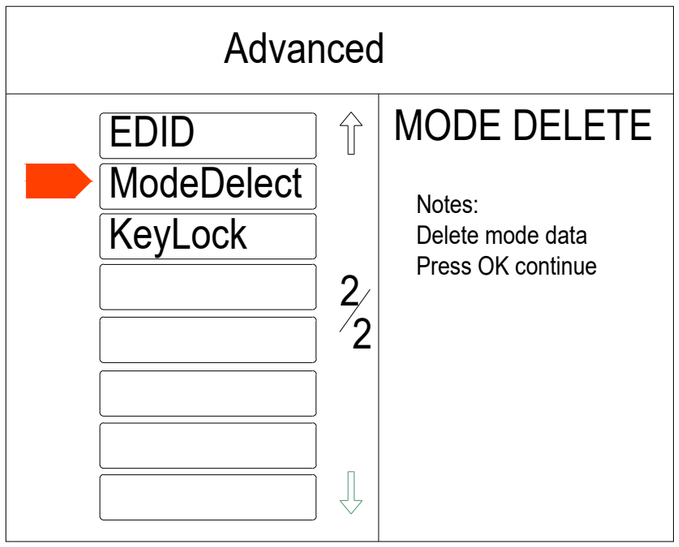

Delete the saved mode

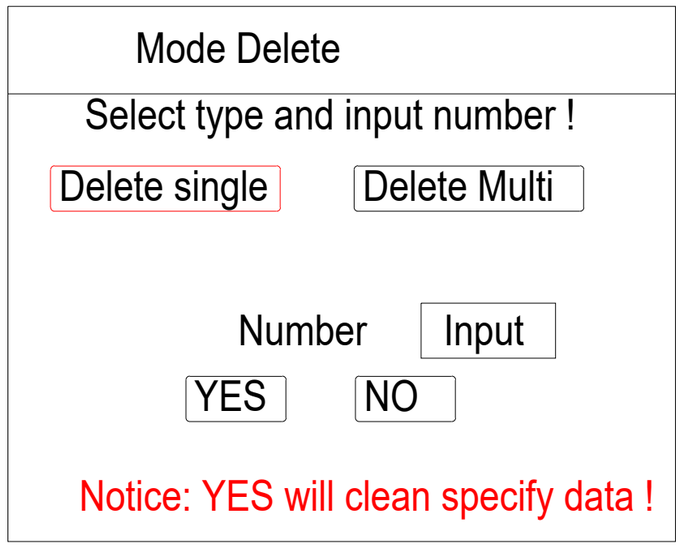

Delete the saved mode

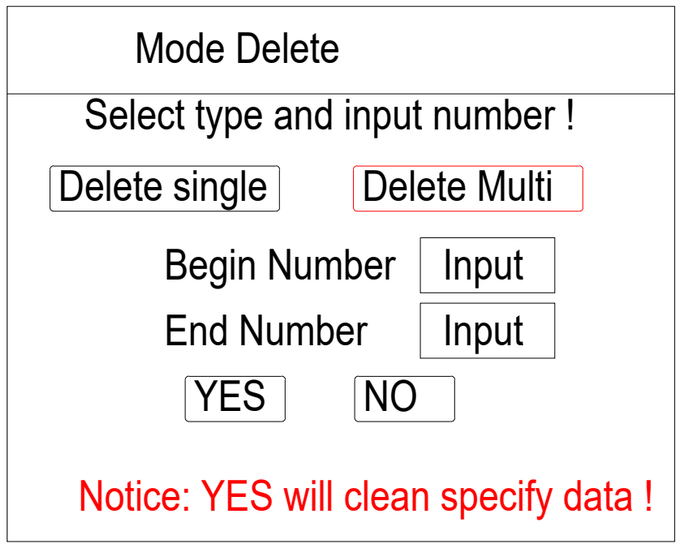

Delete the saved mode

MAIN MENU-----MORE------Key Lock

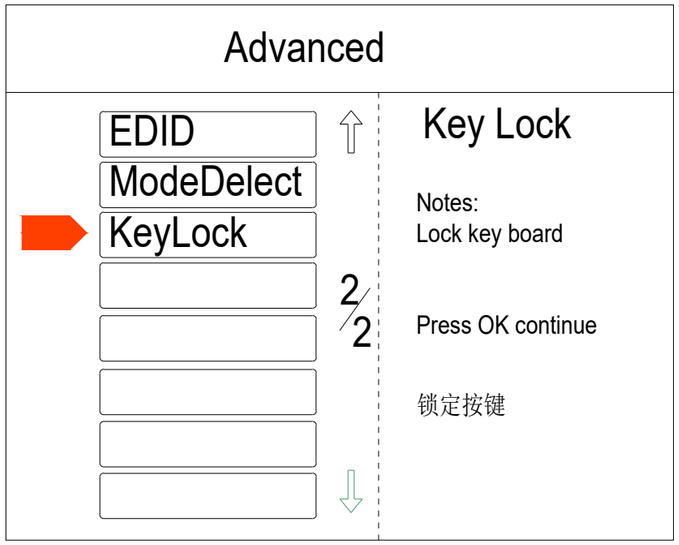

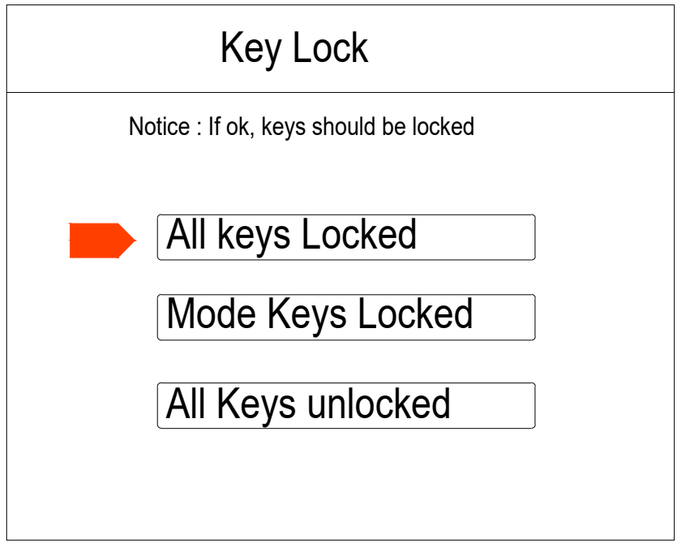



MAIN MENU-----MORE------Function Or Press FUNC to access .

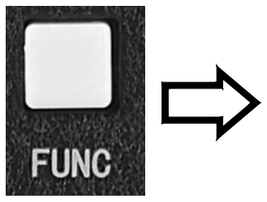

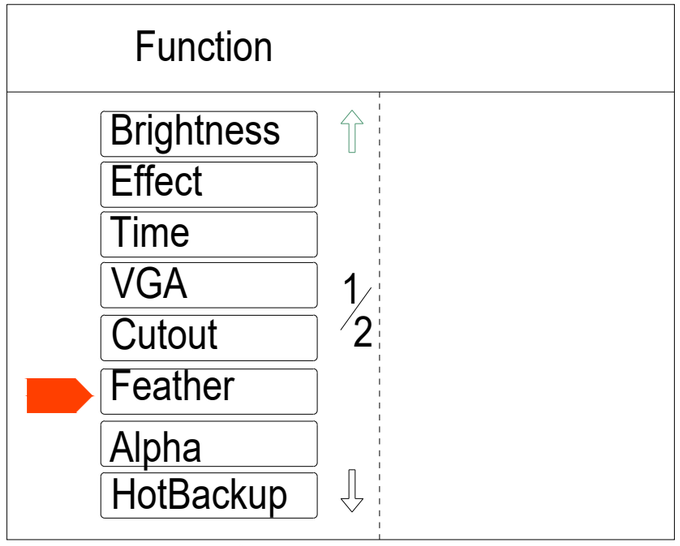

△Page 1



△Page 1 Chinese

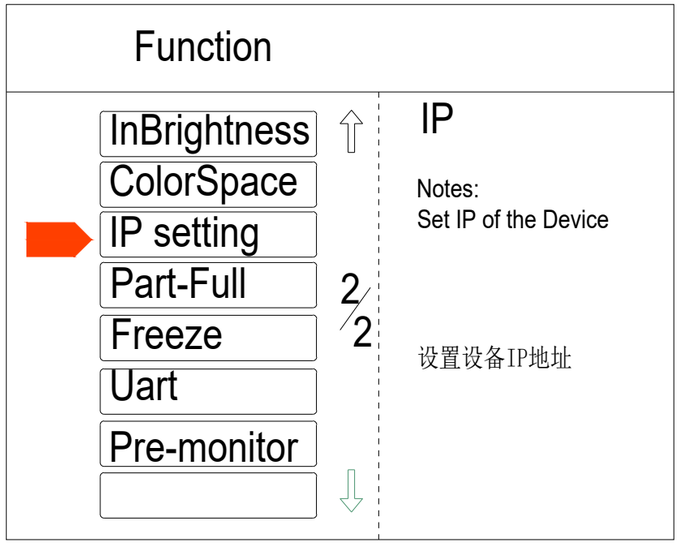

△Page 2

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

MAIN MENU-----MORE------Function Or Press FUNC to access .

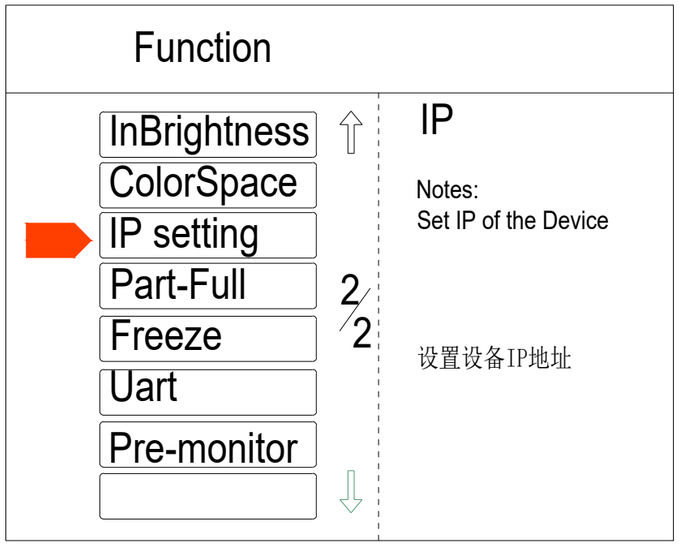

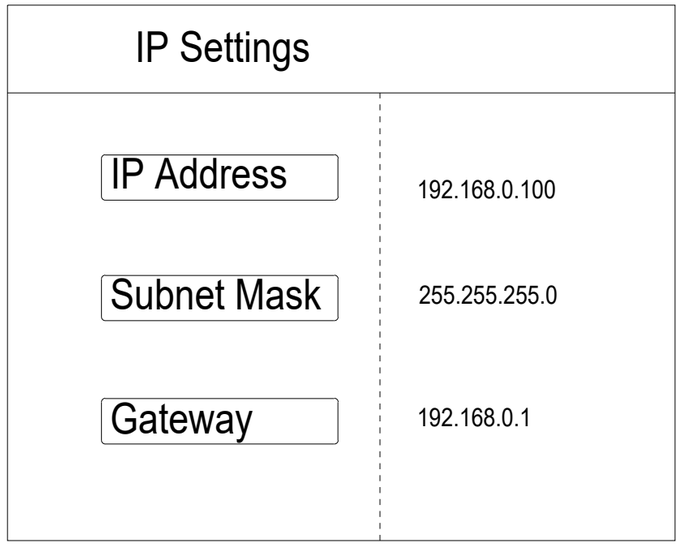

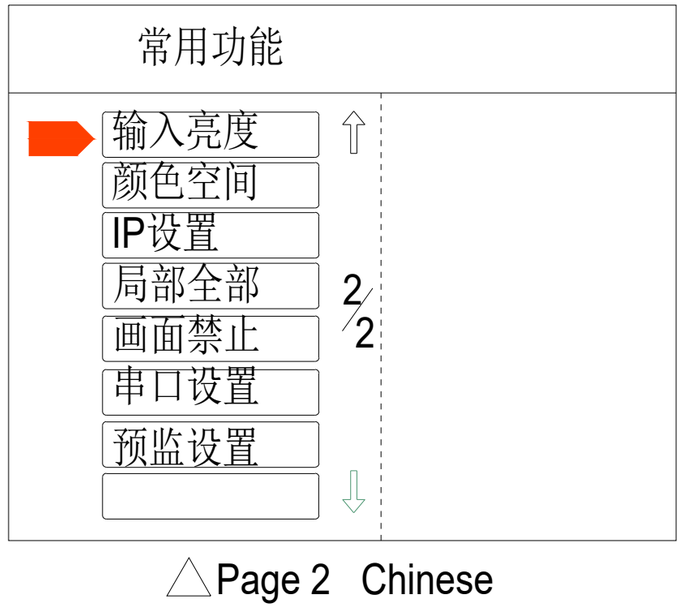

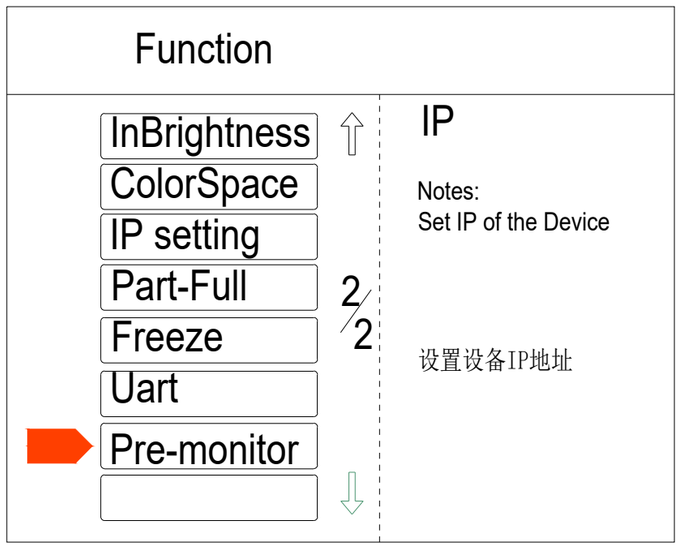

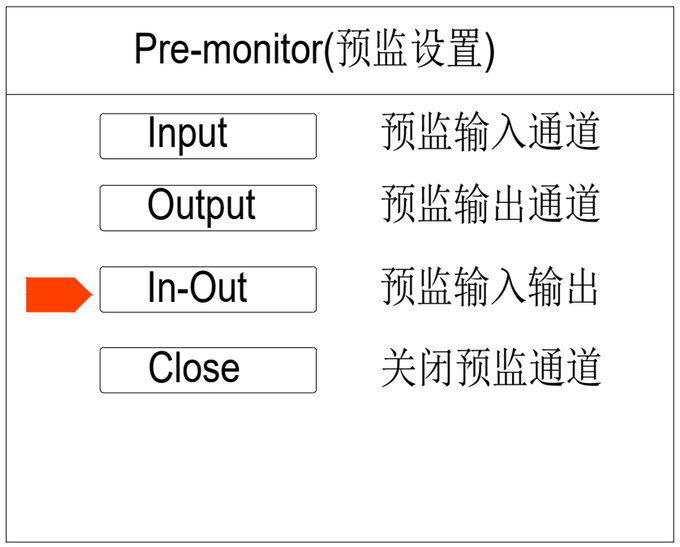

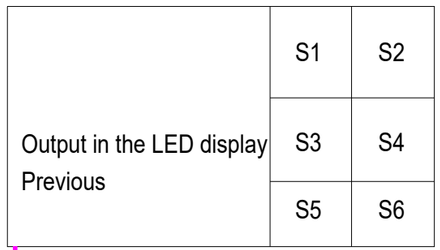

Computer Monitor (optional)

Pre-monitor(预监设置)

Pre-monitor(预监设置)

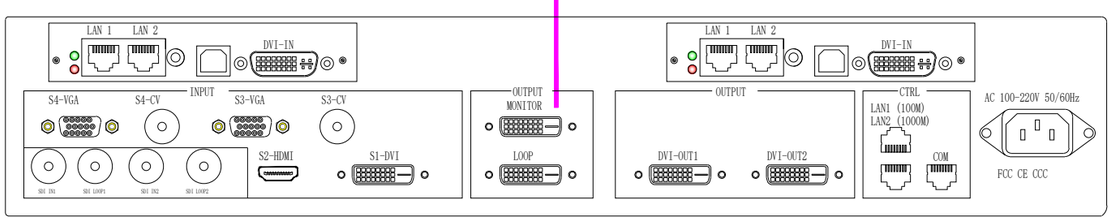

Shortcut Key in control plate introduction.

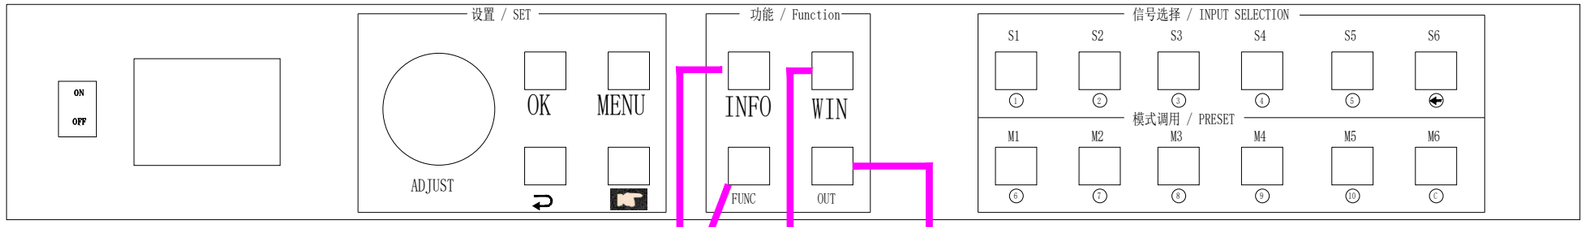

KS910P- InputSignal

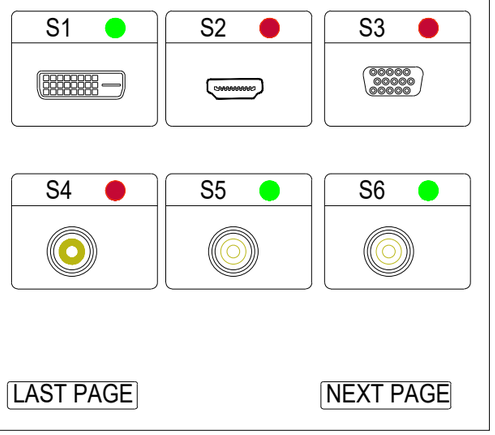

Window Switch

WIN 1	WIN 2	WIN 3
S5	S1	S2

Output Status

Black	黑屏
Bule	蓝屏
Normal	正常

KS910P- InputSignal

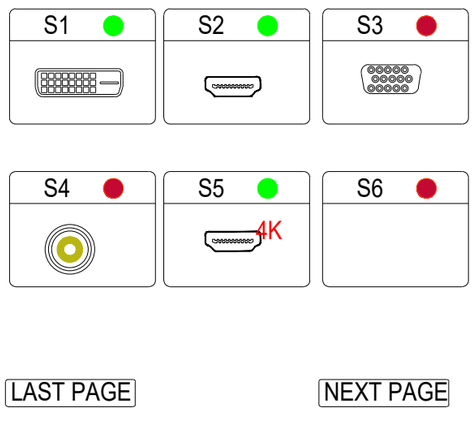

Function

- Brightness
- Effect
- Time
- VGA
- Cutout
- Feather
- Alpha
- HotBackup

1/2

Function

- InBrightness
- ColorSpace
- IP setting
- Part-Full
- Freeze
- Uart
- Pre-monitor

2/2

IP

Notes:
Set IP of the Device

设置设备IP地址

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.

1) One sending card supports 1,300,000 dots.
2) one Ethernet port of MSD300 sending card support 650,000 dots.
3) 72PCS P3.91 is 1536*1536=2,359,296 we need two MSD300 sending card to support this led screen.

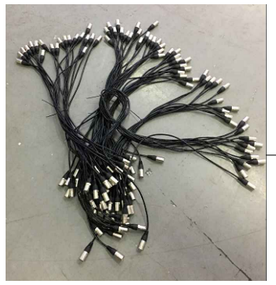



Long signal cable



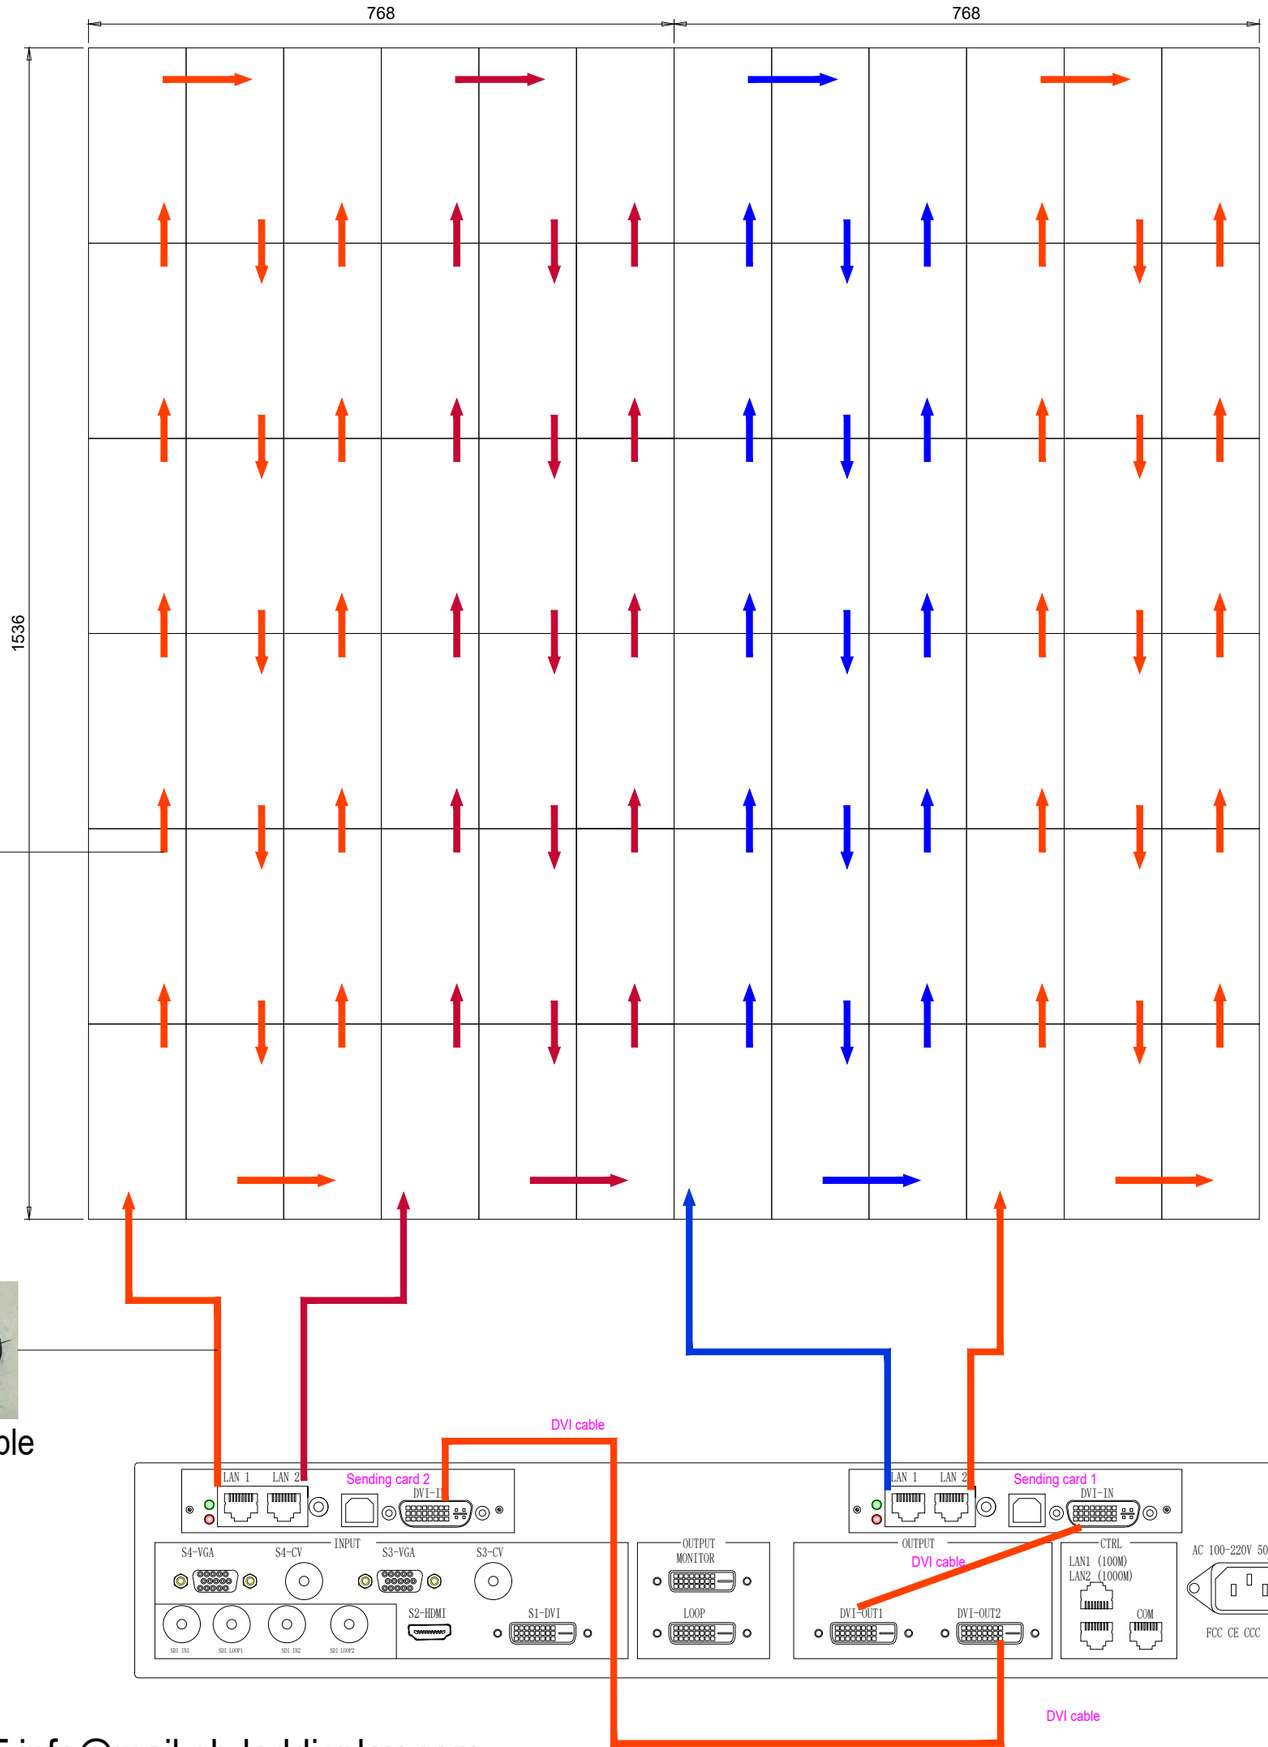

P3.91 500*1000mm 72PCS 12*6 layout.

MAIN MENU-----MORE----Resolution Set single DVI output resolution

MORE

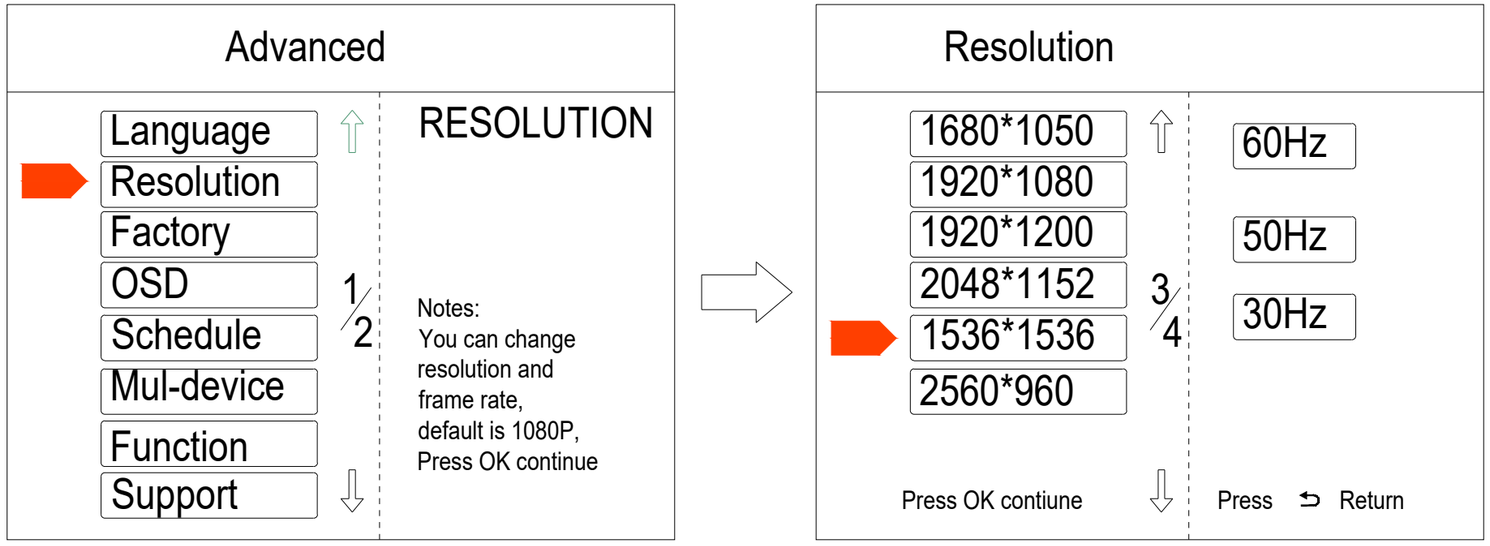

Choose 1536*1536

MAIN MENU------DEVICE

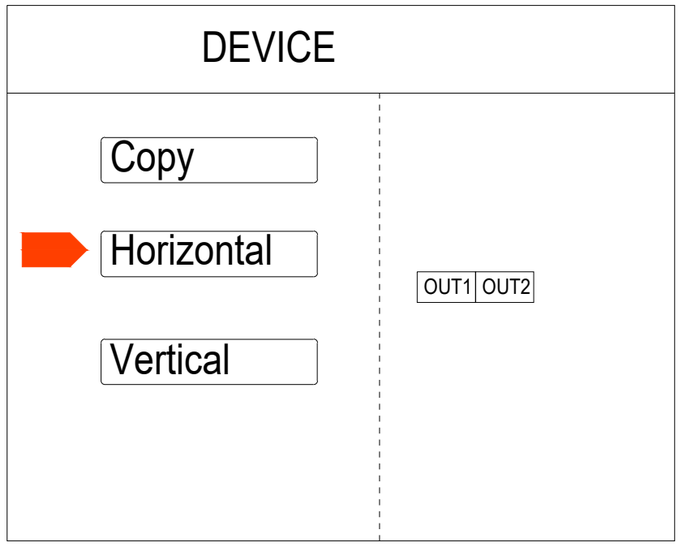

Choose Horizontal

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.

MAIN MENU------SCREEN

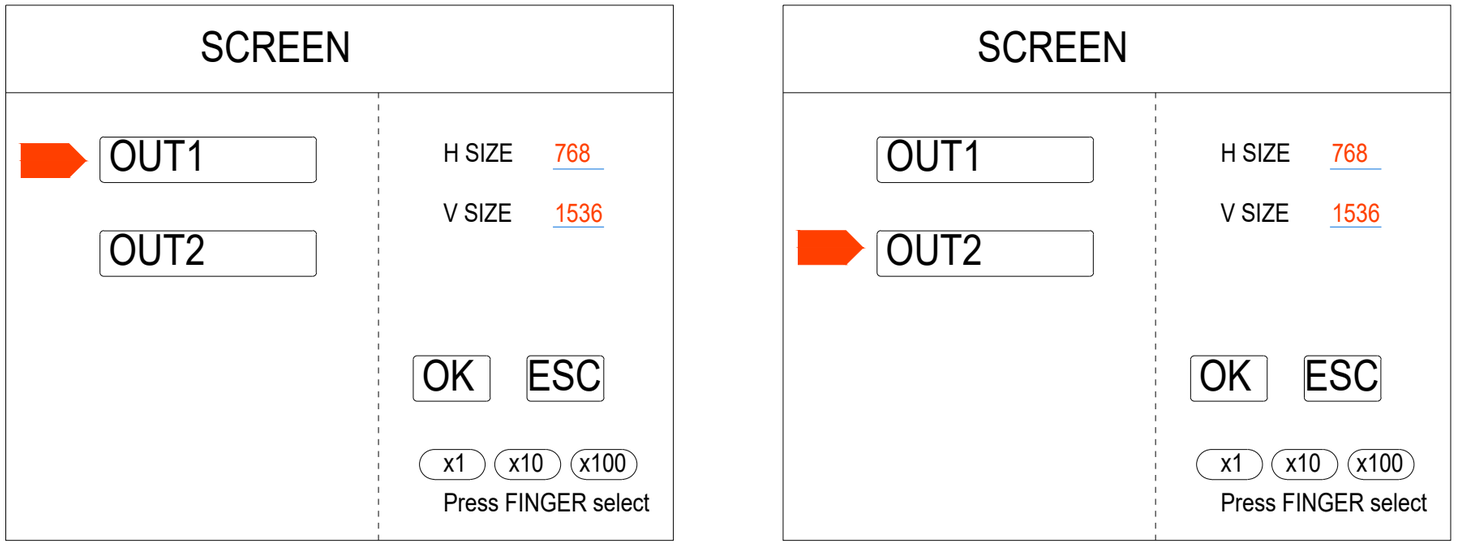

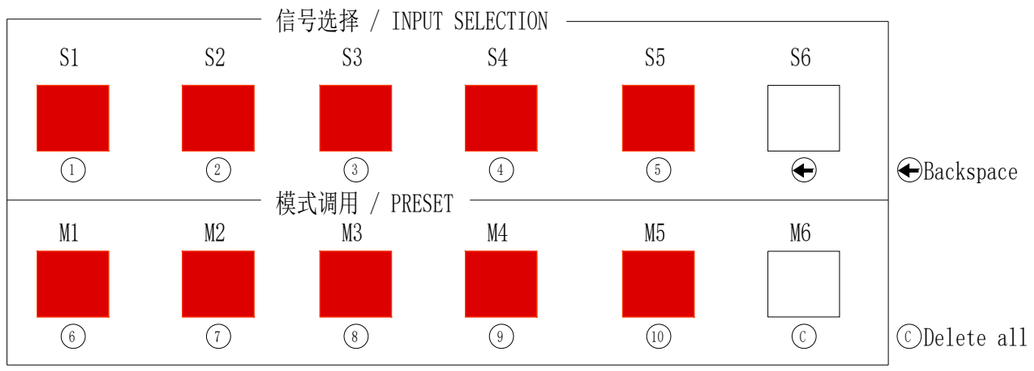

Numbers input

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.

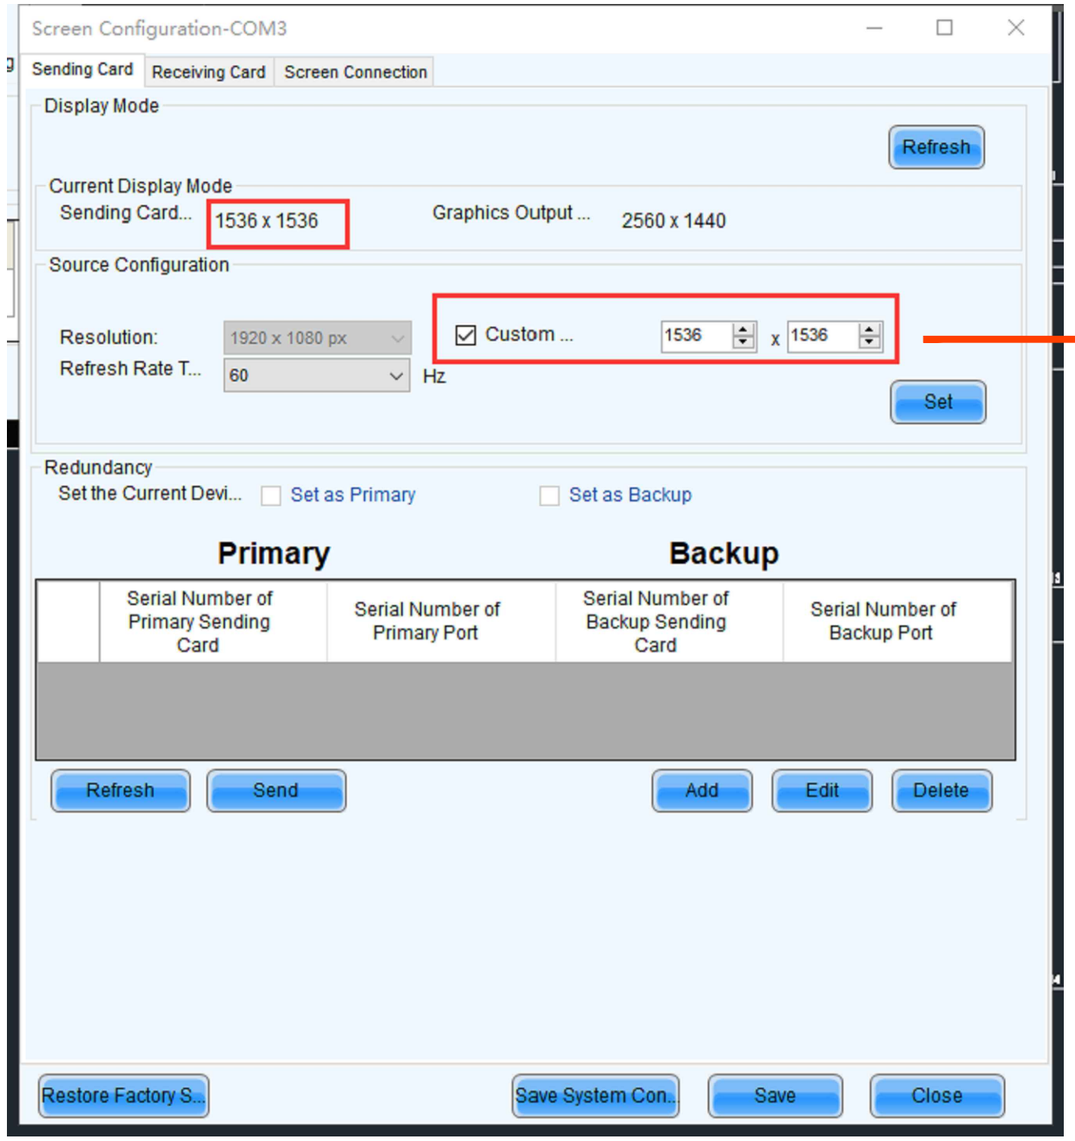

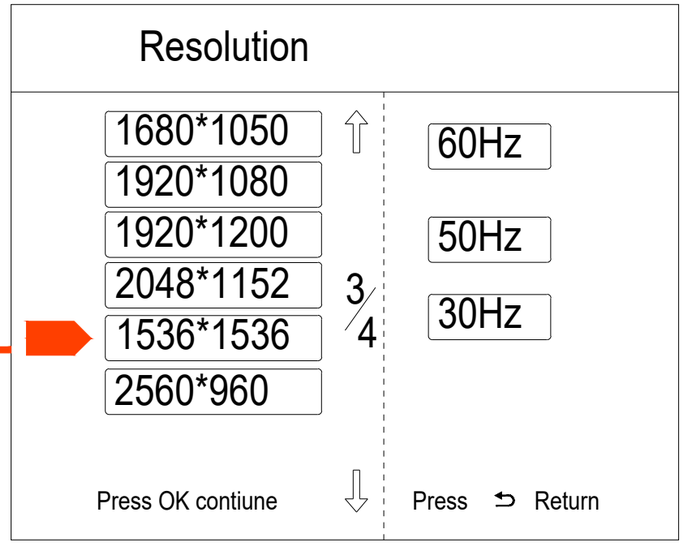

In the NovaLct Mars

1) Resolution=1536*1536
2) it is same with led video processor output resolution

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.

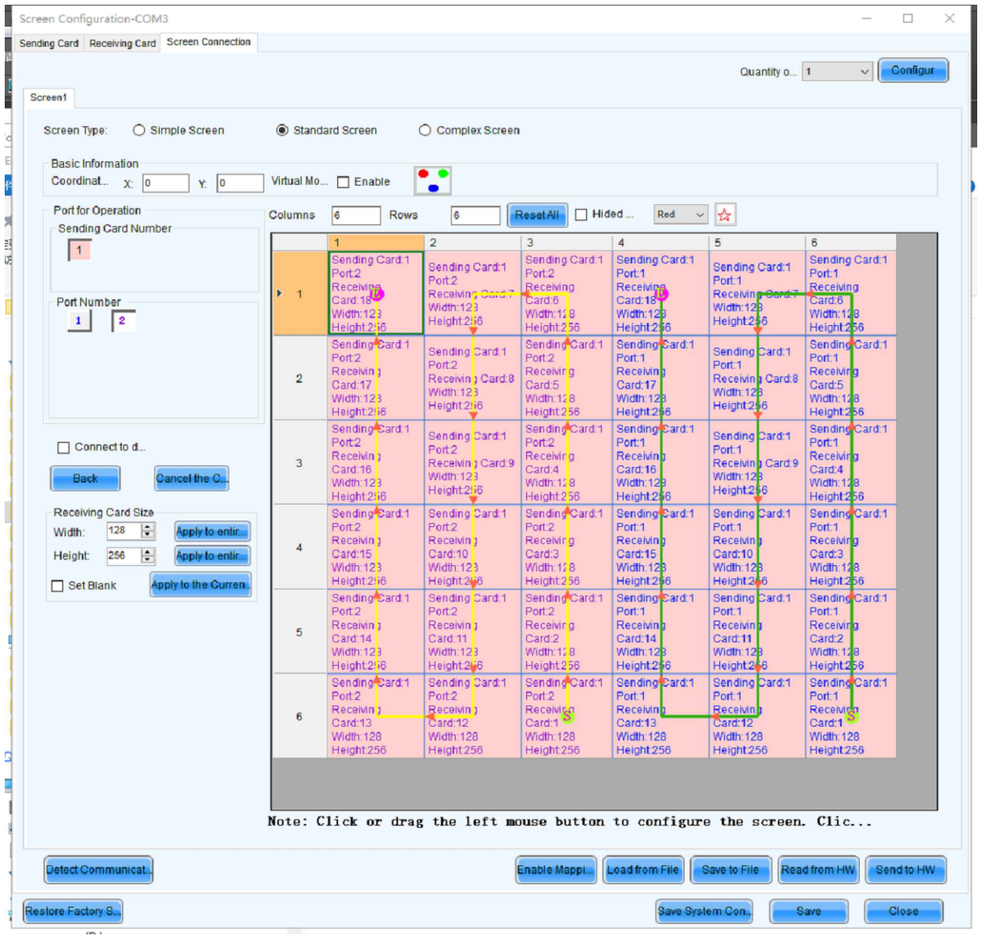





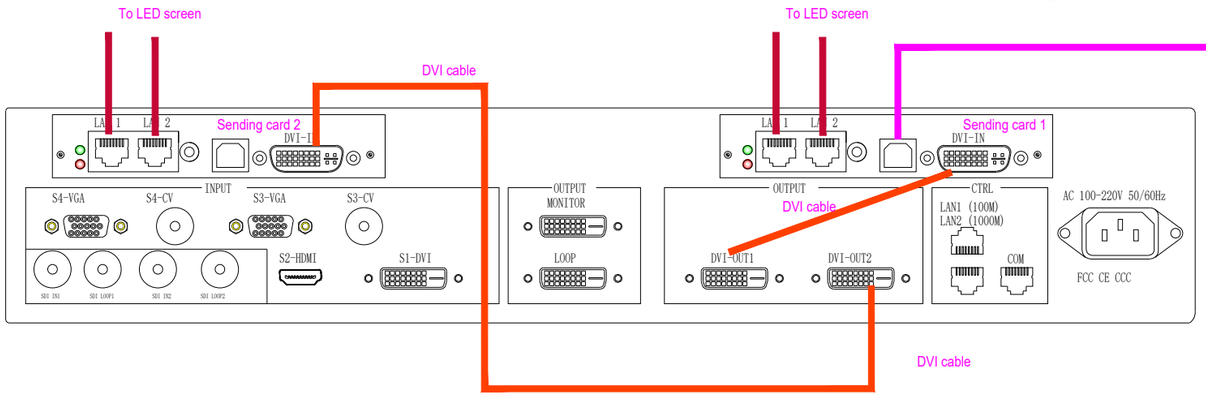

In the NovaLct Mars

Set the sending card one connection map

1) Connect sending card one and PC with USB cable. Don't connect sending card two meanwhile with USB cable.
2) After finish, save your settings.

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.

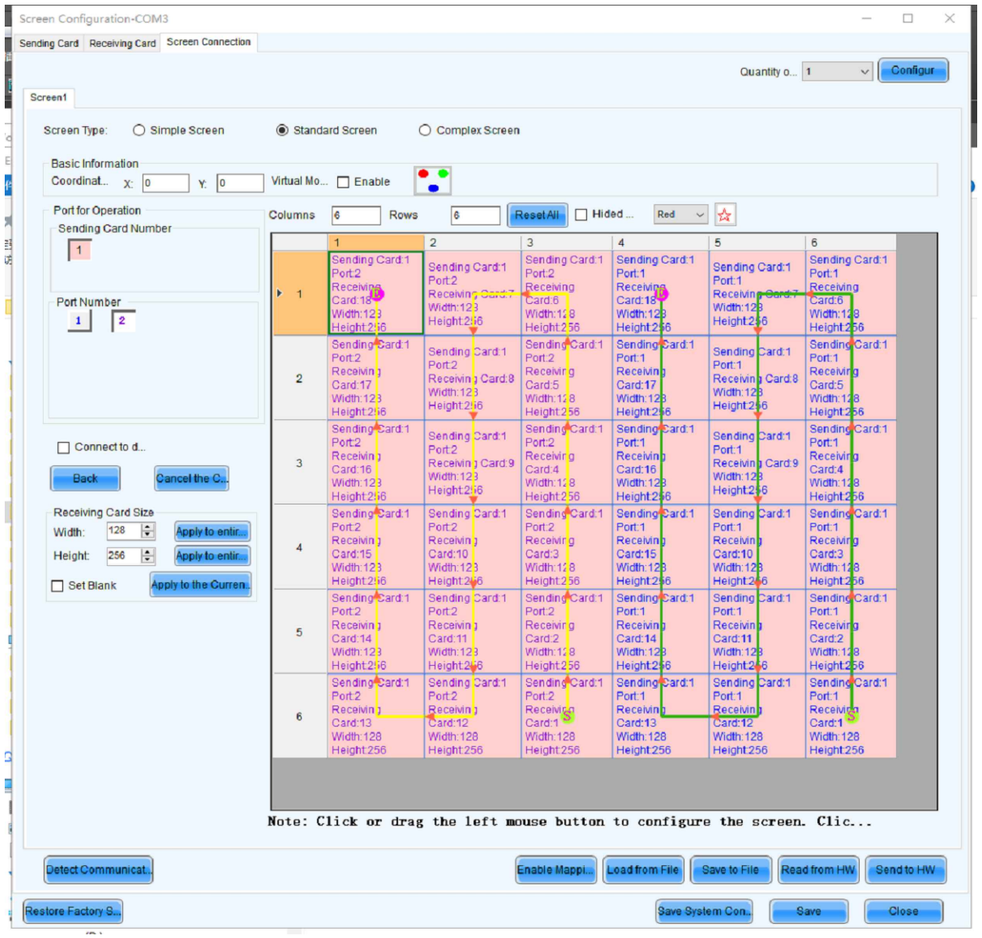





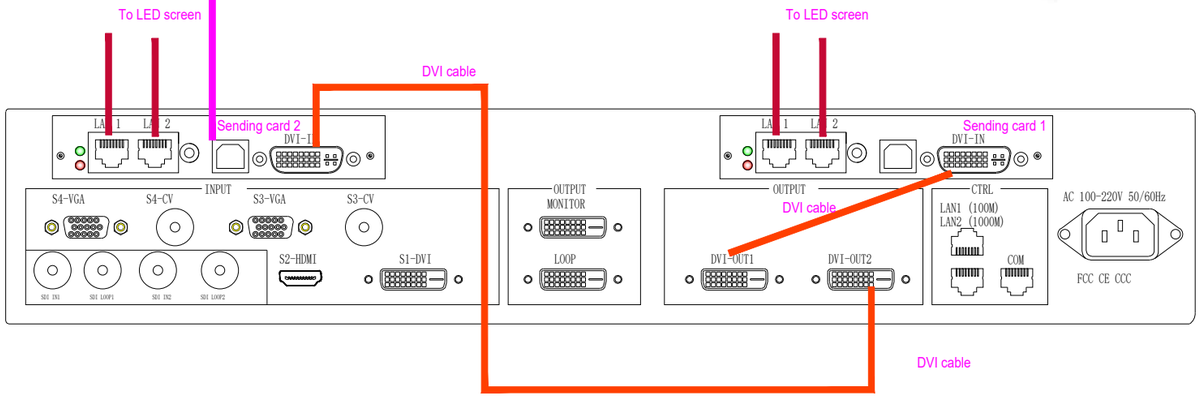

In the NovaLct Mars

Set the sending card two connection map

1) Connect sending card two and PC with USB cable. Don't connect sending card one meanwhile with USB cable.
2) After finish, save your settings.

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.

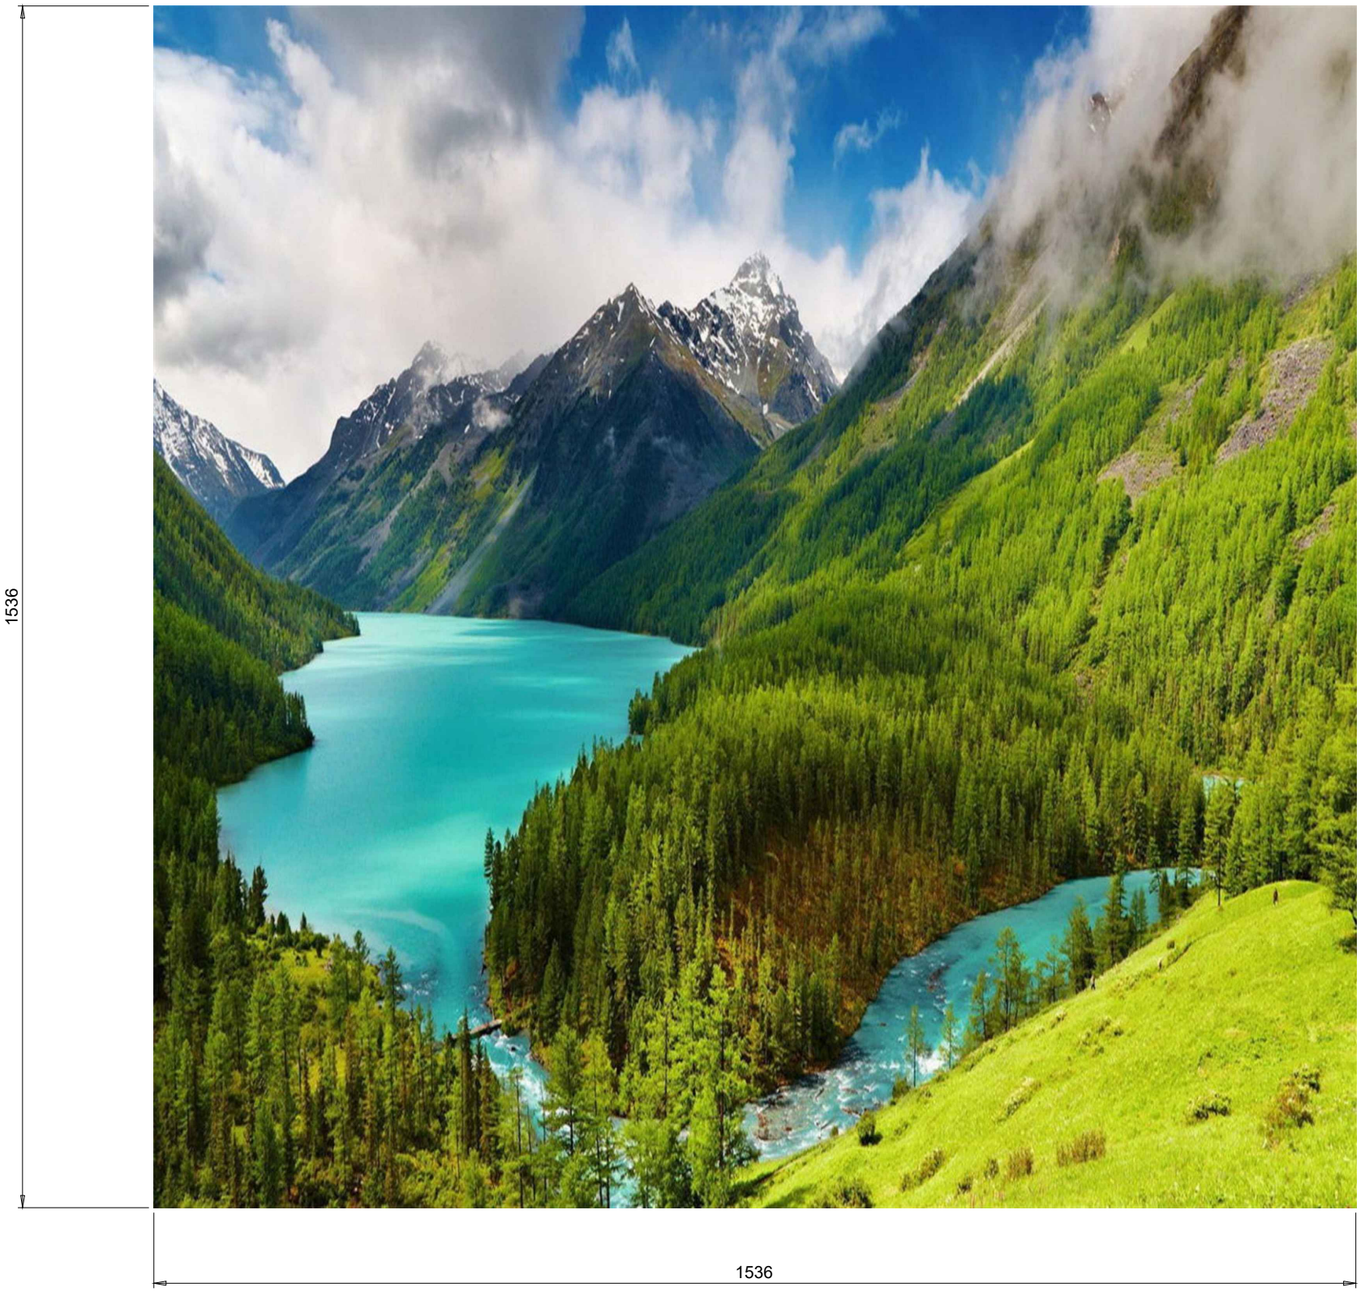

The LED screen will show a fit full picture.

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.

MAIN MENU-----SAVE

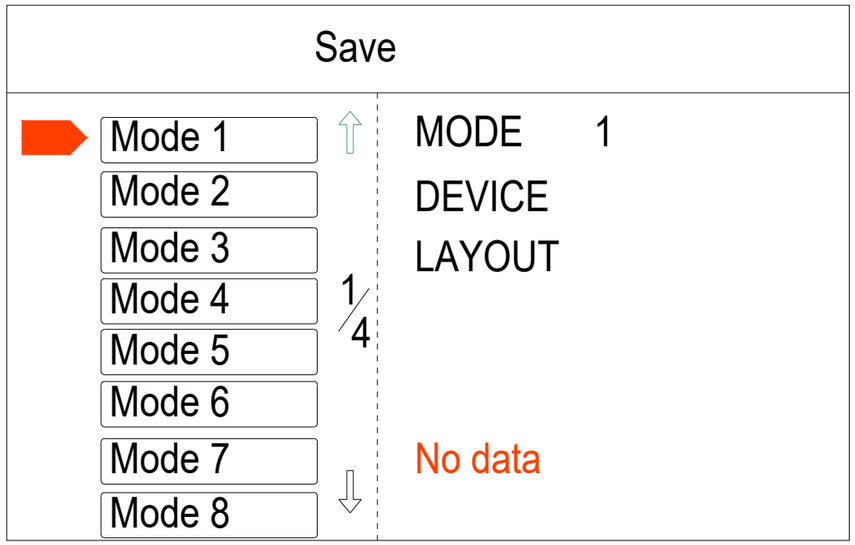

Mode 1 does not have saved data

MAIN MENU-----SAVE

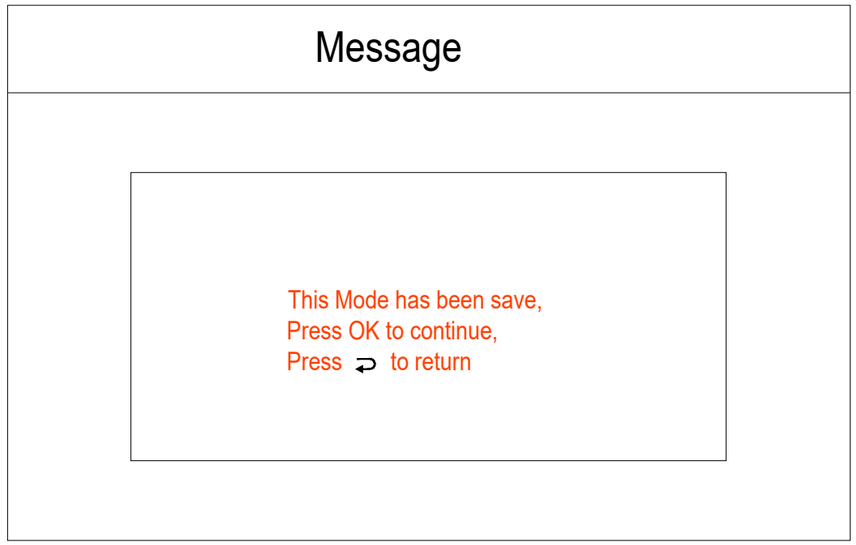

Press ADJUST

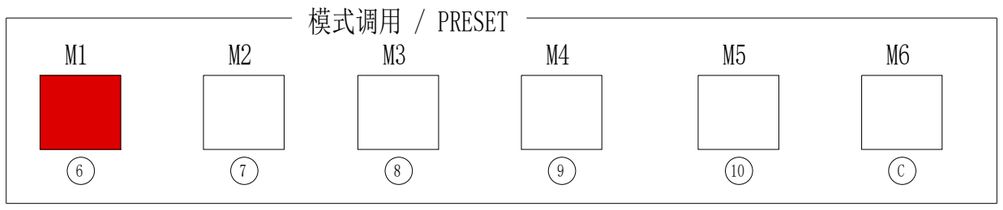

The shortcut key for using saved mode

There are 32 Modes for saving , and 6 shortcut mode(M1,M2.....M6) quick call.

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.
Three windows



Three windows
1) You can place three different inputting, such as HDMI , DVI(HDMI-DVI), SDI.
2) Or you can place three same inputting.

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.
Three windows

MAIN MENU------LAYOUT

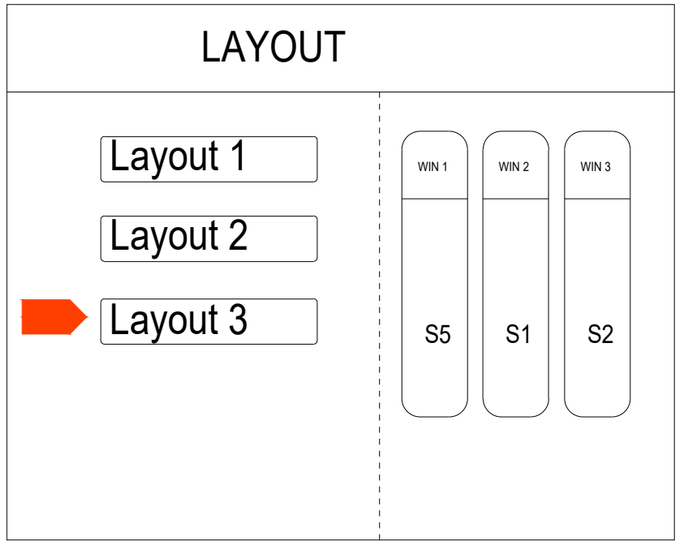

MAIN MENU-----SCALER

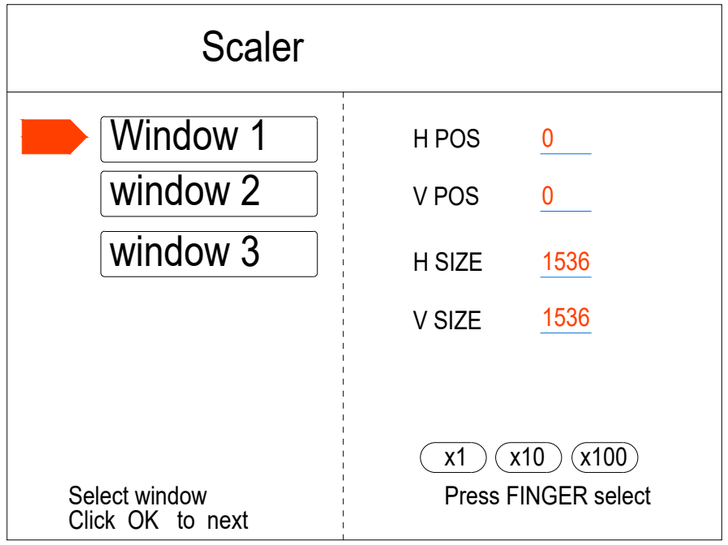

MAIN MENU-----SCALER

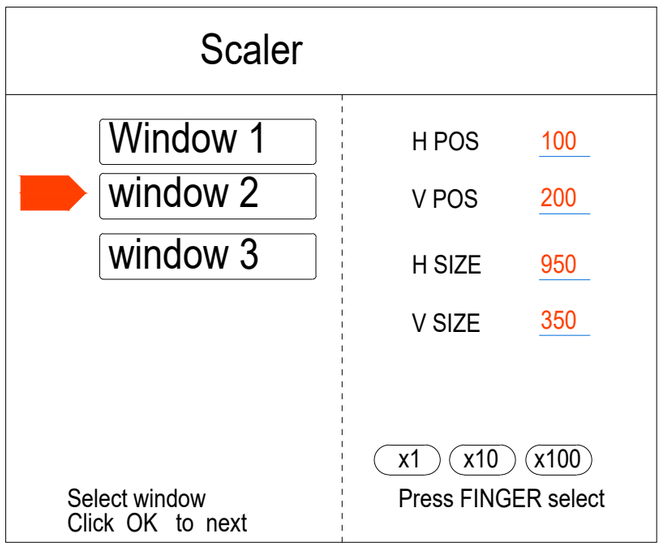

MAIN MENU-----SCALER

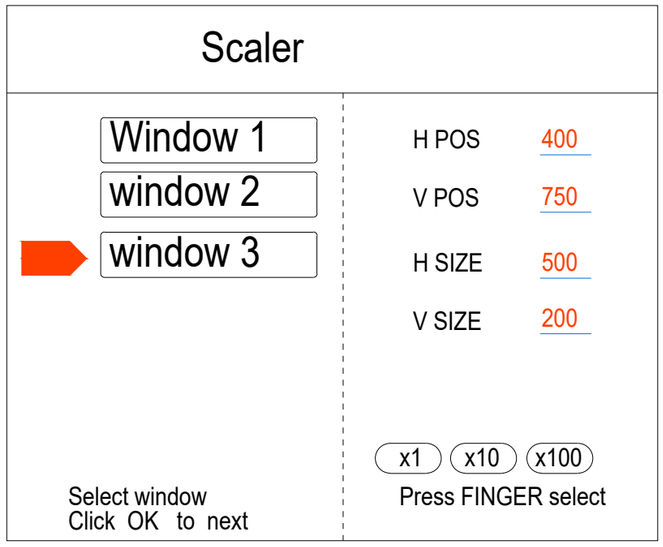

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

KS910P introduction

P3.91 500*1000mm 72PCS 12*6 layout.
Three windows

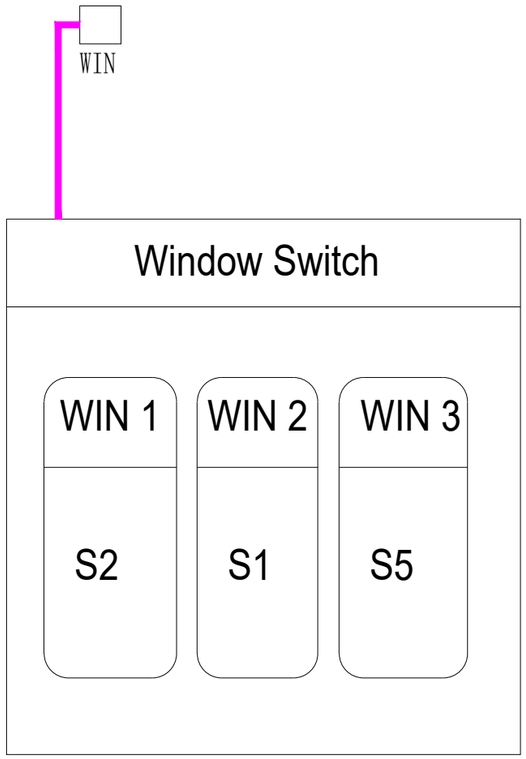

MAIN MENU-----SAVE

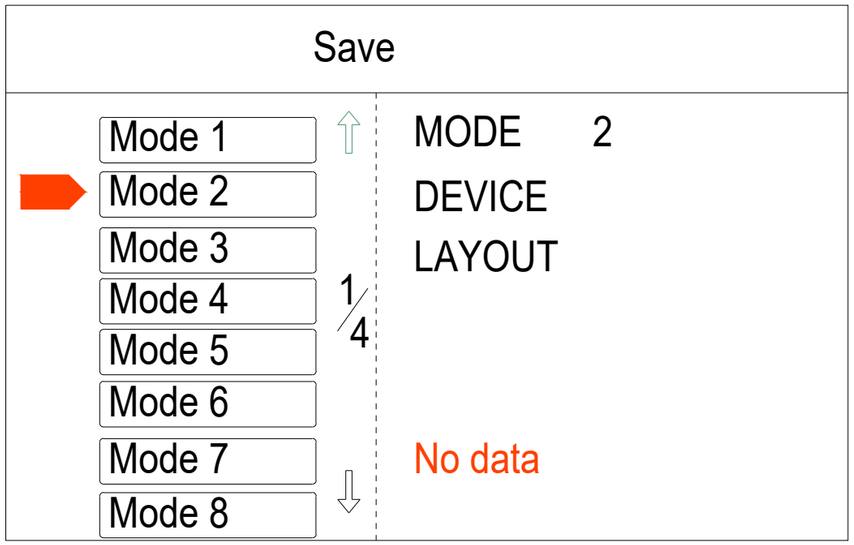

Mode 1 does not have saved data

MAIN MENU-----SAVE



Press ADJUST

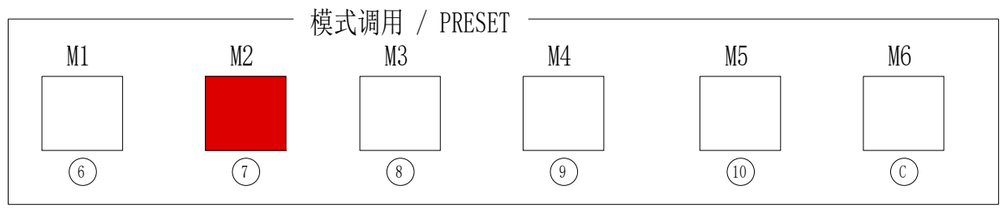

The shortcut key for using saved mode

There are 32 Modes for saving , and 6 shortcut mode(M1,M2.....M6) quick call.

KS910P introduction

P3.91 500*500mm 48PCS 8*6 layout.
one windows 1024*768.
One MSD300 sending card is enough.

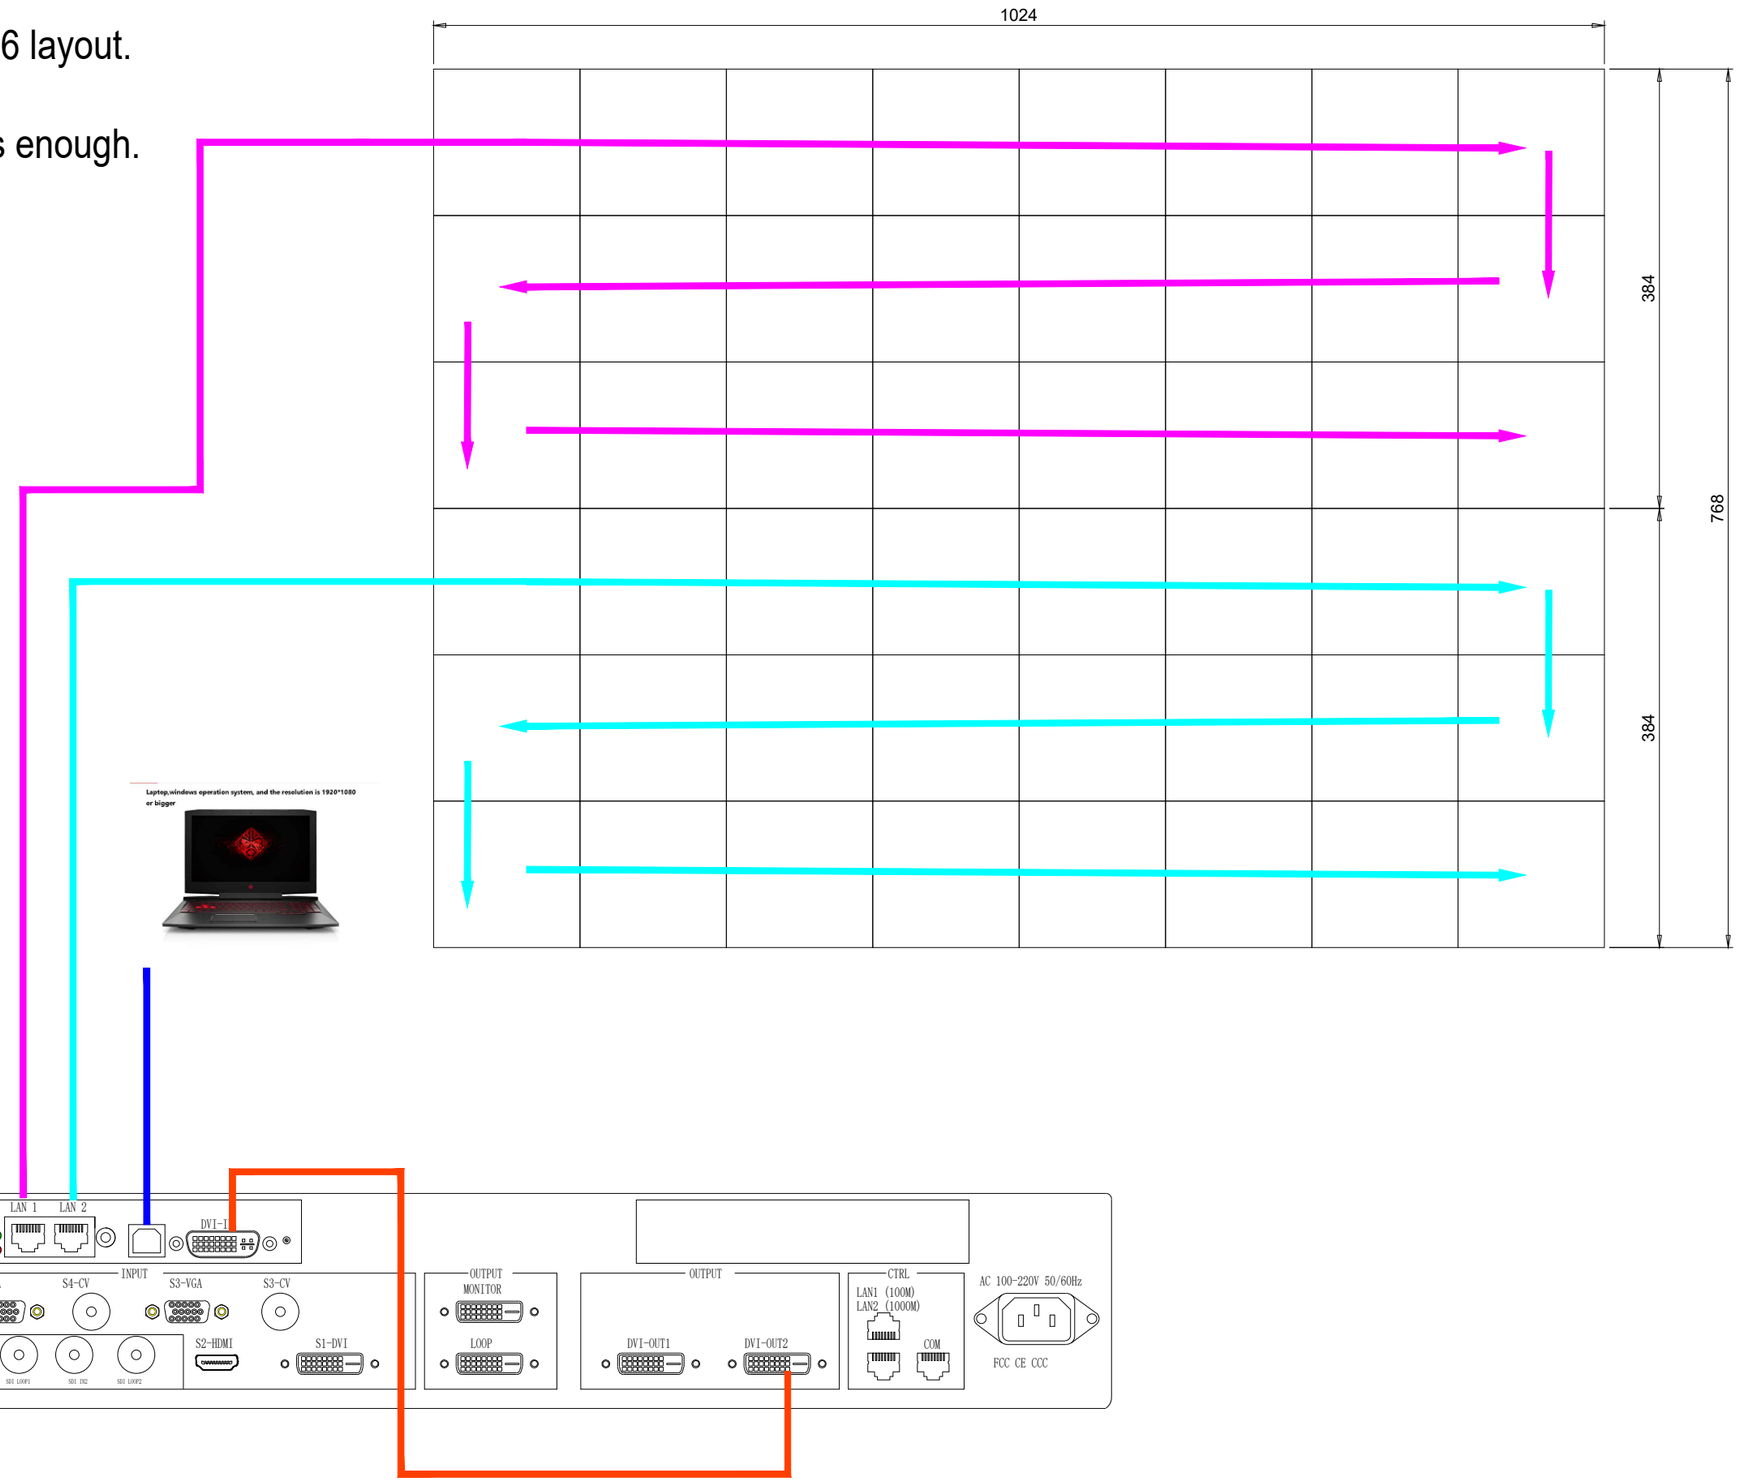

KS910P introduction

P3.91 500*500mm 48PCS 8*6 layout. 1024*768
one windows

MAIN MENU------DEVICE

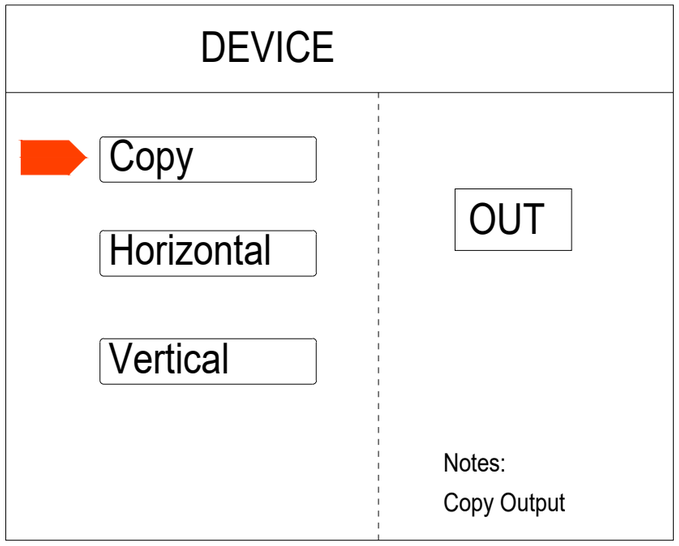

Choose Copy

MAIN MENU-----MORE----Resolution
Set single DVI output resolution

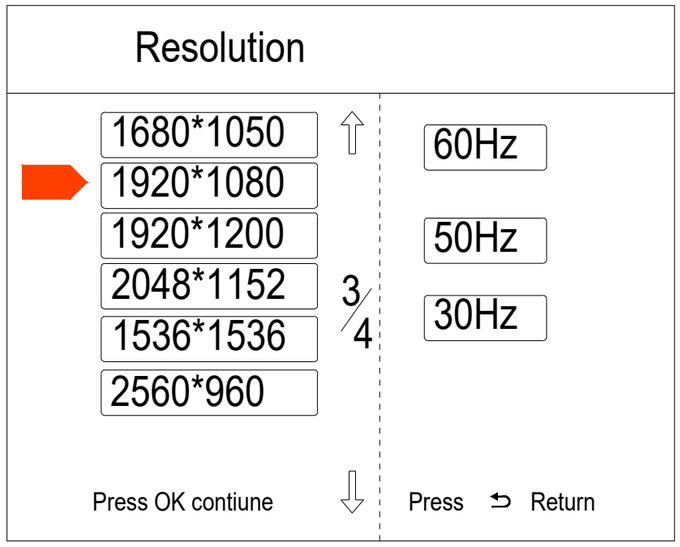

Choose 1920*1080

MAIN MENU------LAYOUT

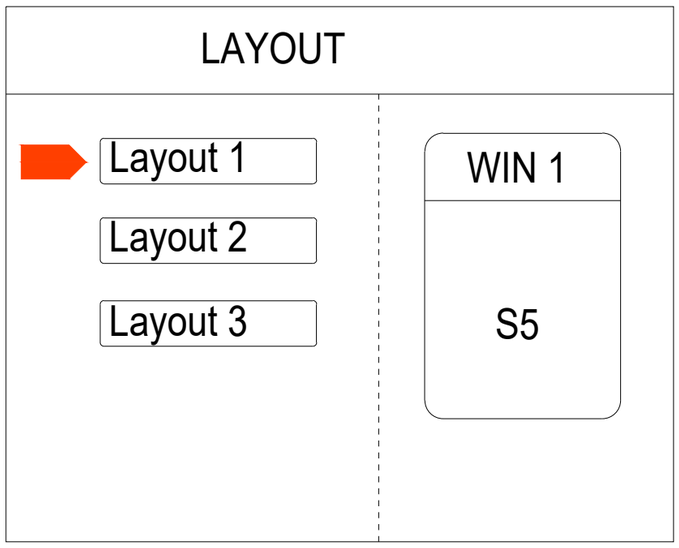

Choose Layout 1, one window

MAIN MENU------SCREEN

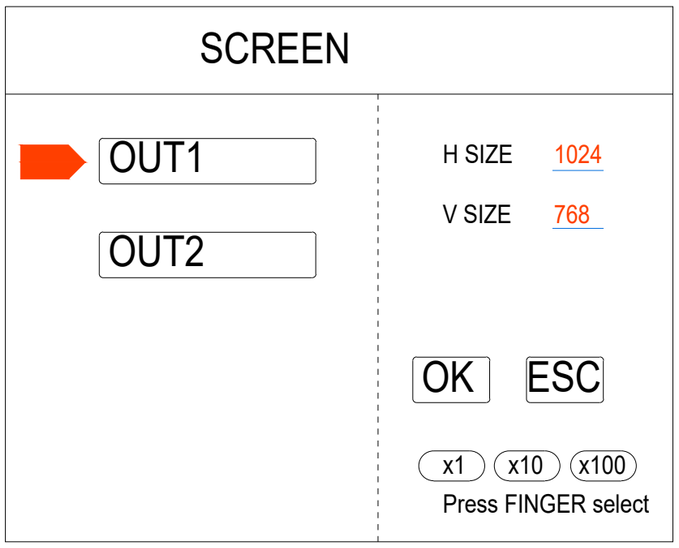

Set LED screen resolution , Because we choose copy mode, only Setting Out1 is enough.

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

KS910P introduction

P3.91 500*500mm 48PCS 8*6 layout. 1024*768
one windows

MAIN MENU-----SAVE

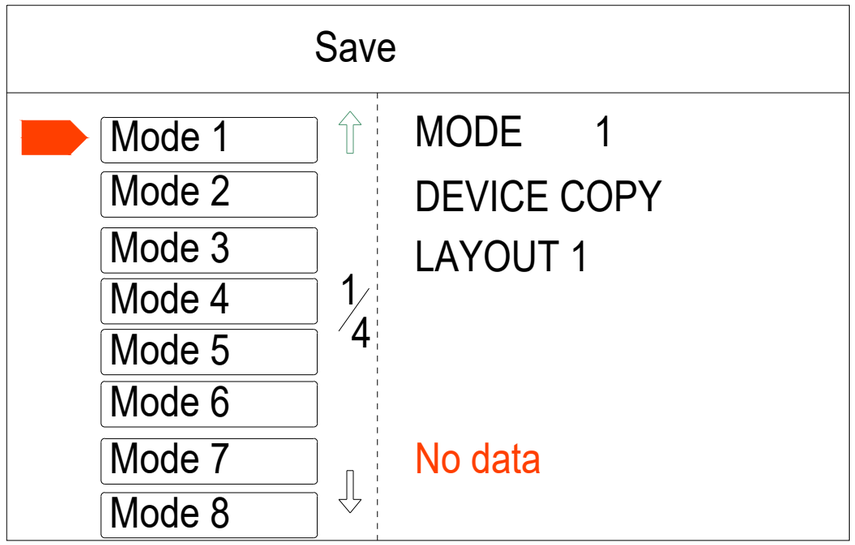

Mode 1 does not have saved data

MAIN MENU-----SAVE

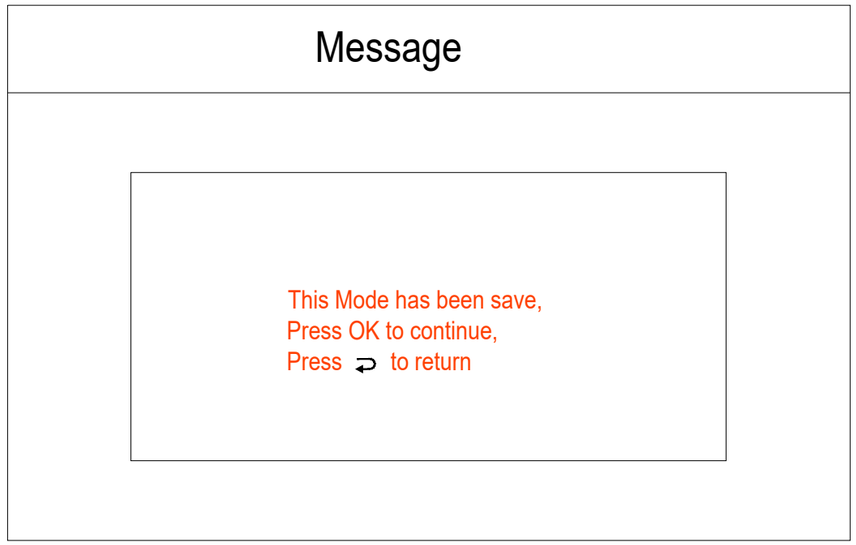

Press ADJUST

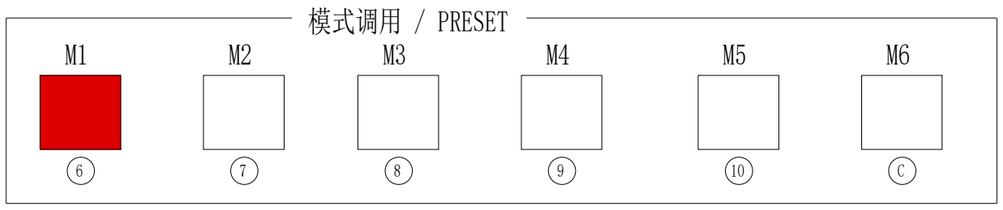

The shortcut key for using saved mode

There are 32 Modes for saving , and 6 shortcut mode(M1,M2.....M6) quick call.

KS910P introduction

P3.91 500*500mm 48PCS 8*6 layout. 1024*768
one windows

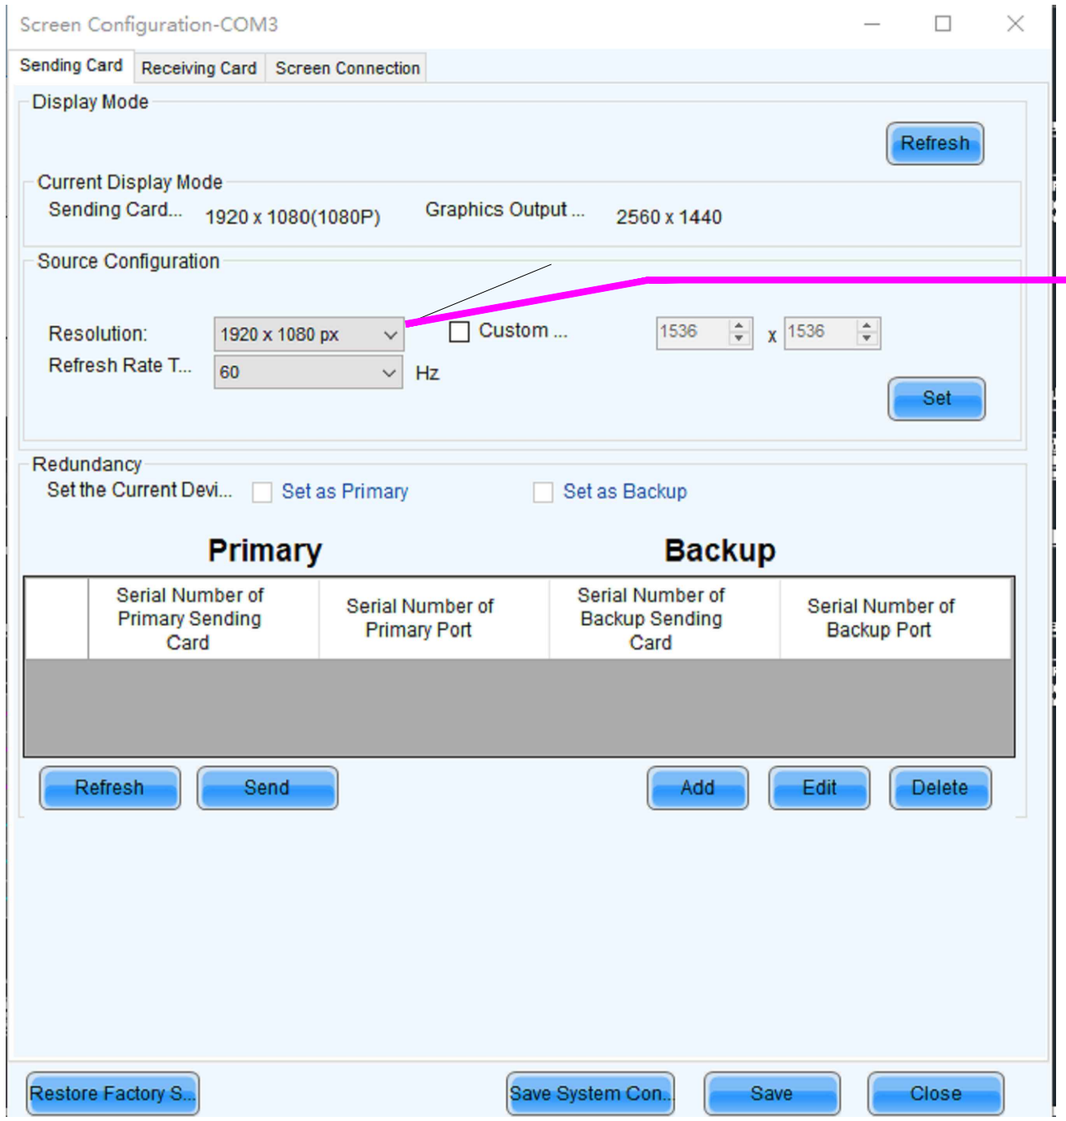

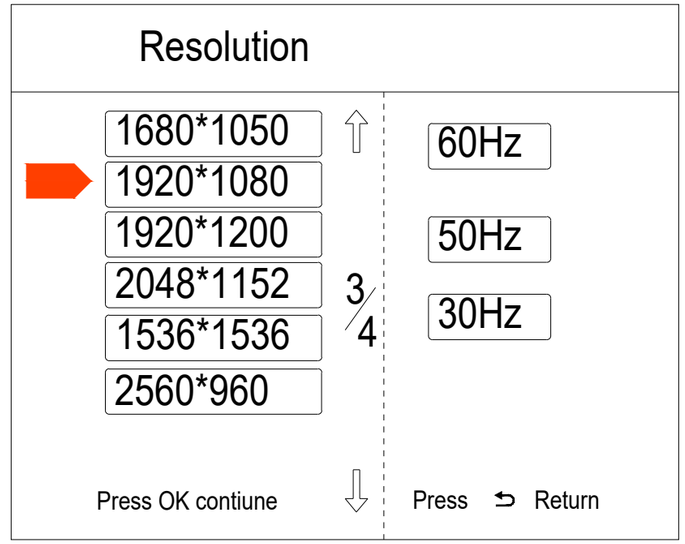

Choose 1920*1080

KS910P introduction

P3.91 500*500mm 48PCS 8*6 layout. 1024*768
one windows

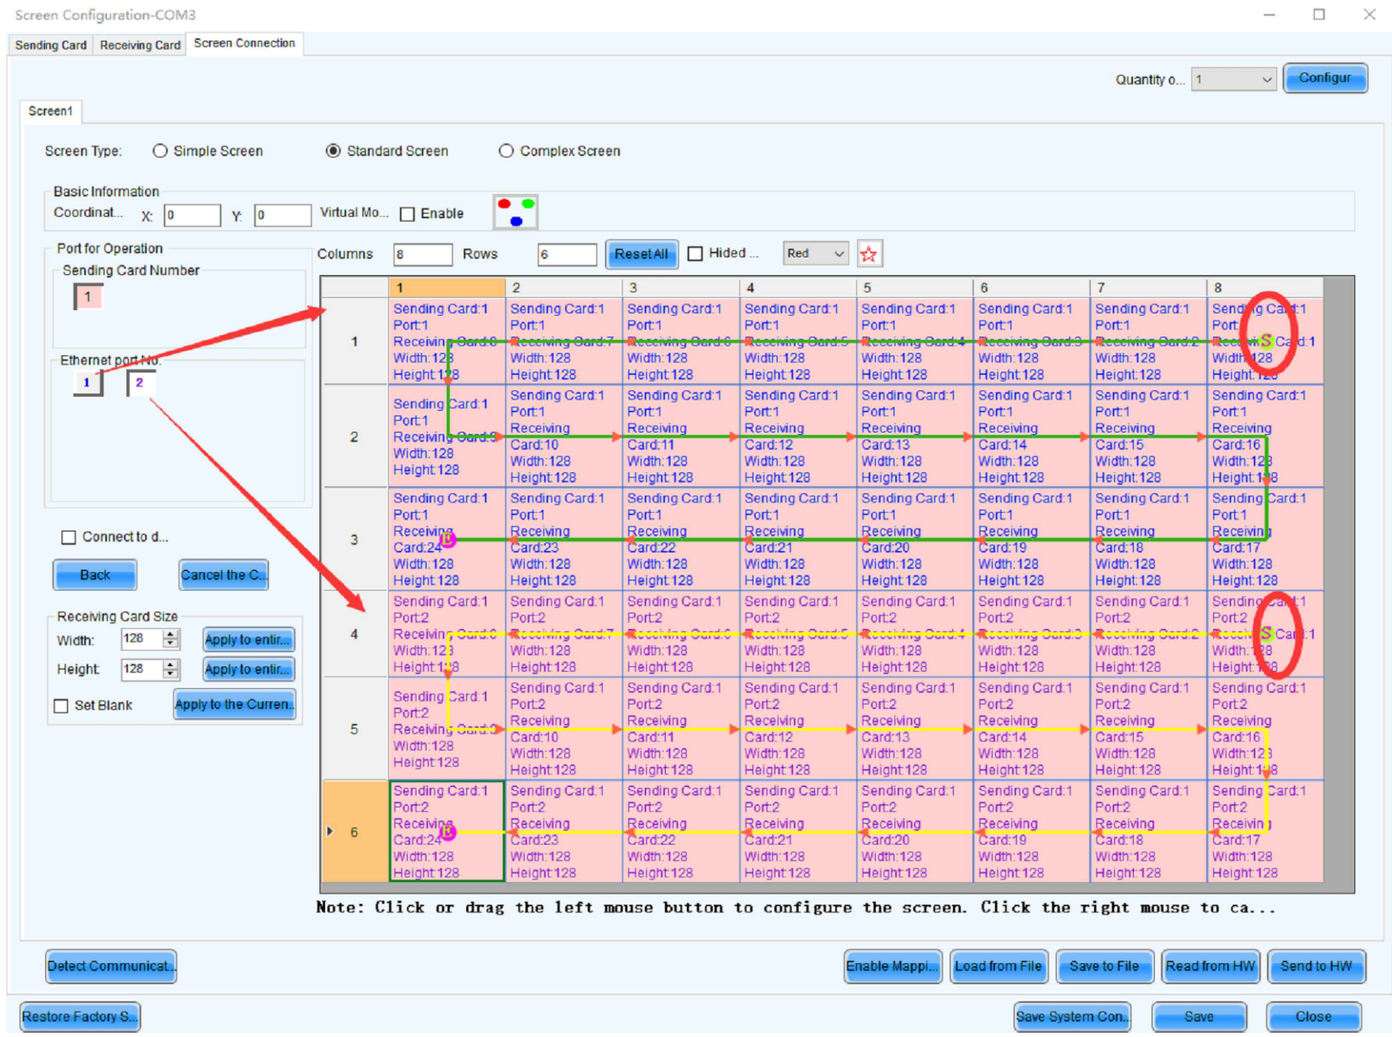

KS910P introduction

P3.91 500*500mm 48PCS 8*6 layout. 1024*768
one windows



The LED screen will show a fit full picture. 1024*768

Kystar Software setting

It is available for all Kystar products.(KS910P, KS920P, KS928,KS938,KS948)

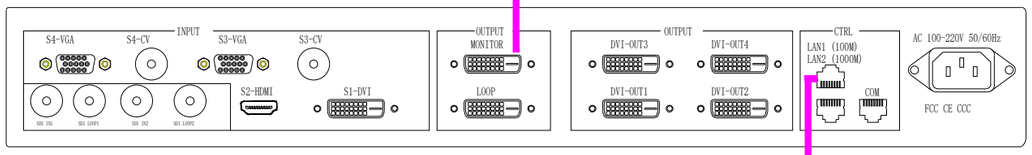

Output in the LED display	S1	S2
	S3	S4
	S5	S6

Computer Monitor (optional)





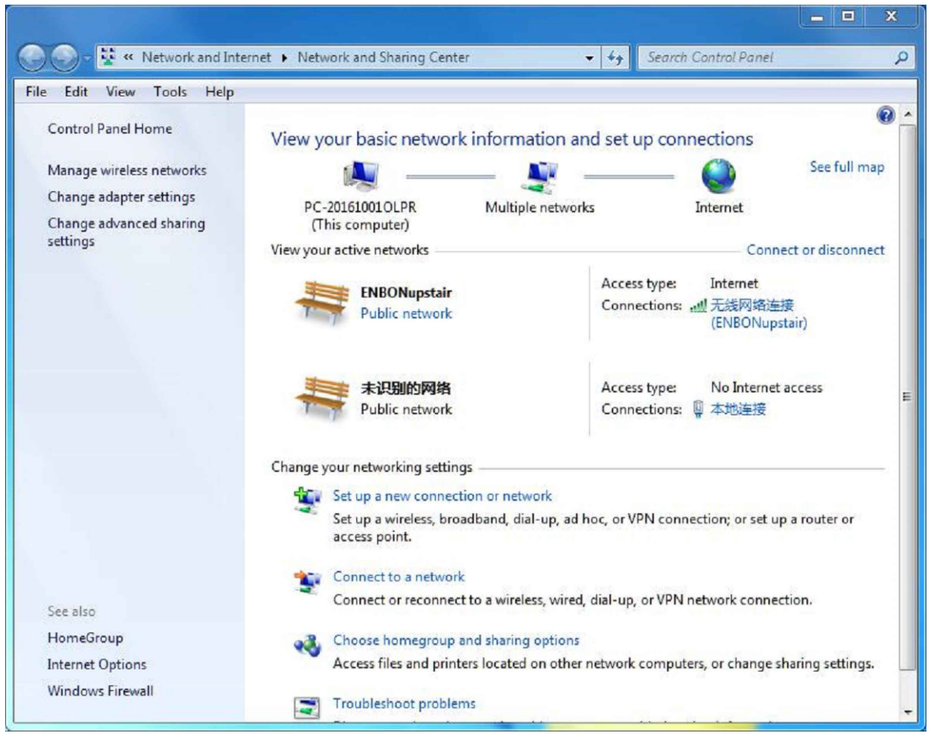

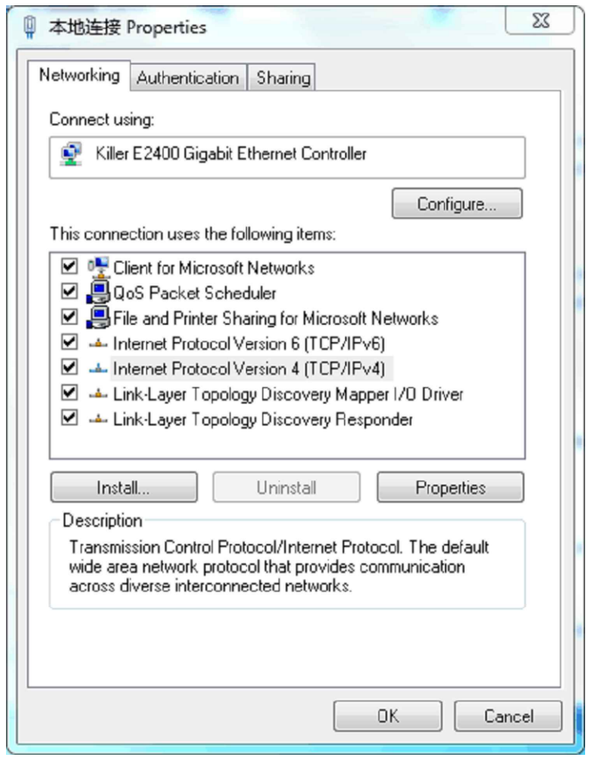

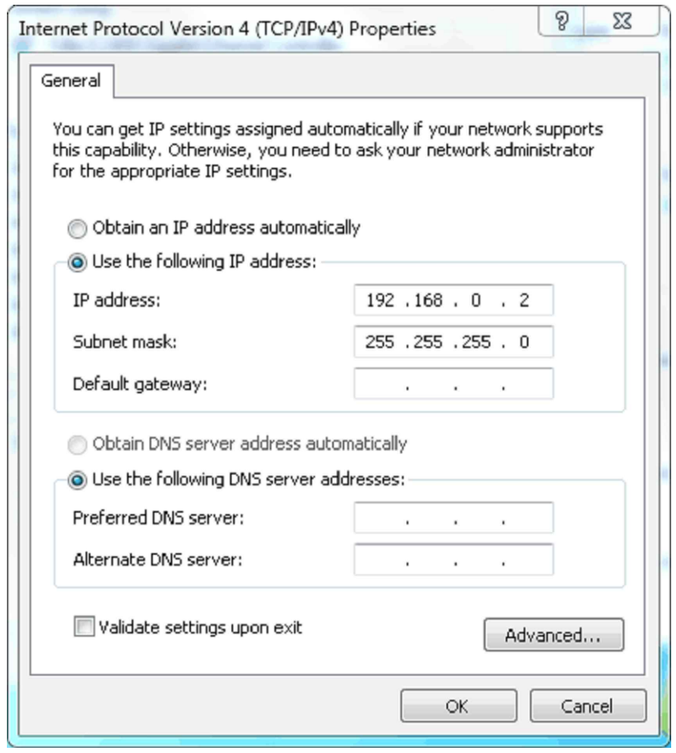

Computer Local connectivity setting.

—Kystar Software setting

It is available for all Kystar products.(KS910P, KS920P, KS928,KS938,KS948)

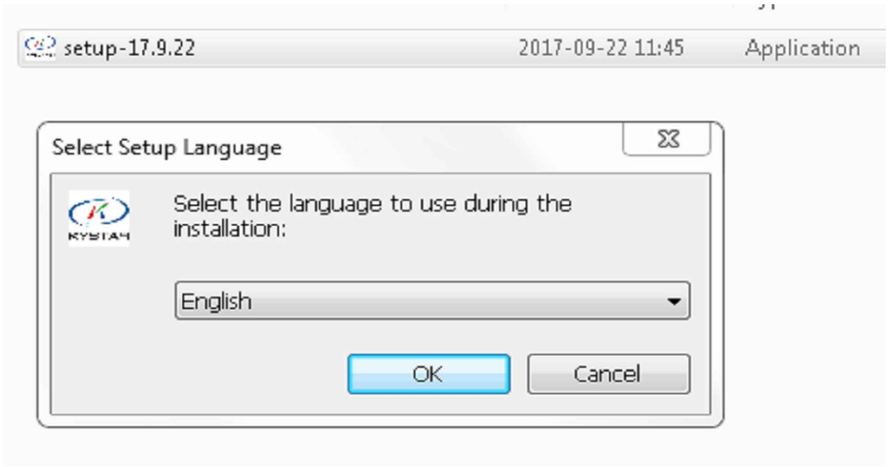





△ English Start interface



△ Chinese Start interface

—Kystar Software setting

Chang Chinese to English.

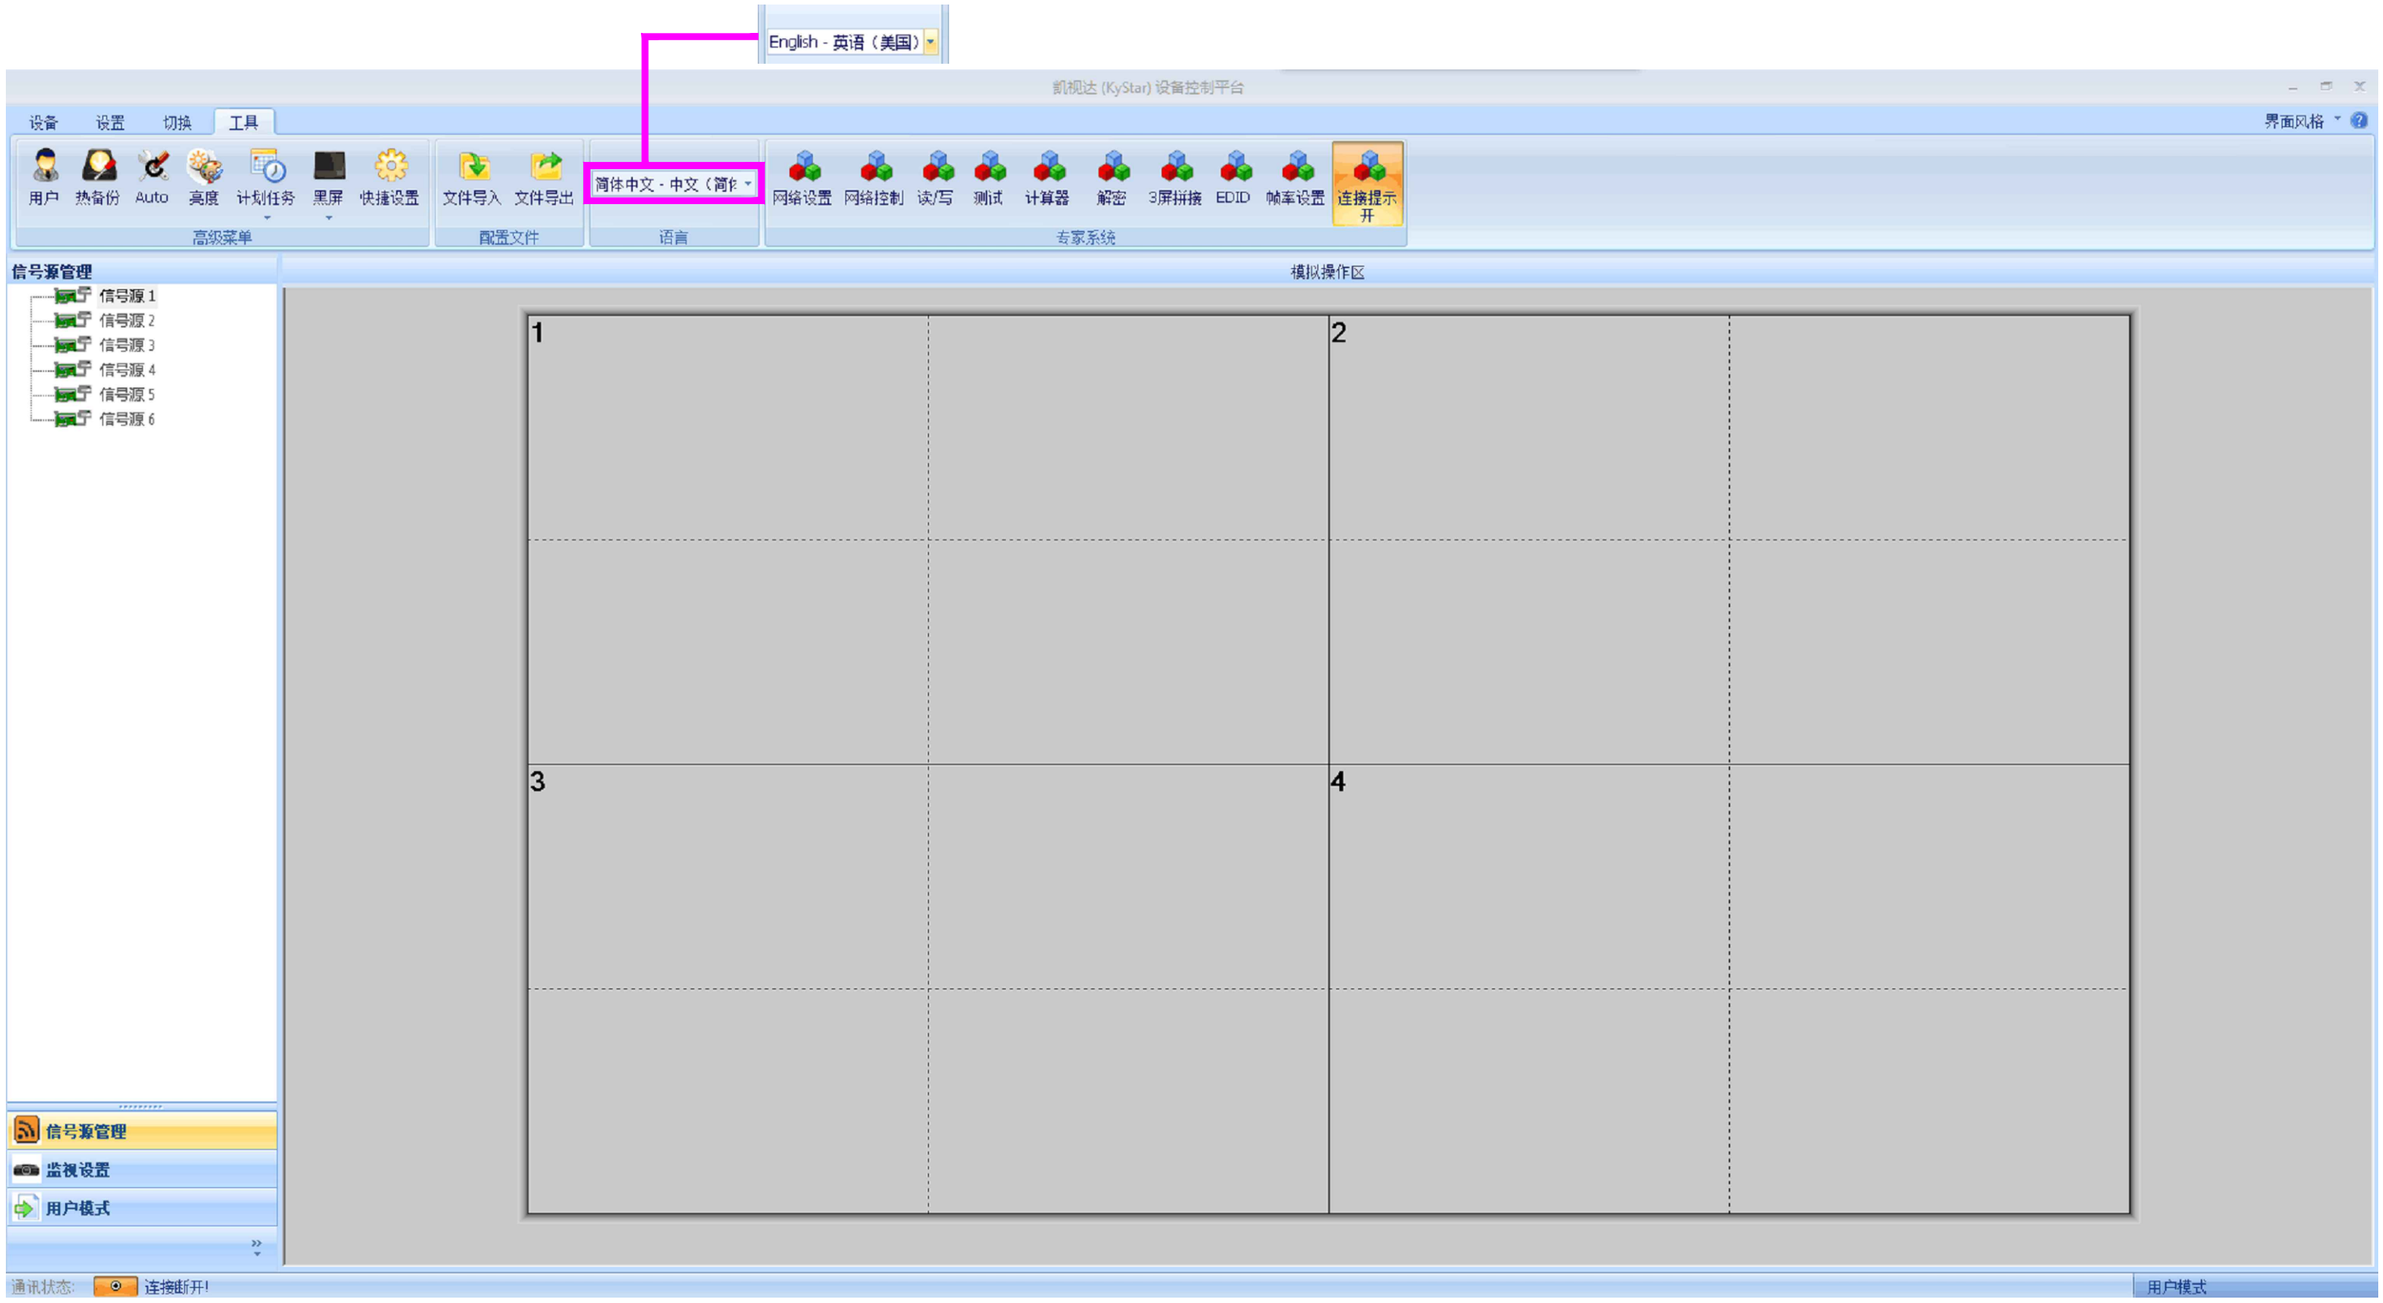

△ Chinese interface

—Kystar Software setting

Chang Chinese to English.

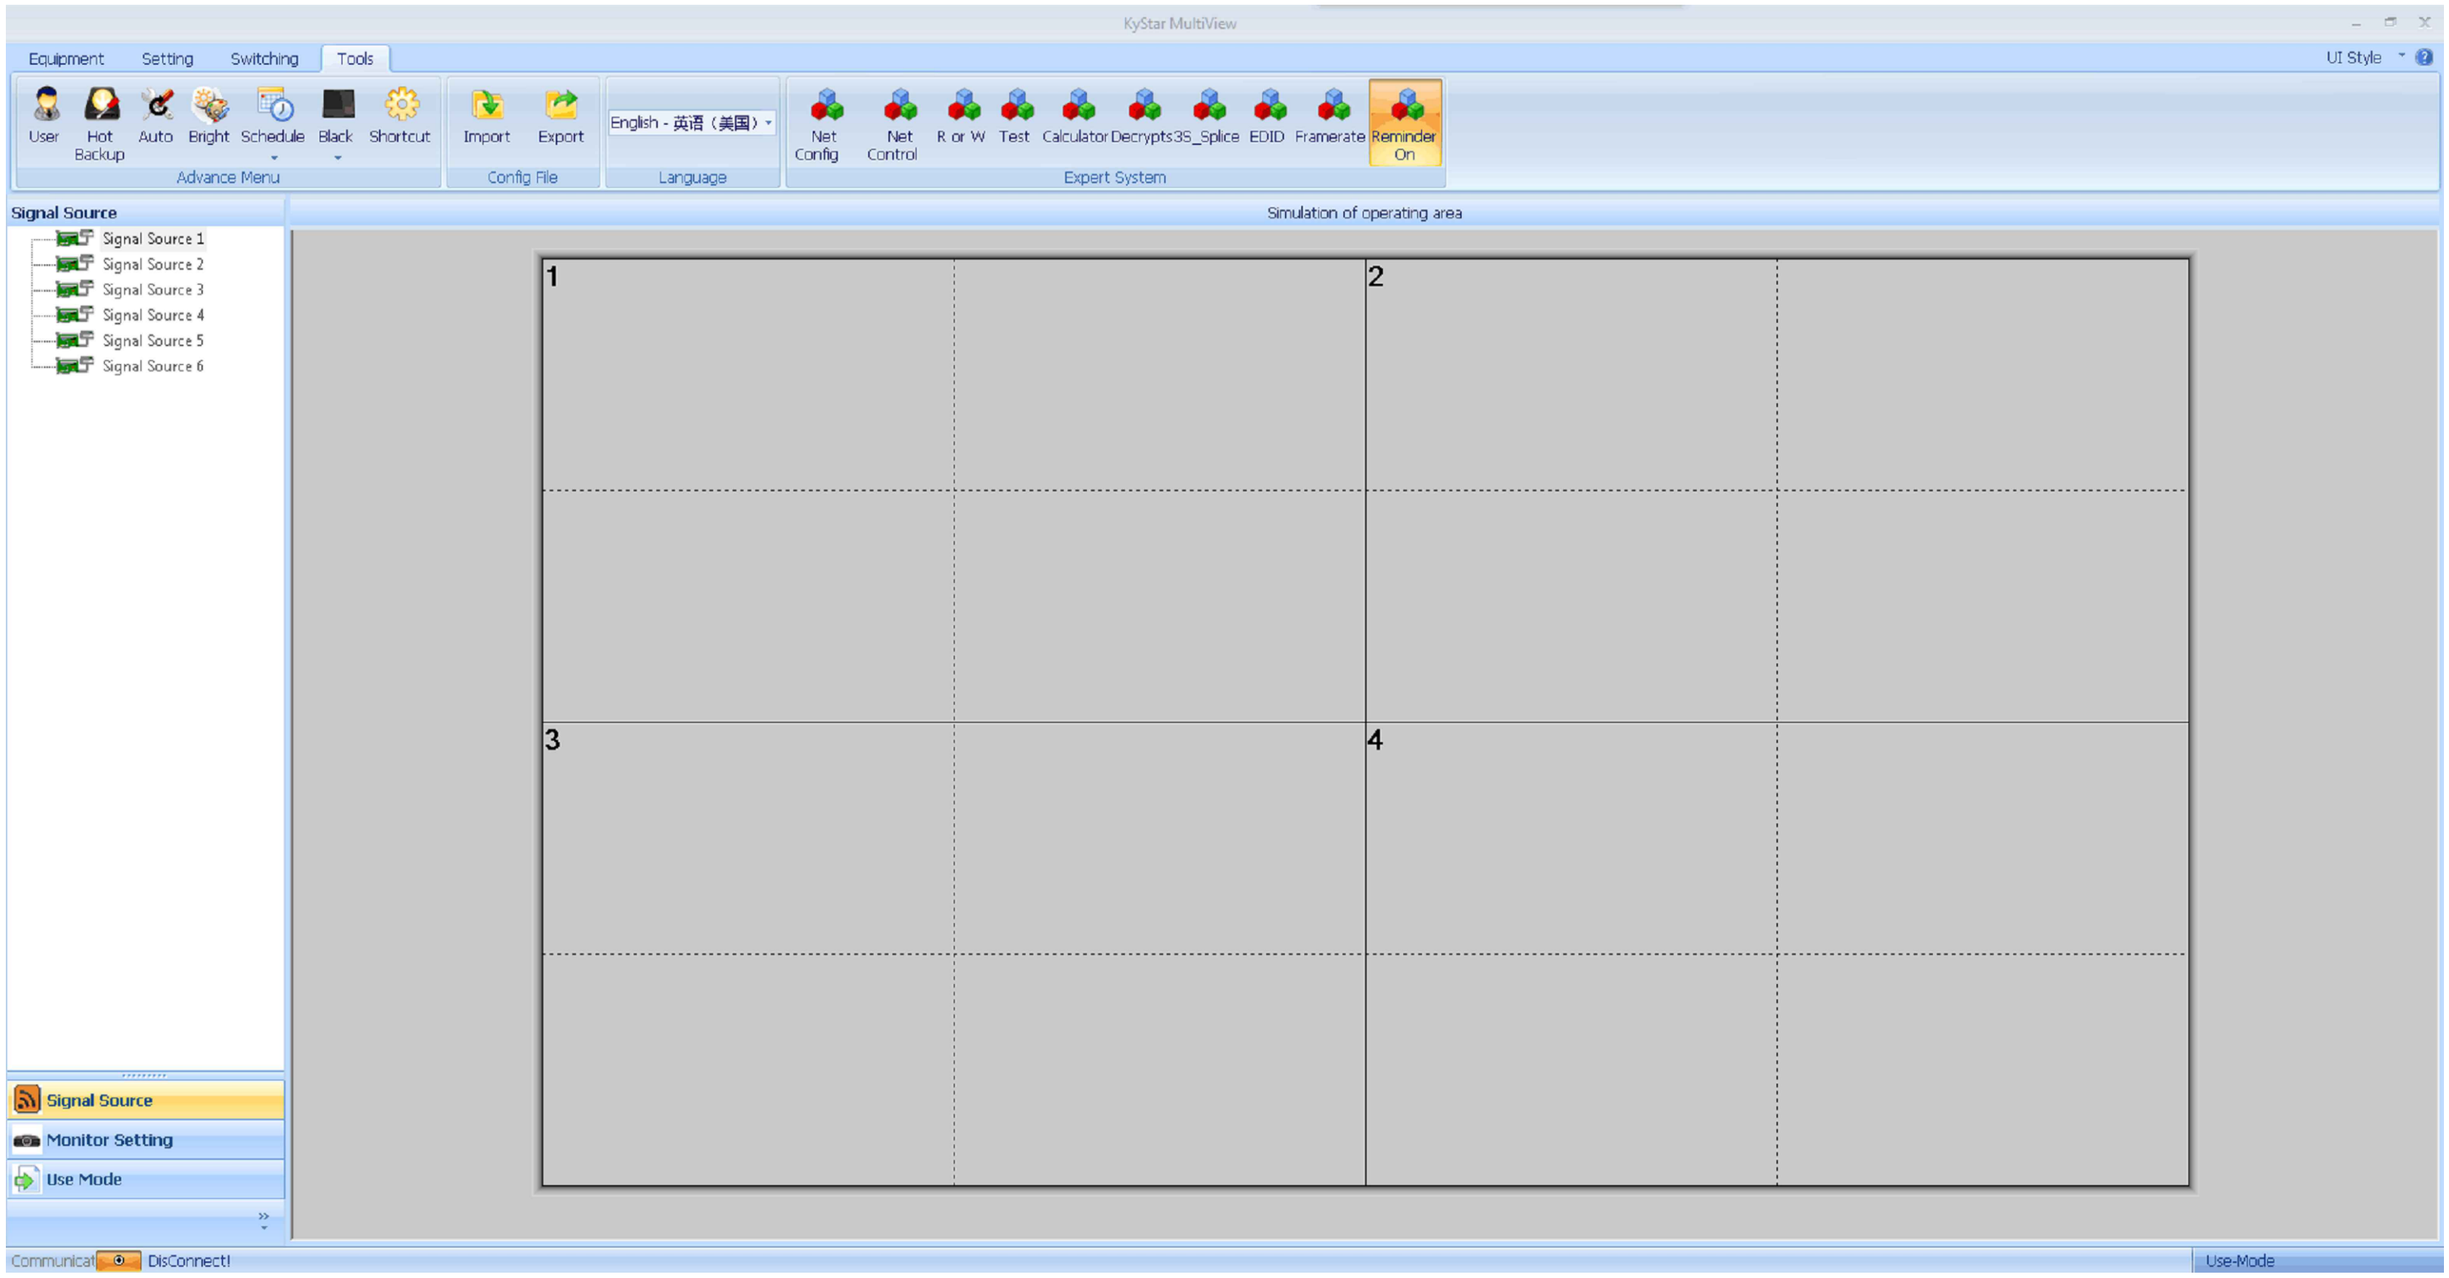

△English interface

Kystar Software setting

Connect the software and Equipment well.

Click Connect ①

② in AdapterName: Local connectivity

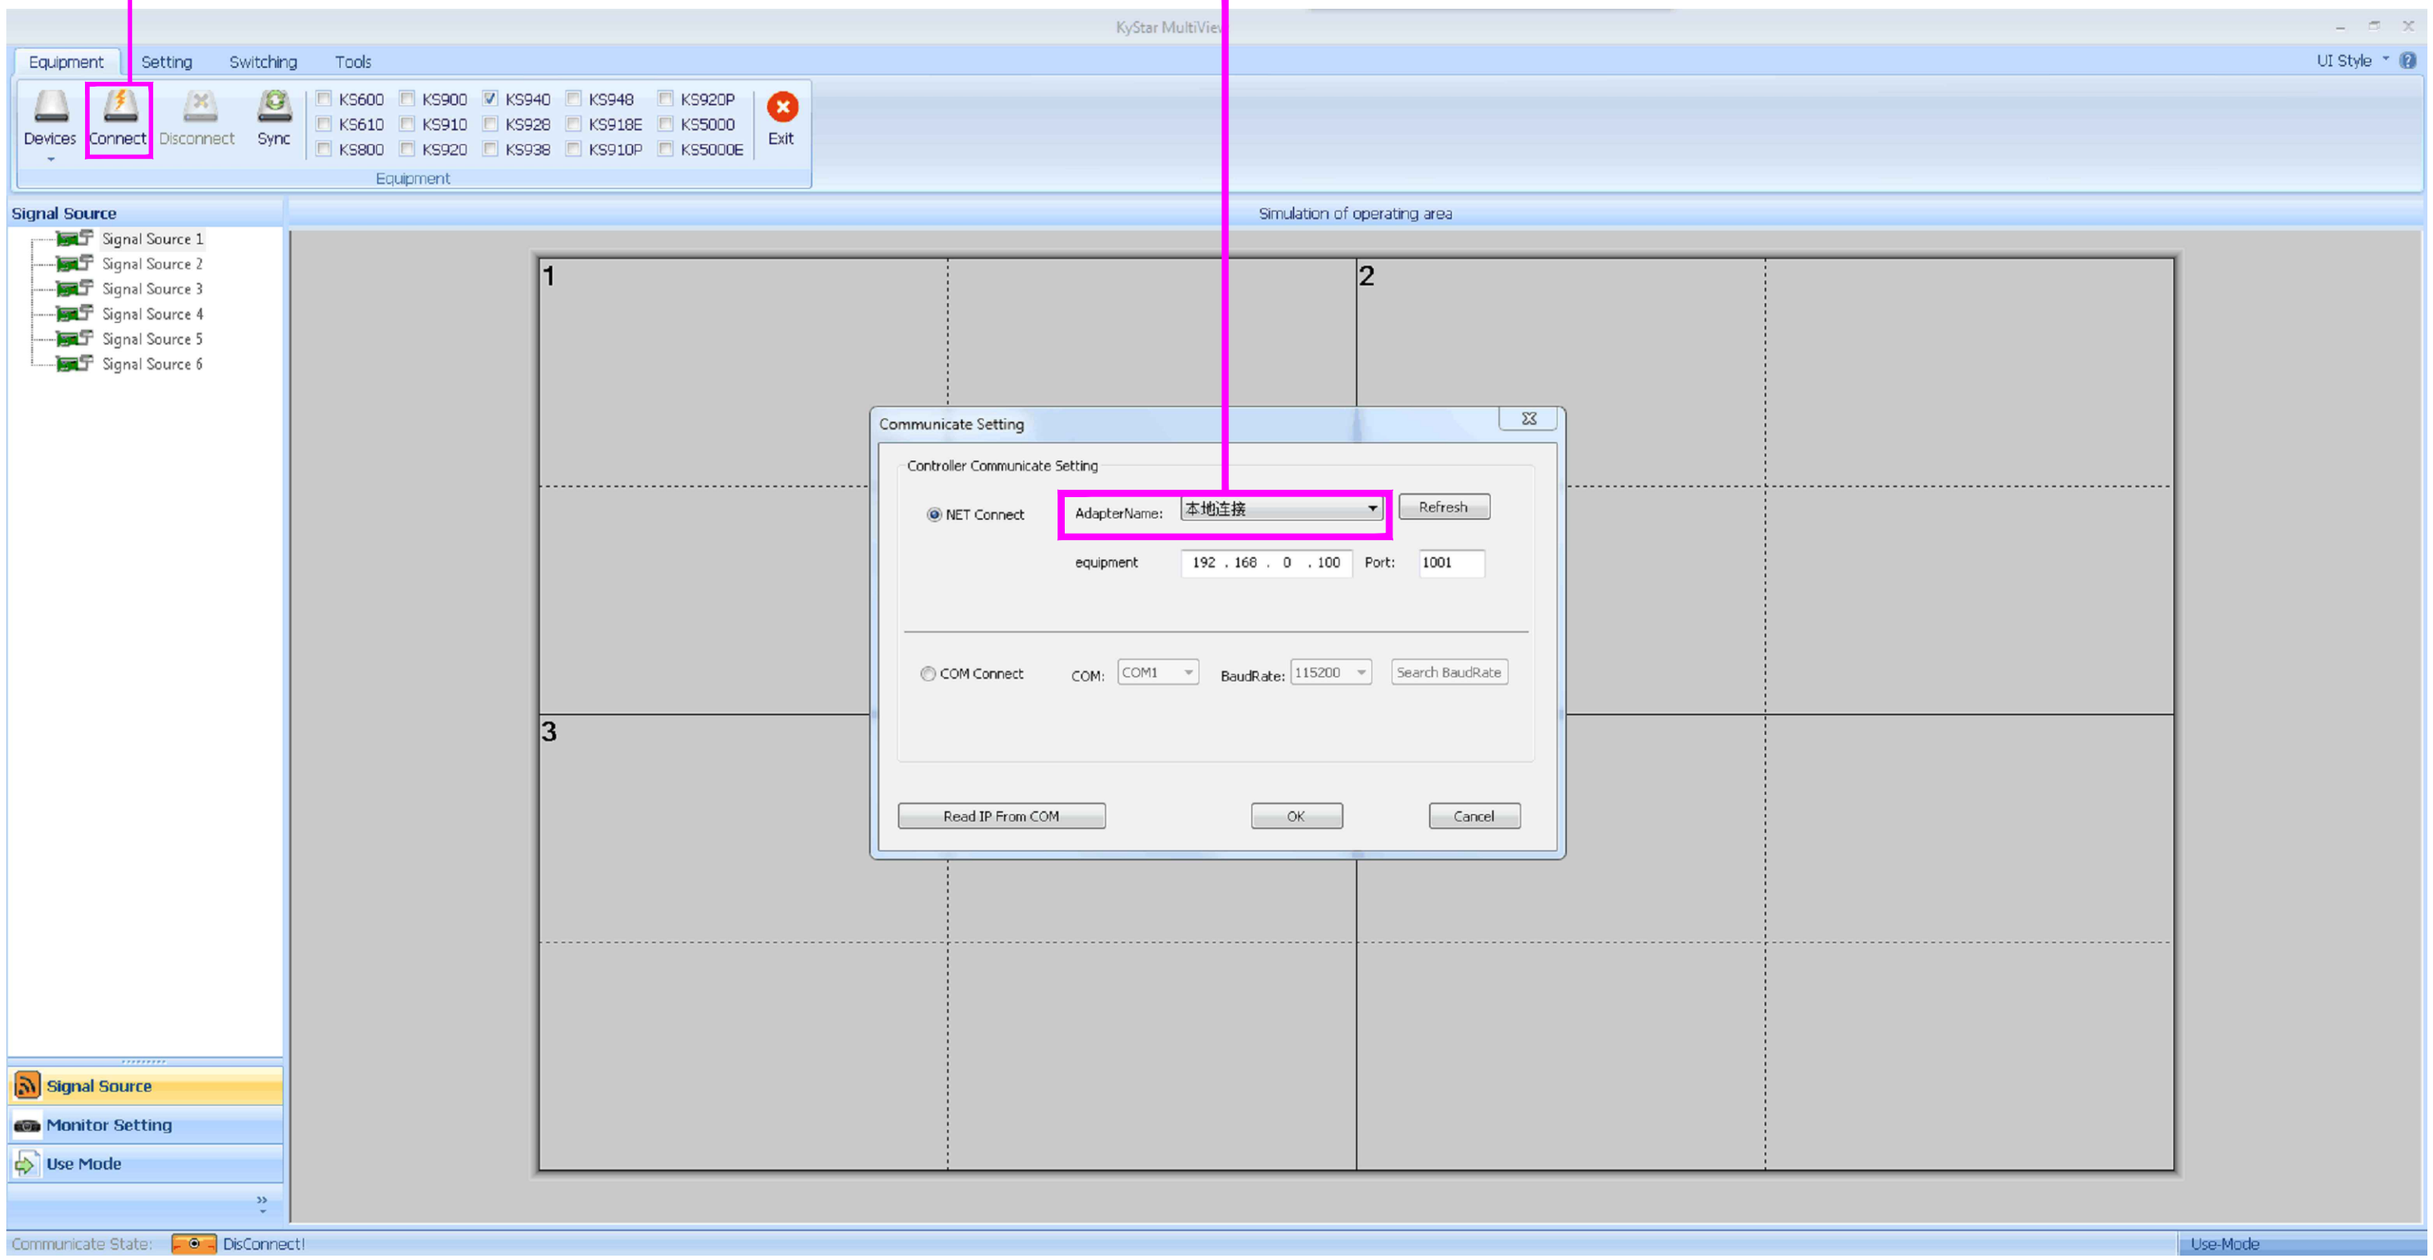

—Kystar Software setting

Connect the software and Equipment well.

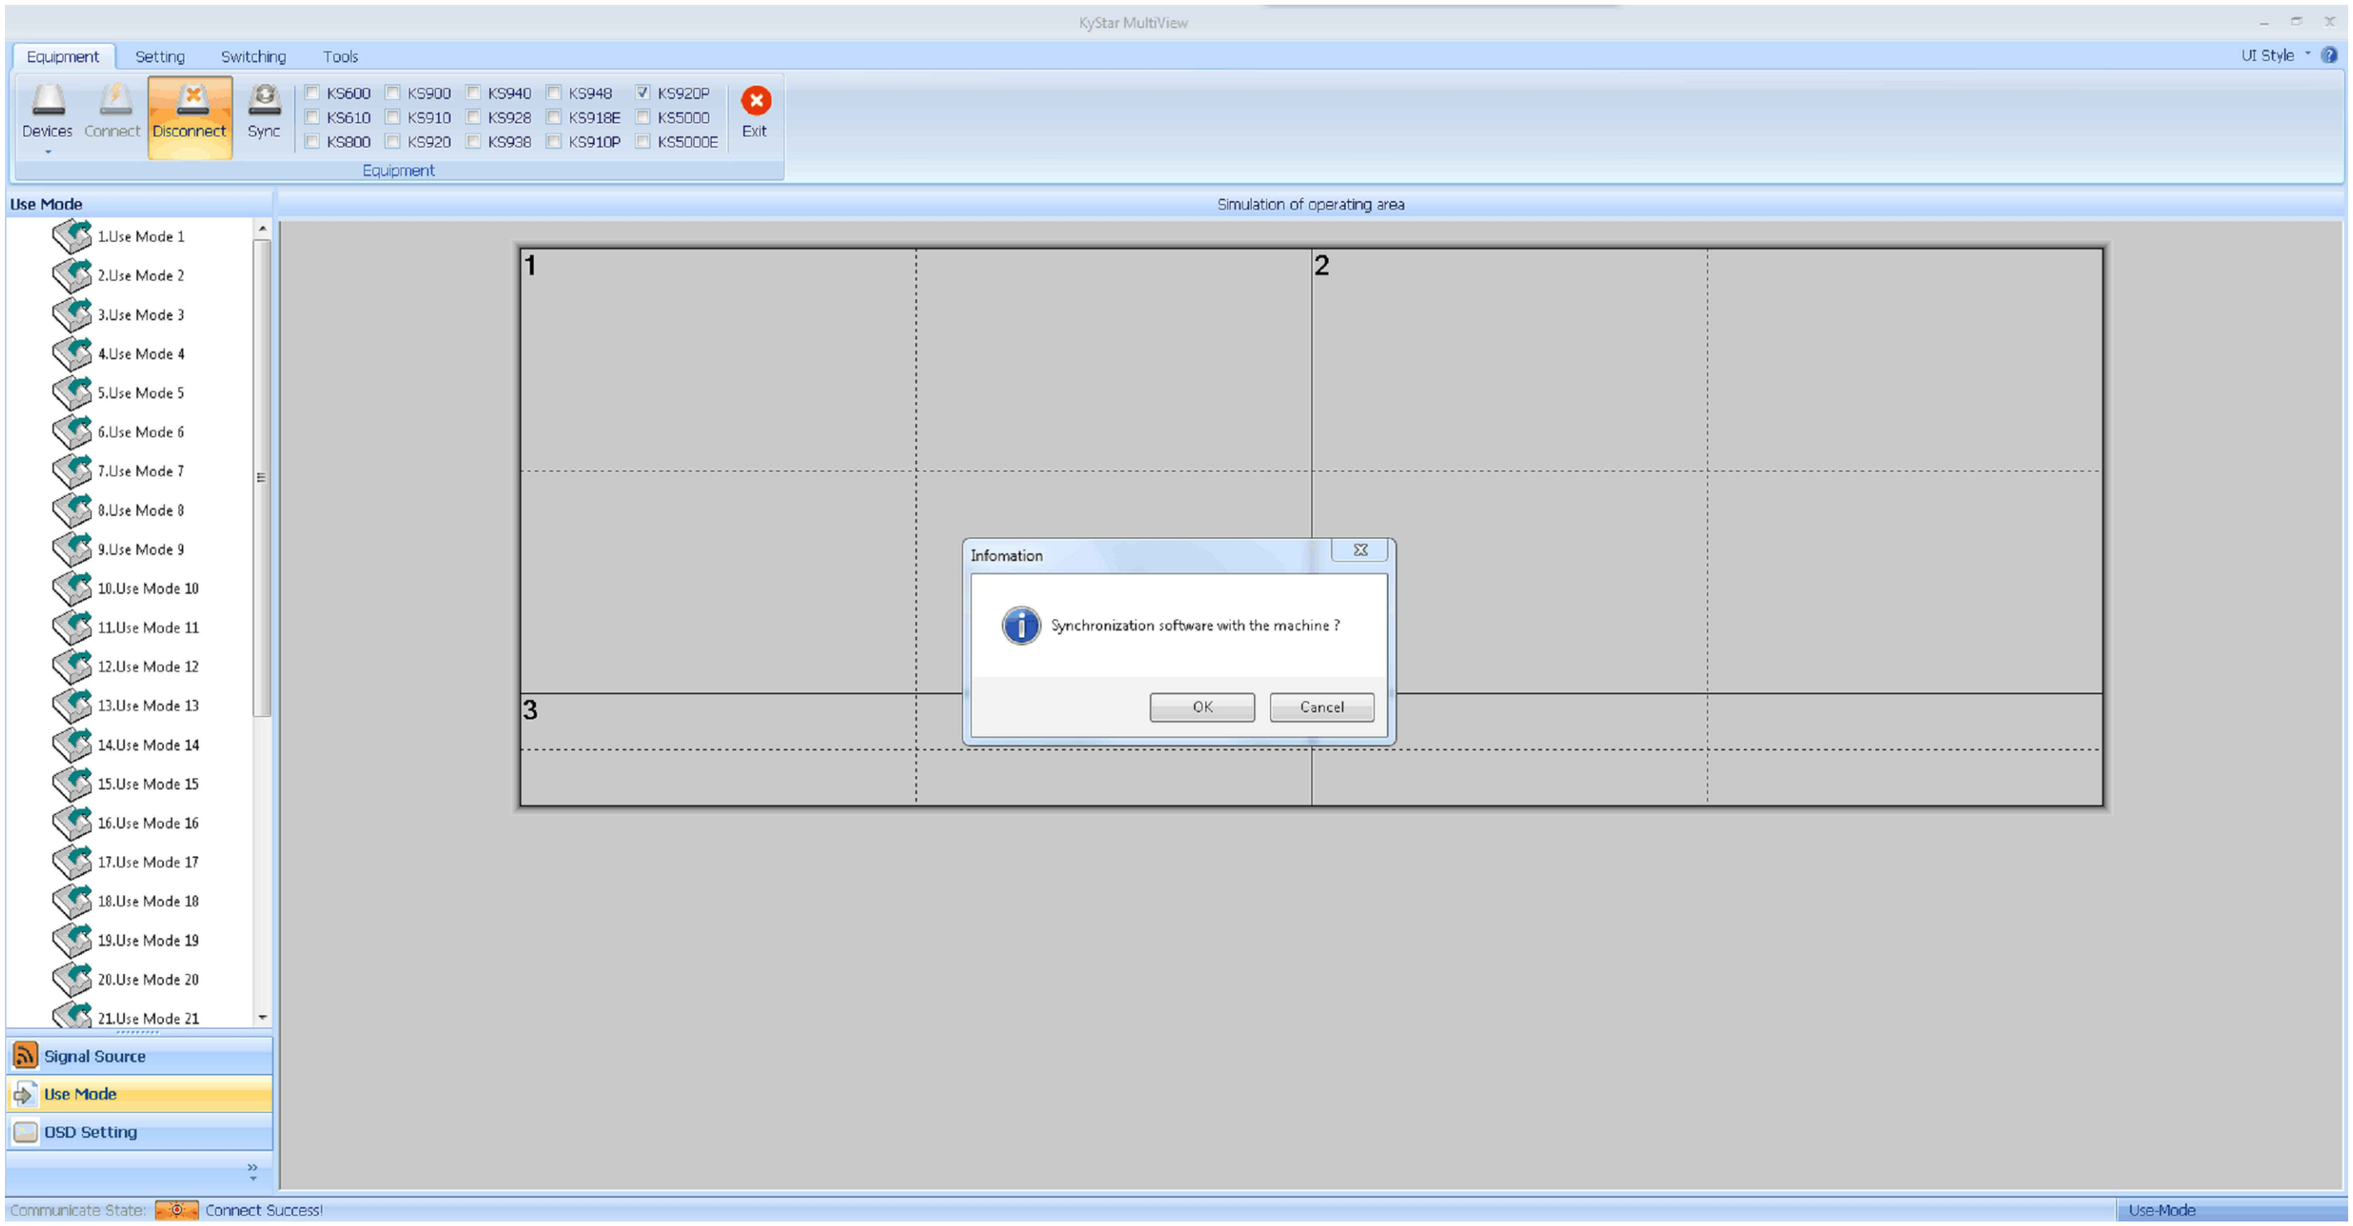

△ connection is fine

Click OK

—Kystar Software setting

Connect the software and Equipment well.

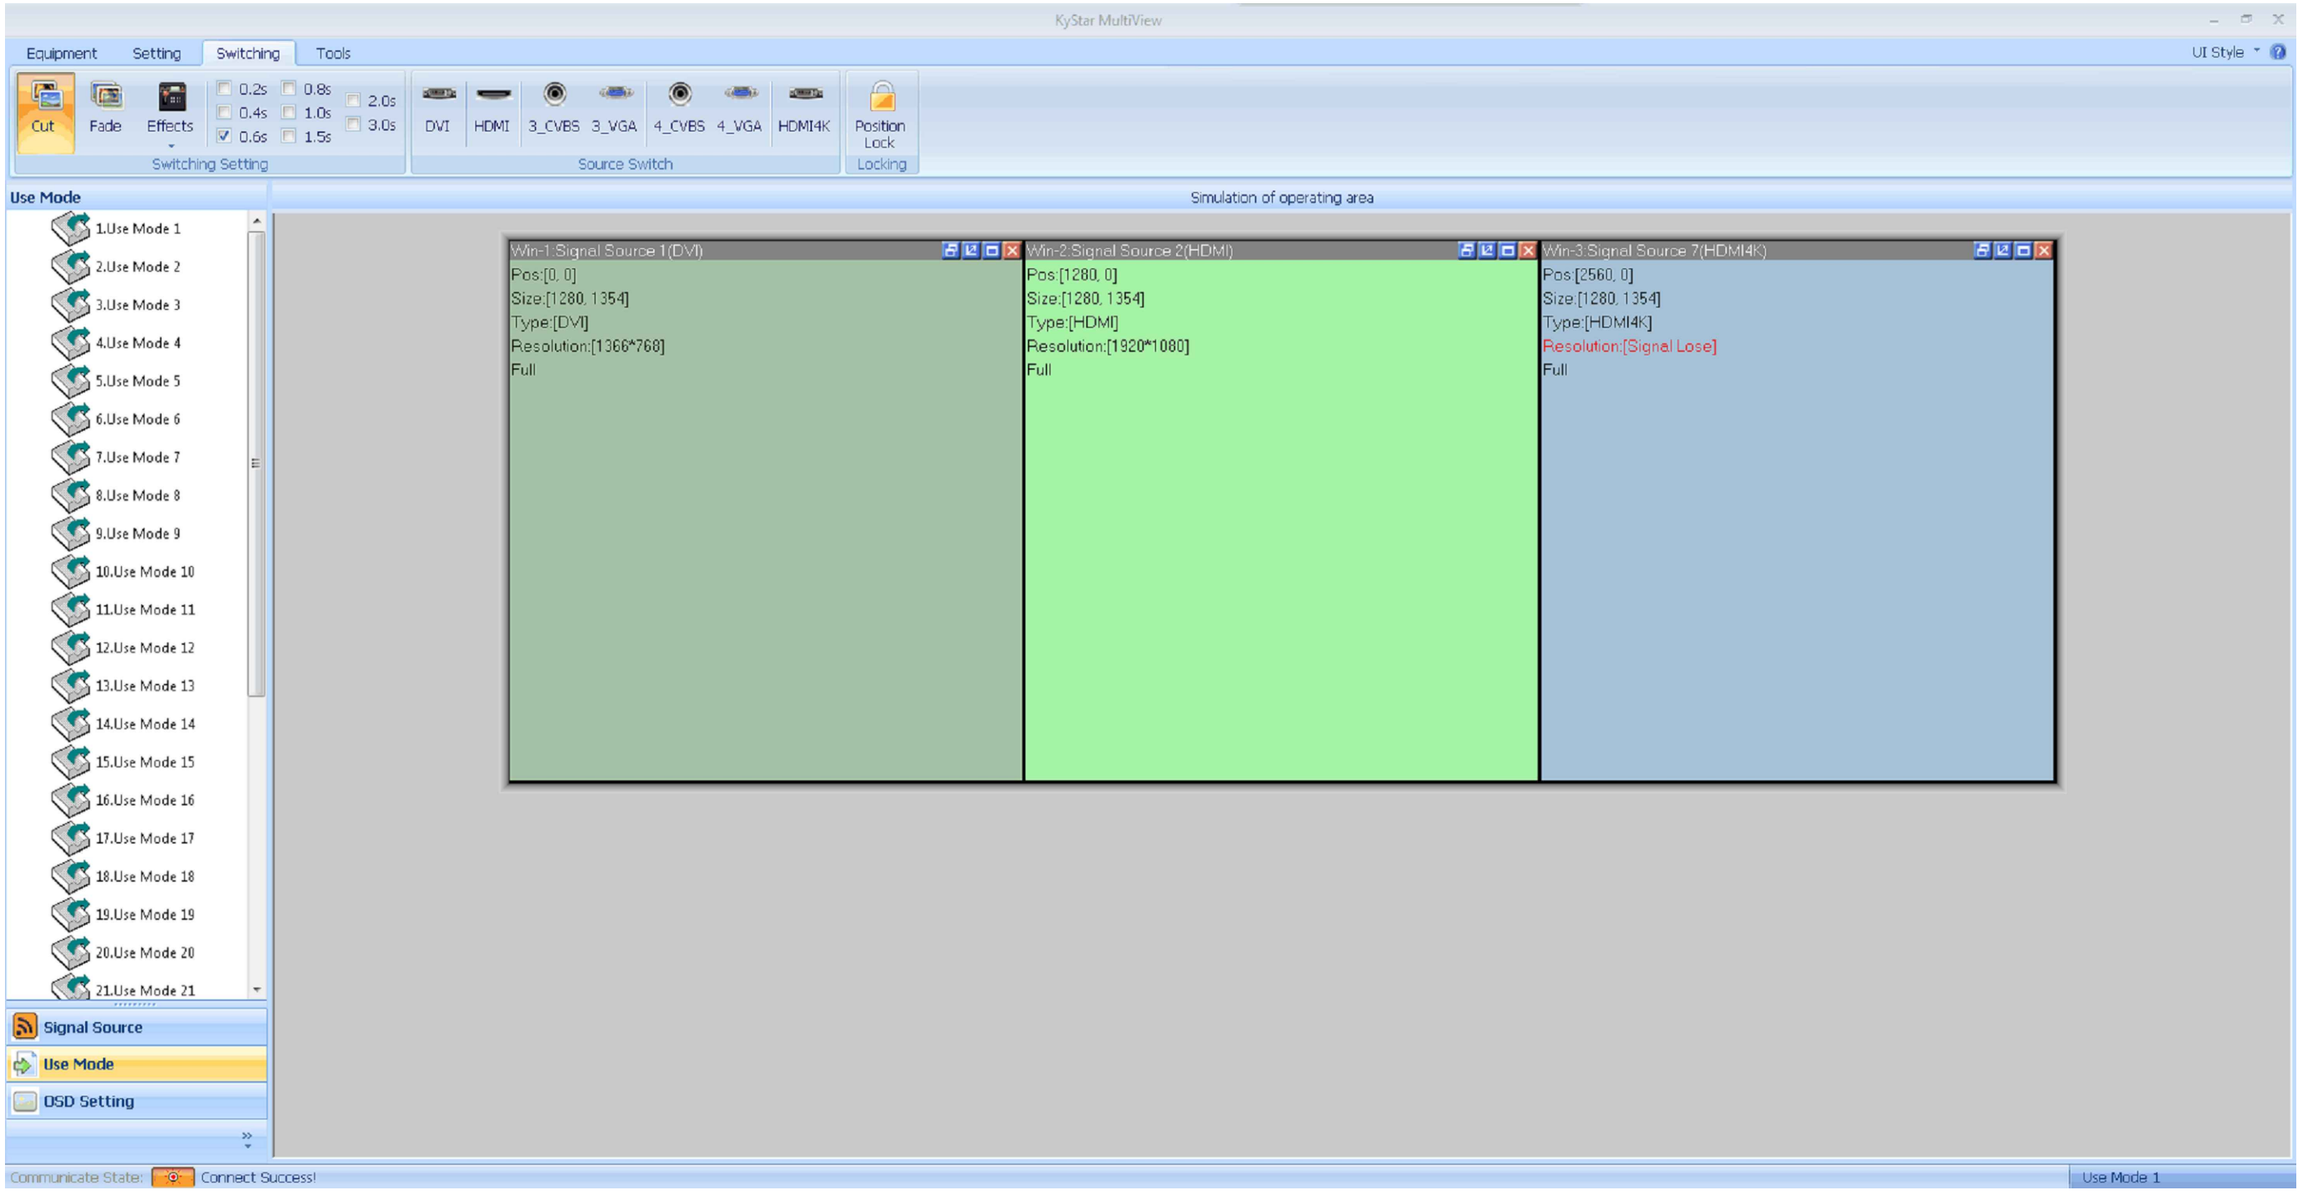

△ connection is fine

Kystar Software setting

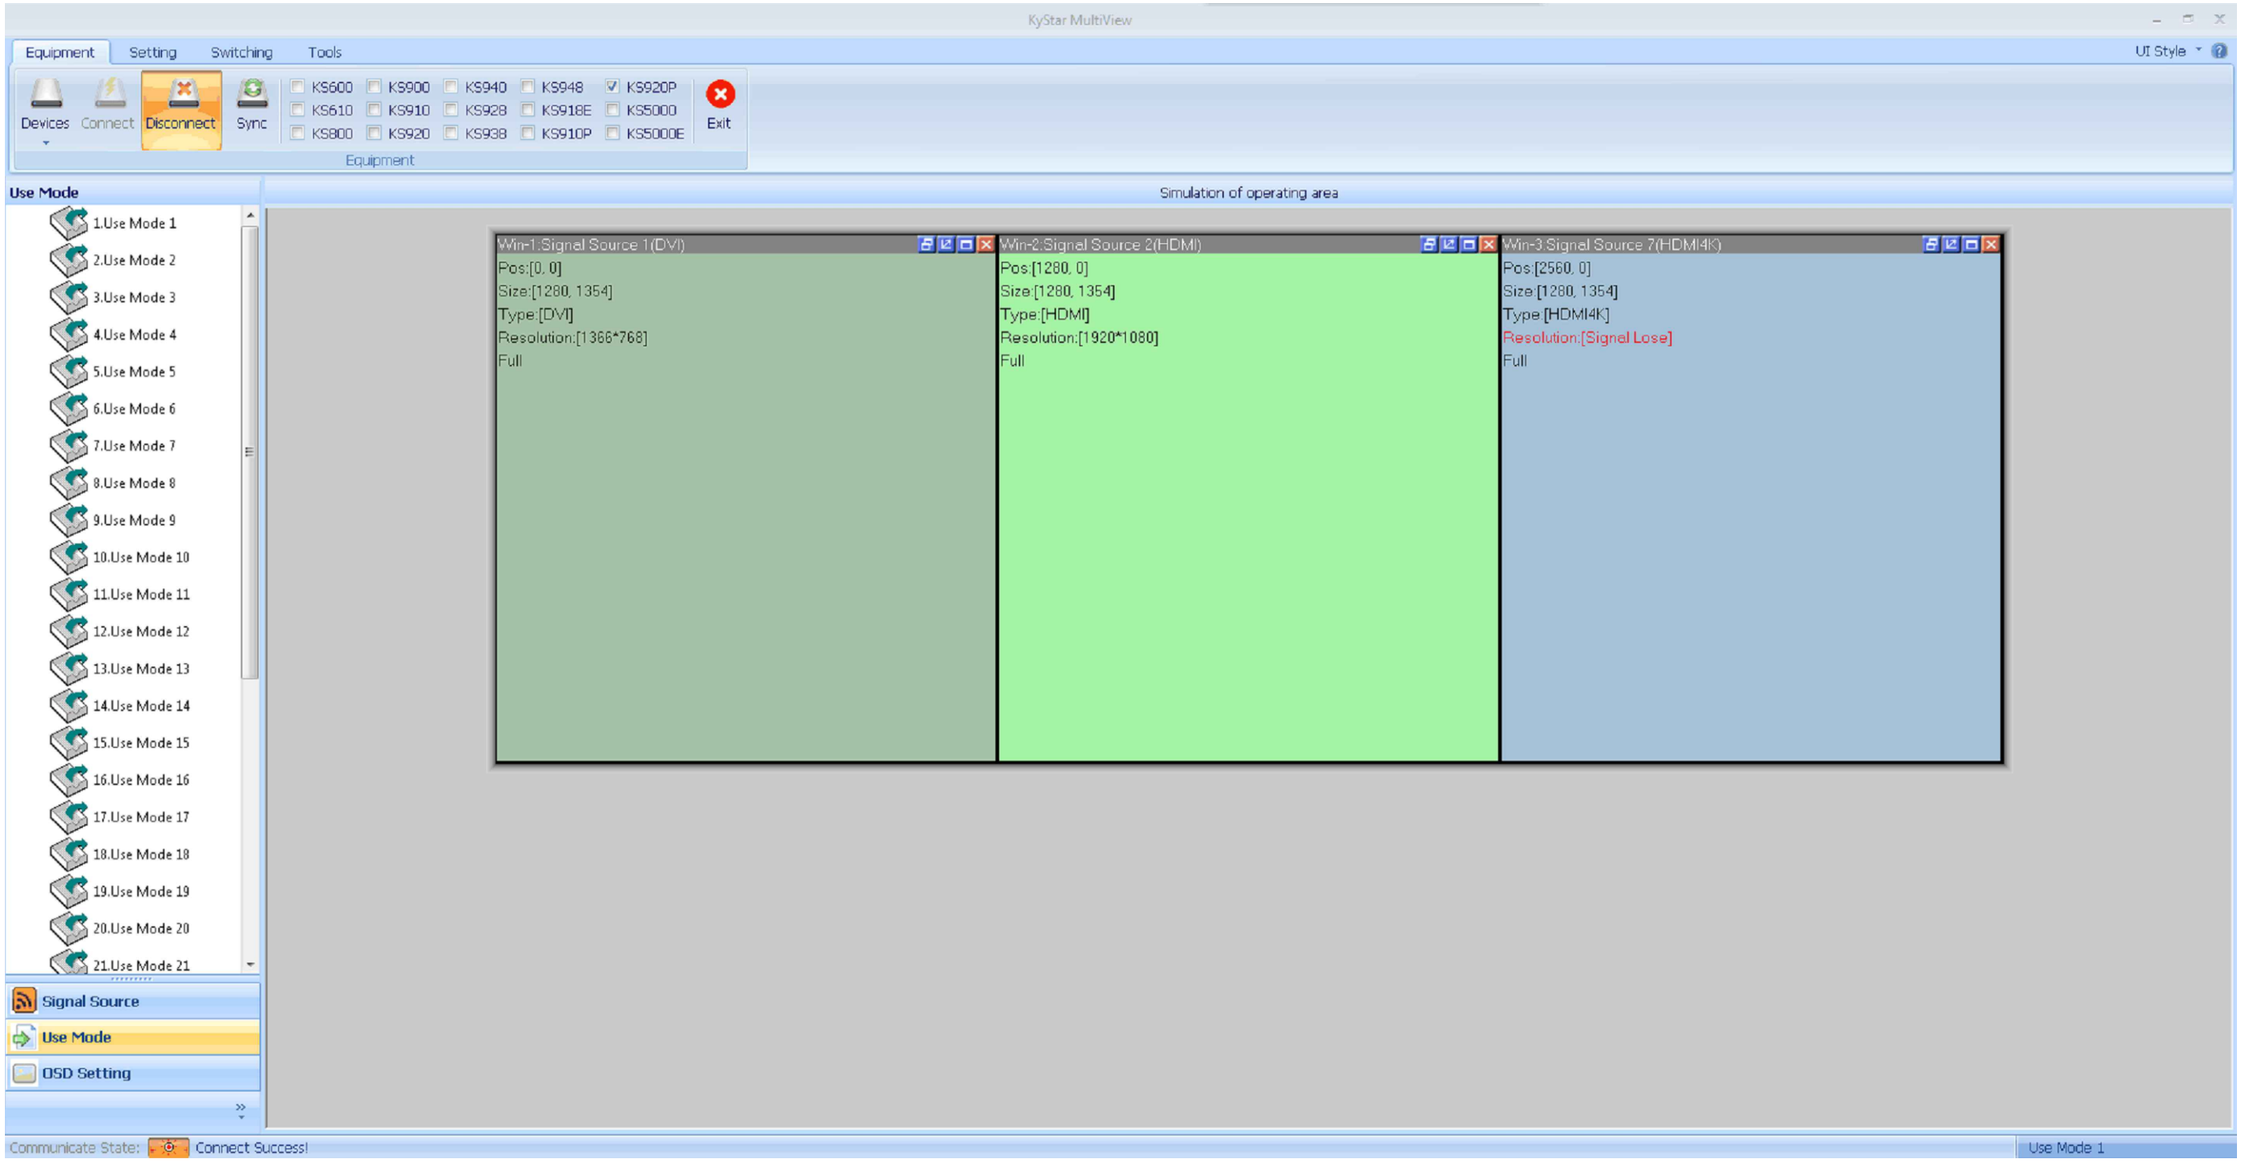

△ Equipment identification

Kystar Software setting

Screen config setting

Split type

Screen config

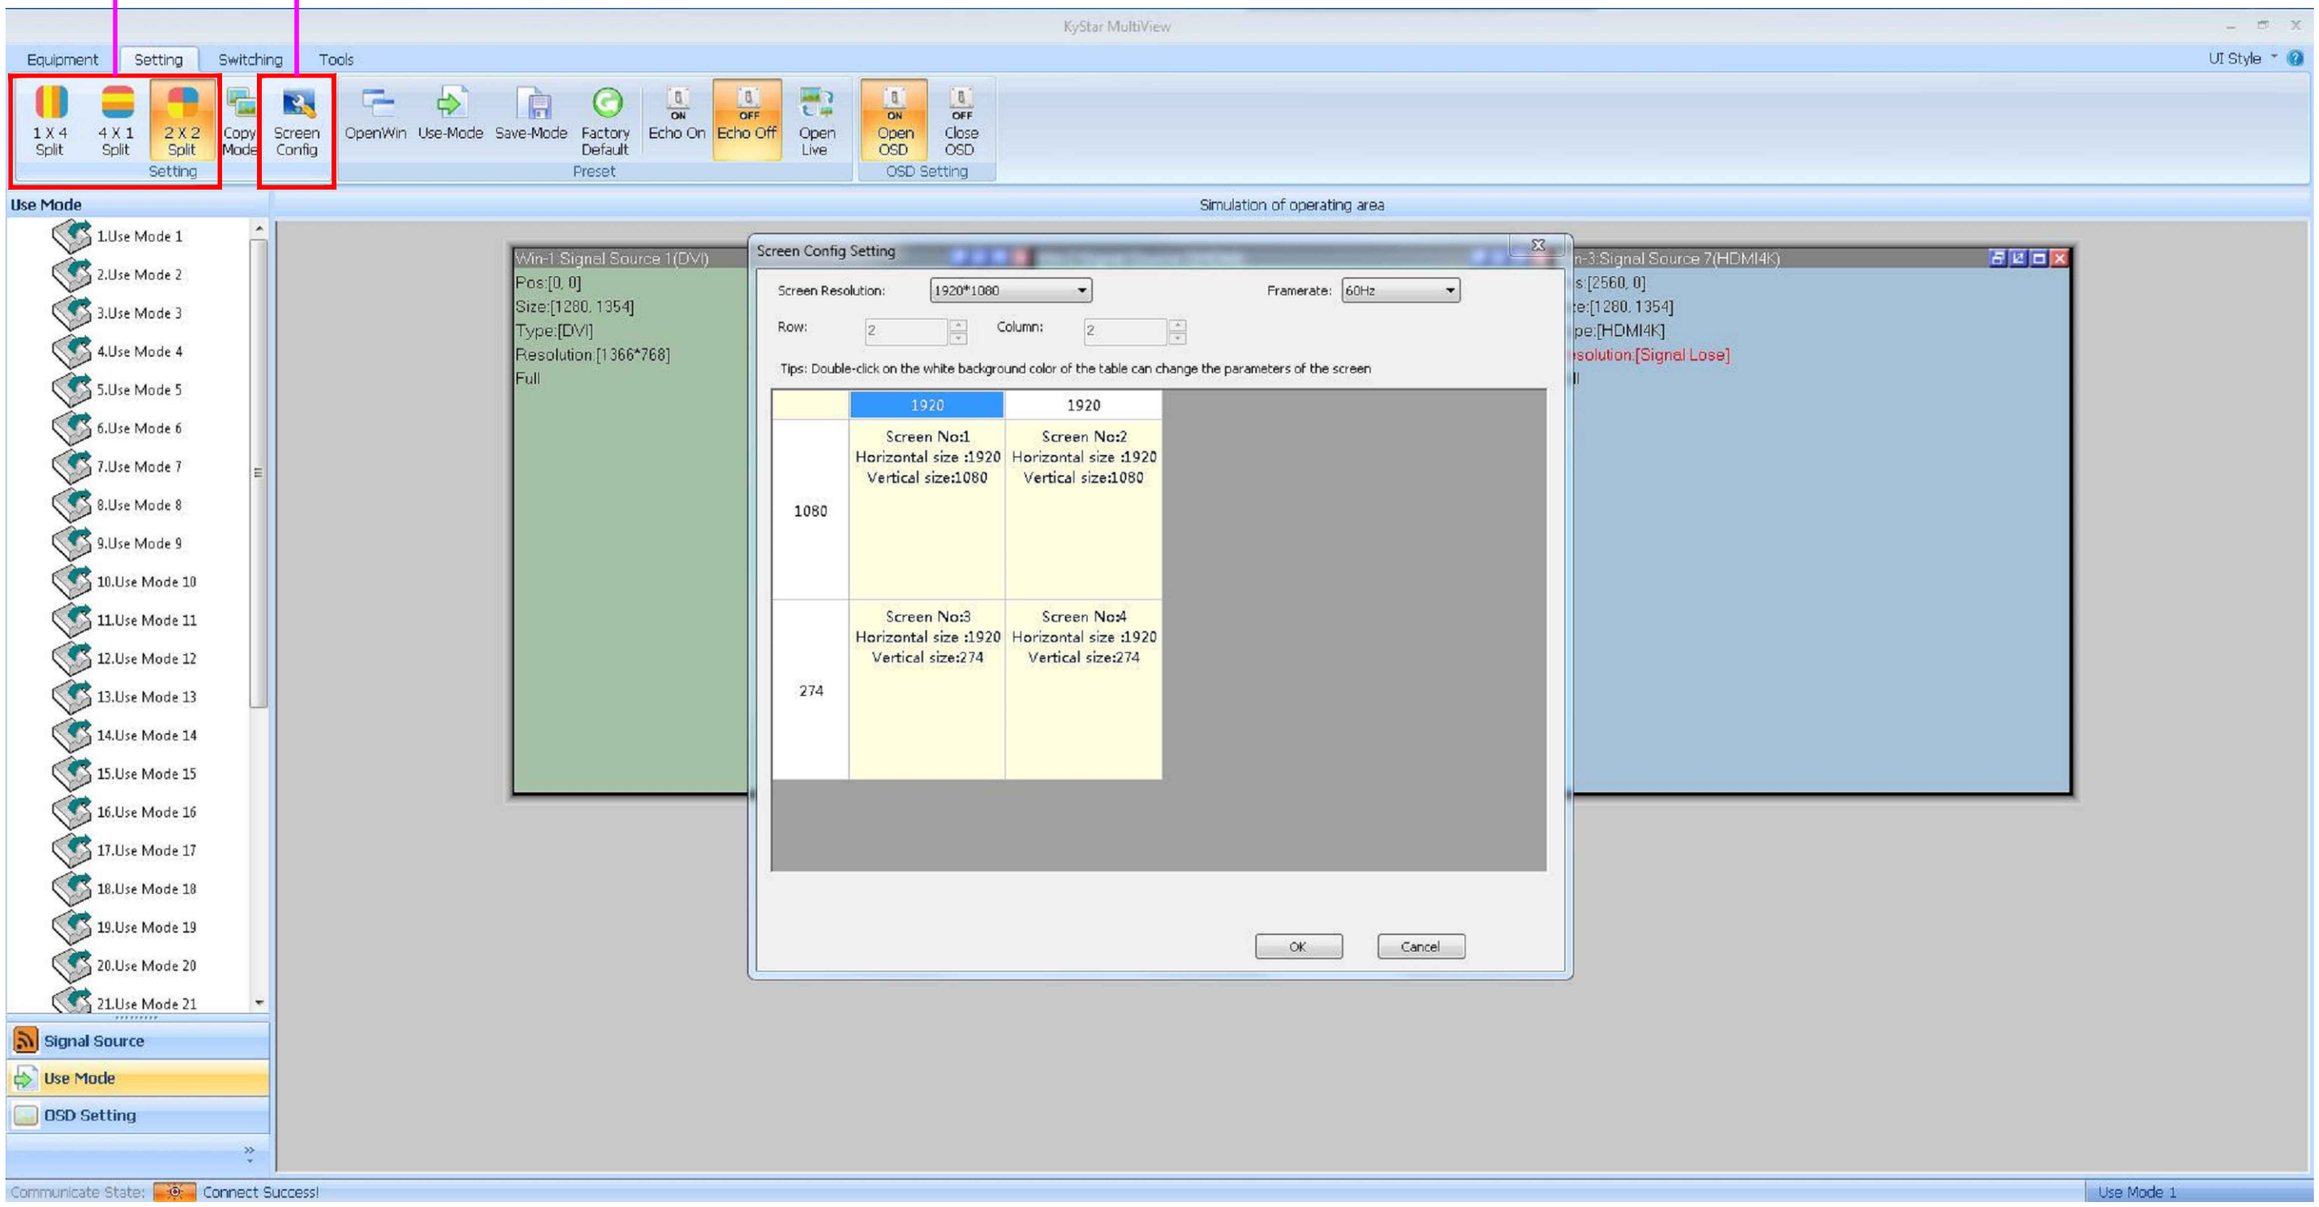

—Kystar Software setting

Screen resolution must be same

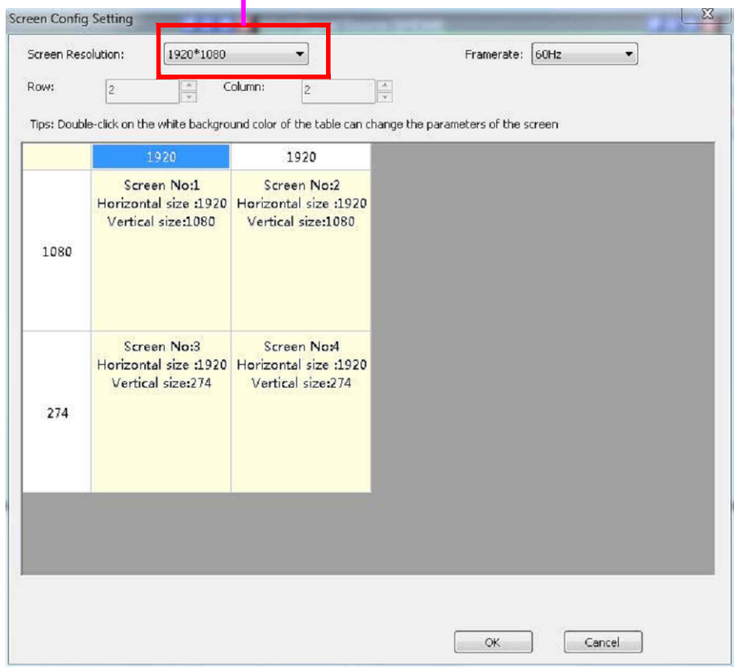

△Screen config setting

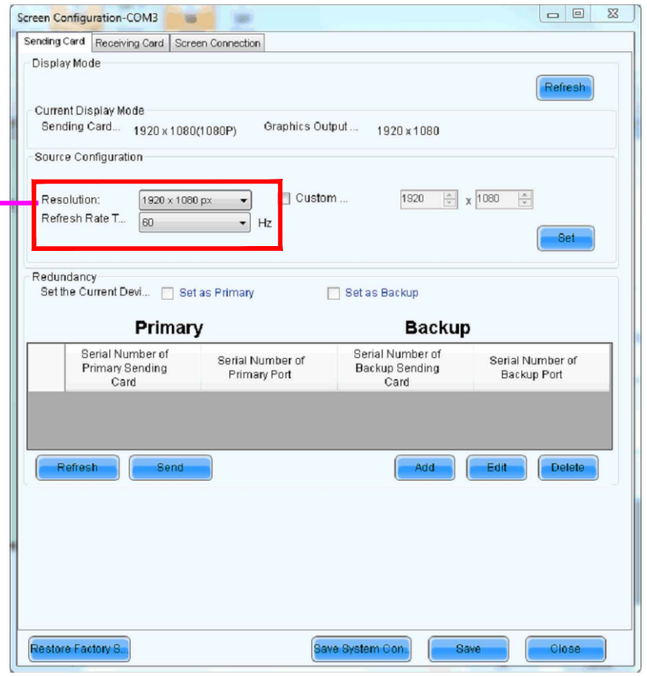

△Screen config setting in NovaStar

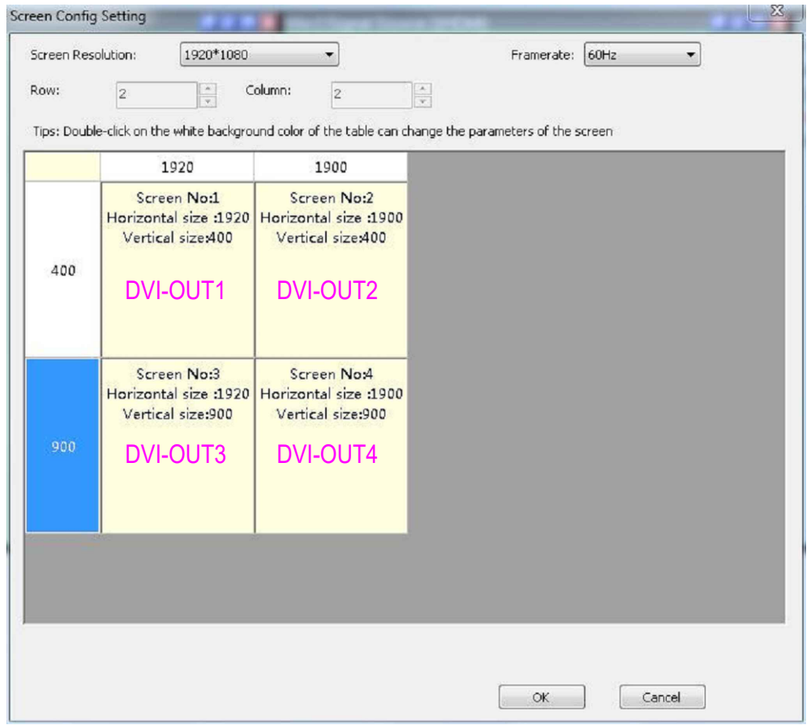

For example :LED screen Resolution: 3820*1300=4,966,000 pixels

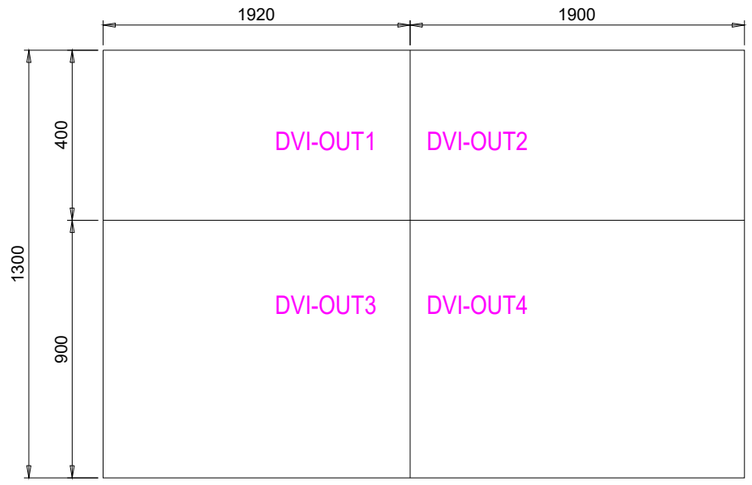

LED screen see in the front

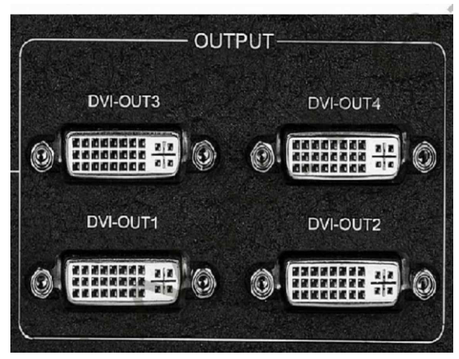

△Set single DVI output width and height (DVI OUT1, DVI OUT2, DVI OUT3, DVI OUT4)

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

— Kystar Software setting

Widows size and position.

Add window

Use save mode

Save Mode

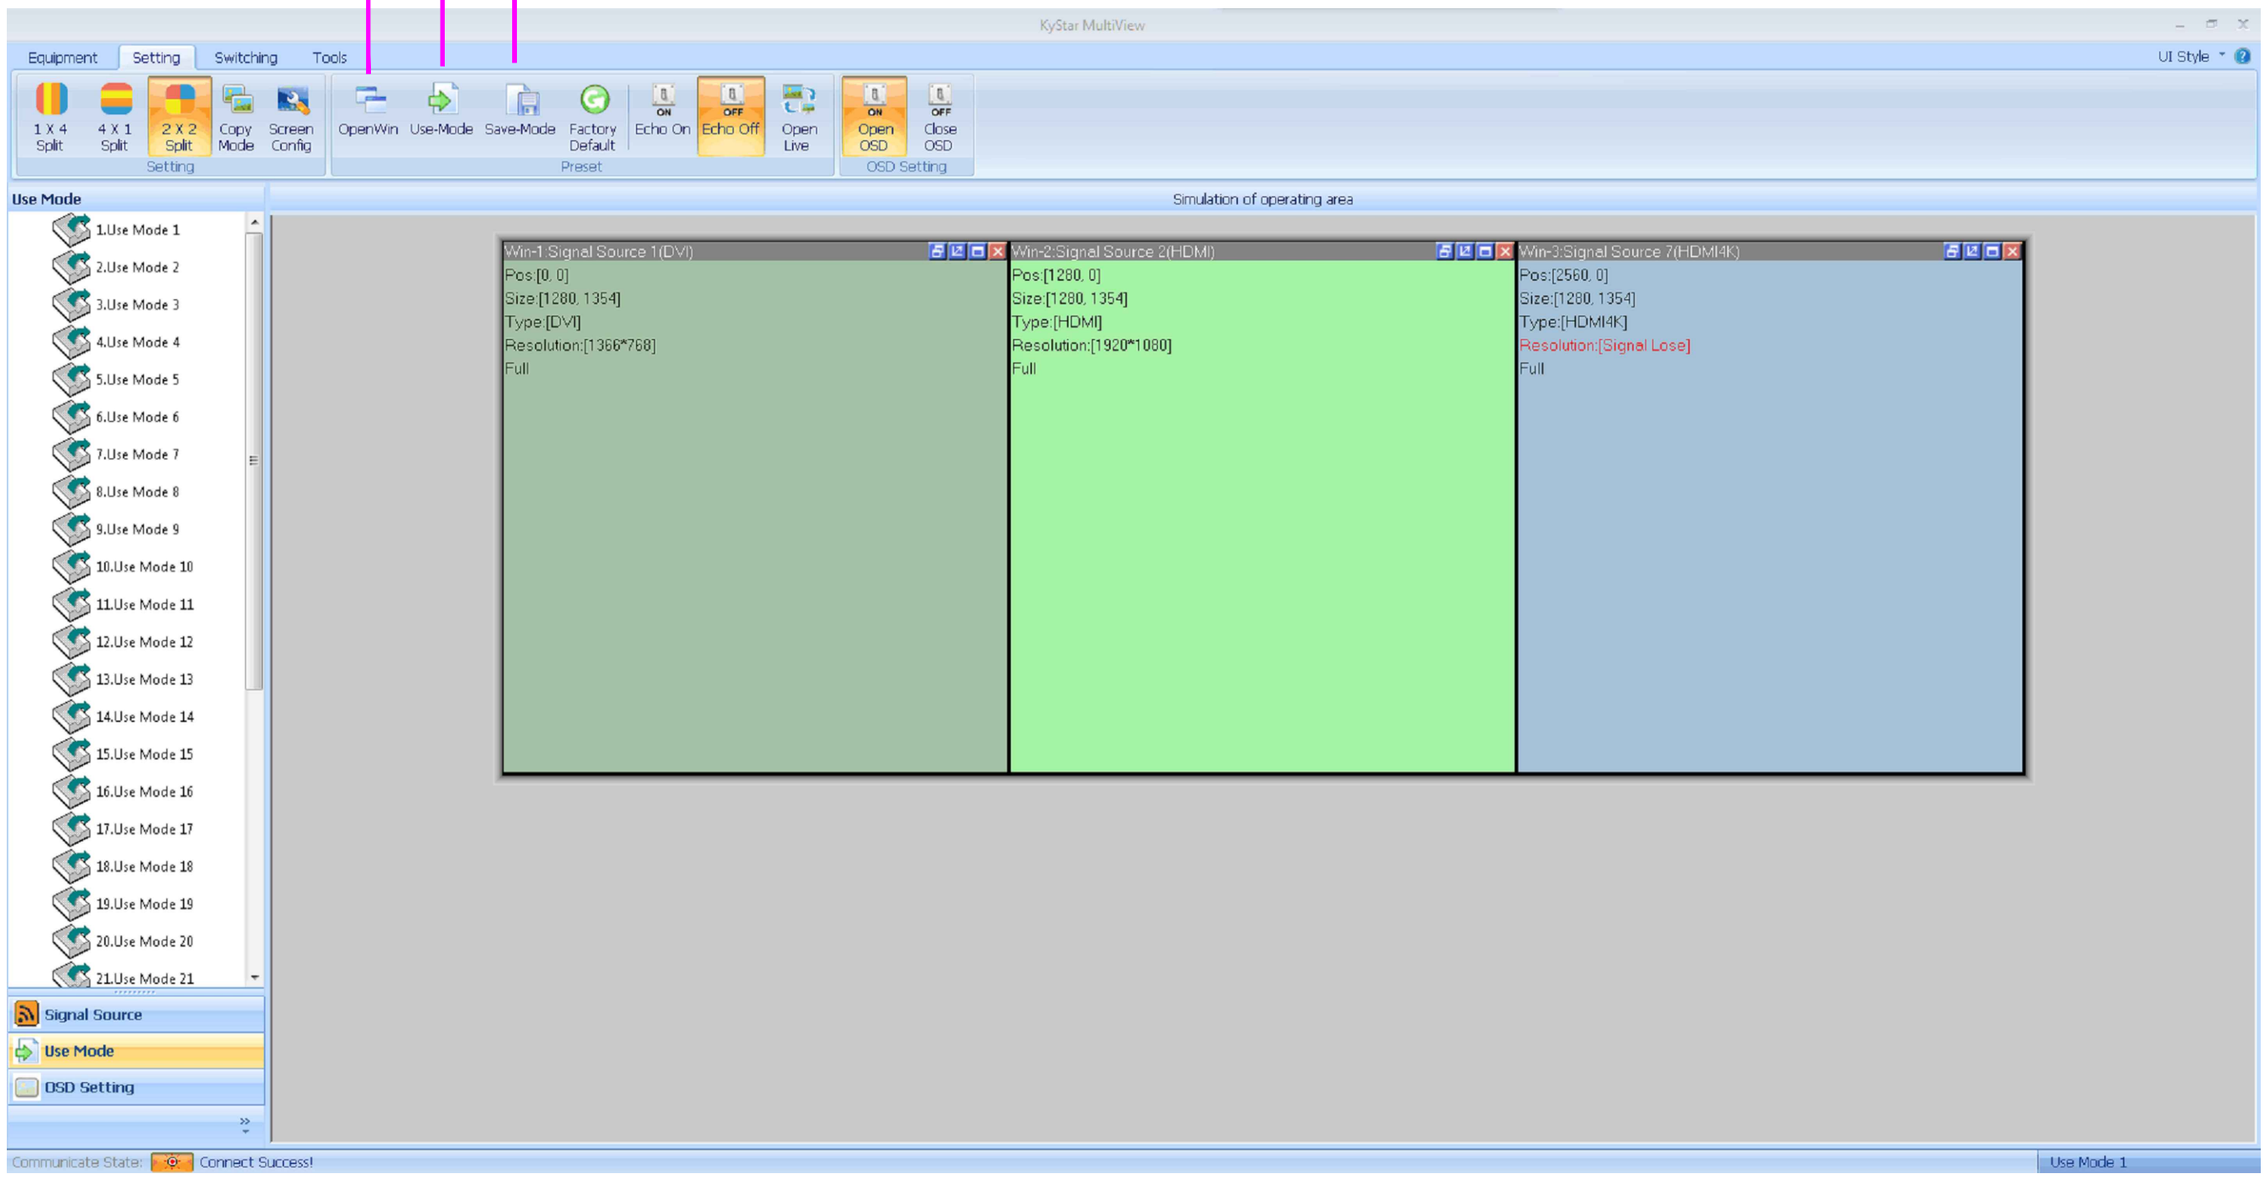

△ Change windows position by Mouse

Kystar Software setting

Widows size and position.

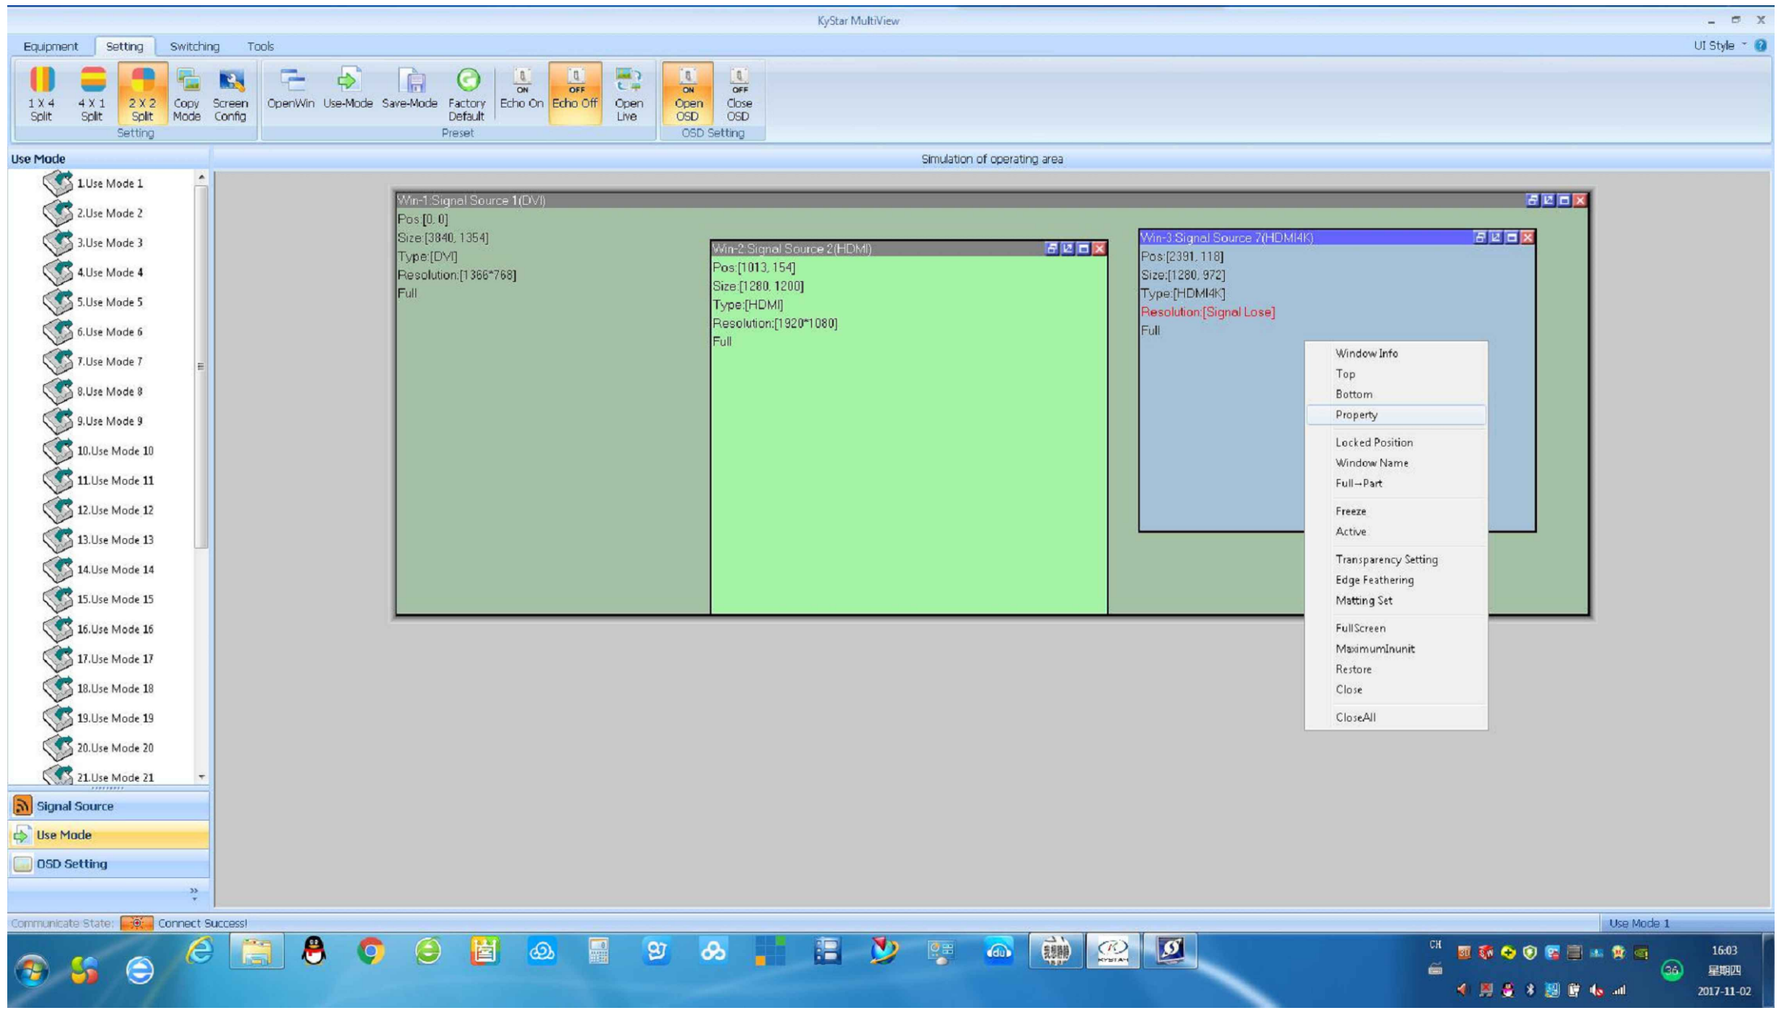

Scaler		
Window 1	H POS	0
window 2	V POS	0
window 3	H SIZE	1280
	V SIZE	1354
	x1 x10 x100	
Select window Click OK to next	Press FINGER select	

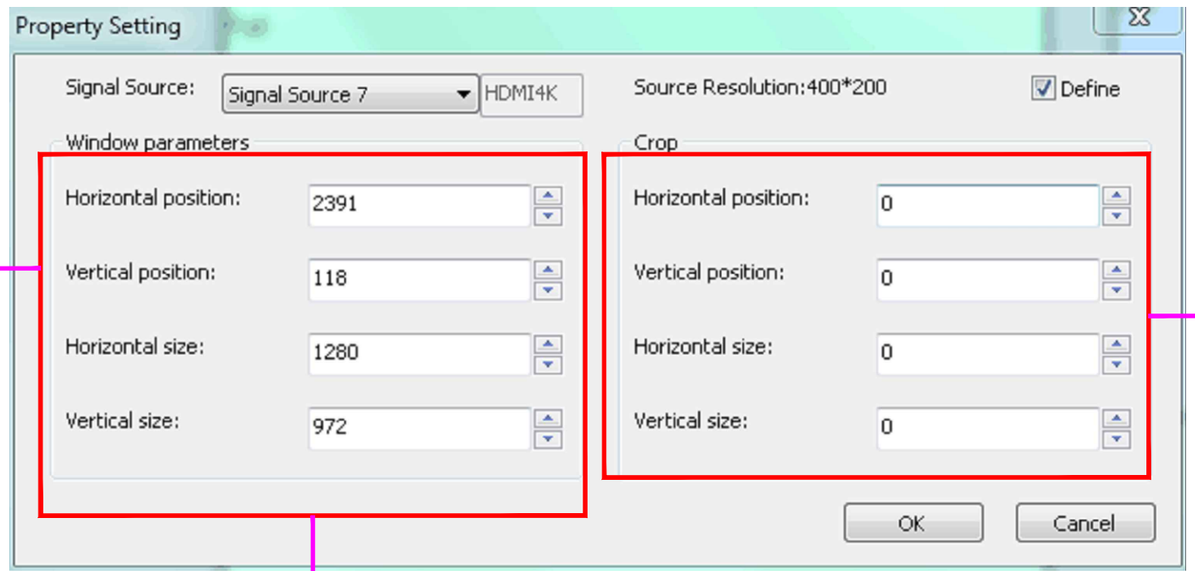

Part display: Copy the real resolution from signal source.

ZOOM		
Window 1	H POS	0
window 2	V POS	0
window 3	H SIZE	1280
	V SIZE	1354
	x1 x10 x100	
Select window Click OK to next	Press FINGER select	

Widows size and position.

△ Right Click to place the window precisely.

ENBON OPTOELECTRONICS LTD COPYRIGHT info@mail.eb-leddisplay.com

Kystar Software setting

Switch signal

